



 
AK2000C Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EY Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (Digital or optical) By HyperLink	Camera Version	WEB Version Info.	Remark	
Sony	α9	Wi-Fi	√	√	×	√	×	√	×	×	√	Ver. 6.00	sony_v104.bin		
	α7 III (A7M3)	Wi-Fi	√	√	×	√	×	√	×	×	√		sony_v104.bin		
	α7R III	Wi-Fi	√	√	×	√	√	√	×	×	×	Ver. 3.01	sony_v104.bin		
	α7 II (A7M2)	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 4.00	sony_v104.bin		
	α7S II	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 2.00	sony_v104.bin		
	α7R II	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 4.00	sony_v104.bin		
	A7S	Wi-Fi	√	√	×	×	√	×	×	×	×		sony_v104.bin		
	A7r	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 2.00	sony_v104.bin		
	α7	Wi-Fi	√	×	×	×	√	×	×	×	×	√		sony_v104.bin	
	RX100 IV (RX100M4)	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.0.0	sony_v104.bin		
	RX100 V (RX100M5)	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 1.0.2	sony_v104.bin		
	RX100 VI (RX100M6)	Wi-Fi	√	√	×	×	√	√	×	×	√		sony_v104.bin		
	α5100	Wi-Fi	√	√	×	×	√	×	×	×	√		sony_v104.bin		
	α6000	Wi-Fi	√	×	×	×	√	×	×	×	√		sony_v104.bin		
	α6500	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin		
α6400	Wi-Fi	√	√	×	×	√	√	×	×	√	Ver. 1.00	sony_v104.bin			
α6300	Wi-Fi	√	√	×	×	√	√	×	×	√	Ver. 2.00	sony_v104.bin			
α6100	Wi-Fi	√	√	×	×	√	√	×	×	√	Ver. 1.00	sony_v106.bin			

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EY Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (Digital or optical) By HyperLink	Camera Version	WEB Version Info.	Remark
Canon	EOS M50	Wi-Fi	√	√	√	×	×	×	×	×	×	Ver. 1.0.0	canon_v104.bin	
	EOS R	Wi-Fi	√	√	√	×	√	×	×	×	×	Ver. 1.0.0	canon_v104.bin	
	EOS M6 Mark II	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.0.0	canon_v105.bin	
	EOS RP	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.3.0	canon_v105.bin	
	EOS 200D II	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin	
	EOS 90D	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin	Connecting Step: Camera:Wi-Fi Setup—Camera Control API—Connecting
	PowerShot G7 X Mark III	Wi-Fi	√	√	√	×	×	×	×	×	×	Ver. 1.0.1	canon_v105.bin	
	EOS 80D	Wi-Fi	√	√	×	√	√	√	×	√	×		canon_v106.bin	
	EOS 6D Mark II	Wi-Fi	√	√	×	√	√	√	×	√	×	1.1.1	canon_v106.bin	Connecting Step: Camera:Wi-Fi Setup—Camera Control API—Connecting
	EOS 6D	Wi-Fi	√	×	×	√	√	√	×	×	×	1.1.8	canon_v106.bin	
	EOS 200D	Wi-Fi	√	√	√	√	√	√	×	×	×		canon_v106.bin	
	EOS 5D Mark IV	Wi-Fi	√	√	√	√	√	√	×	×	×		canon_v106.bin	
	EOS 70D	Wi-Fi	√	×	×	√	√	×	×	×	×	Ver. 1.1.1	canon_v106.bin	
	EOS 77D	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.2	canon_v106.bin	

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EY Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (Digital or optical) By HyperLink	Camera Version	WEB Version Info.	Remark	
Panasonic	DMC-GH4GK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.2.7	panasonic_v104.bin		
	DC-GF9XGK	Wi-Fi	√	√	√	√	√	√	×	√	√		panasonic_v104.bin		
	DC-GF98GK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.1.1	panasonic_v104.bin		
	DC-GF10XGK	Wi-Fi	√	√	√	√	√	√	×	√	×		panasonic_v104.bin		
	DC-GH5GK-K	Wi-Fi	√	√	√	√	√	√	√	×	√	×	Ver. 1.0.2	panasonic_v104.bin	
		Wi-Fi	√	√	√	√	√	√	√	×	√	×	Ver. 1.0.0	panasonic_v104.bin	
	DC-GX8GK-K	Wi-Fi	√	√	√	√	√	√	×	√	√		panasonic_v104.bin		
	DMC-GX85GK (M mode)	Wi-Fi	√	√	√	√	×	×	×	√	×	Ver.1.2	panasonic_v104.bin		
	DMC-GX85GK (S, A, P mode)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.1.2	panasonic_v104.bin		
	DC-GH5 (M, S, A, P mode)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.2.3	panasonic_v104.bin		

Notice:
 1. "√" Means Support this function, "×" Means Do not Support;
 2. HyperLink is a remote Control, not a standard accessory for AK2000C



AK2000C Camera Compatibility List (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EY Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (Digital or optical) By HyperLink	Camera Version	WEB Version Info.	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102	
	RX100 IV (RX100M4)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.30	HRB_V102	
	RX100M5A	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102	
	RX100 VI (RX100M6)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V102	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Support Digital Zoom. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	RX100 VII (RX100M7)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V102	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	ZV-E1	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HRB_V102	4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	DSC-WX500	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HRB_V102	
	DSC-HX90	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HRB_V102	
	DSC-RX10 III	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HRB_V102	
	DSC-RX10 IV	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102	
	ZV-E10	Type-C to Type-C (C02)	√	√	√	×	×	×	√	×	×	1.0	HRB_V107	1. Please set the [Ctrl w/ Smartphone] to be off. 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video; 5. After connecting the cable, be sure to power on the camera before the camera. 6. The camera icon on the gimbals screen lights up after a successful connection, and the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video mode from gimbals; when the camera is in video mode, the gimbals can only control recording video.
	α6100	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V102	
	α6300	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102	
	α6400	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V102	
	α6500	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102	
α6600	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102		
A7S	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.20	HRB_V102		
α7S II	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102		
A7R	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HRB_V102		
α7R II	Type-C to Multi	√	√	√	×	×	×	√	×	√	4.00	HRB_V102		
α7R III	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.01	HRB_V102		
α7R IV	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V107		
α7R MHA	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HRB_V102		
α7 II (A7M2)	Type-C to Multi	√	√	√	×	×	×	√	×	√	4.00	HRB_V102		
α7 III (A7M3)	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.10	HRB_V102		
α9	Type-C to Multi	√	√	√	×	×	×	√	×	√	6.00	HRB_V102		
α9 II	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.00	HRB_V102		
A7C	Type-C to Type-C (C02)	√	√	√	×	×	×	√	×	×	1.0	HRB_V106	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video; 6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.	
α1	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.01	HRB_V106	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Support Digital Zoom when equipped with a Rotating Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.	
α7S III	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.01	HRB_V109	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;	
PX3	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.01	HRB_V109	4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EY Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (Digital or optical) By HyperLink	Camera Version	WEB Version Info.	Remark
Canon	EOS M50	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.0.0	HRB_V104	
	EOS M50 Mark II	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.00	HRB_V104	1. AK2000C can switch to video mode from P,A shooting mode, but need to switch to video mode from photo mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/RS/RS camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS M6 Mark II	Type-C to Type-C (C02)	√	√	×	×	×	×	×	√	×	1.0.0	HRB_V104	
	PowerShot G7 X Mark III	Type-C to Type-C (C02)	√	√	×	×	×	×	×	√	×	1.0.1	HRB_V104	1. Be sure camera Wi-Fi is off before connecting the cable. 2. AK2000C can switch to video mode from P,A shooting mode, but need to switch to video mode from photo mode on camera manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 200D II	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.0.0	HRB_V104	
	EOS 850D	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.0.0	HRB_V109	
	EOS 80D	Type-C to micro (B02) (Optional)	√	√	×	×	×	×	×	√	×	1.0.2	HRB_V104	
	EOS 90D	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.0.0	HRB_V104	1. Please switch photo / video mode on camera manually. 2. when using the gimbals to control focus electronically, you may need to switch the lens between EF and MF to see which best fit your need.
	EOS 6D	Type-C to mini (B02) (Optional)	√	√	×	×	×	×	×	√	×	1.1.8	HRB_V104	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 6D Mark II	Type-C to mini (B02) (Optional)	√	√	×	×	×	×	×	√	×	1.1.1	HRB_V104	
	EOS 5D Mark III	Type-C to mini (B02) (Optional)	√	√	×	×	×	×	×	√	×	1.3.5	HRB_V104	
	EOS 5D Mark IV	Type-C to micro (A03)	√	√	×	×	×	×	×	√	×	1.1.2	HRB_V104	
	EOS 5DS R	Type-C to Micro (A03)	√	√	×	×	×	×	×	√	×	VI.1.1	HRB_V109	1. After connecting the cable, be sure to power on the AK2000C before the camera and wait for about 5 seconds for successfully connection after camera power on. 2. Please make sure the LV is on to use the gimbals to control the camera. 3. When the camera is in photo mode and the gimbals switches to video mode, some keys of the camera will not respond to commands.
	EOS RP	Type-C to Type-C (C02)	√	√	×	×	×	×	×	√	×	1.3.0	HRB_V104	1. AK2000C can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually. 2. switch to "MF"

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Zoom Control (digital or optical) By Hyperlink	Camera Version	HUB Version Info.	Remark
Fujifilm	X-T20	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	2.01	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, AK2000C can control camera to start recording.
	X-T30	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104	
	X-A5	Type-C to TRS2.5(T02)	√	×	×	×	×	×	√	×	×	2.00	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5(T02)	√	×	×	×	×	×	√	×	×	1.00	HUB_V104	
	X-T100	Type-C to TRS2.5(T02)	√	×	×	×	×	×	√	×	×	2.00	HUB_V104	
	X-H1	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	2.01	HUB_V104	
	X-T3	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	3.01	HUB_V104	1. Make sure to connect AK2000C to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104	
	X-S10	Type-C to TRS3.5(T03) (Optional)	√	√	×	×	×	×	√	×	×	1.02	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.
	X-T200	Type-C to TRS3.5(T03) (Optional)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104	
	X-E3	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	1.22	HUB_V107	
Sigma	FP	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	1.22	HUB_V109	1. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.

Notice:

1. "√" Means Support this function, "×" Means Do not Support;
2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;
3. Hyperlink is a remote Control, not a standard accessory for AK2000C.