



### AK2000C Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By HyperLink	Camera Version	HUB Version Info	Remark	
Sony	α9	Wi-Fi	✓	✓	✗	✓	✗	✓	✗	✗	✗	Ver. 6.00	sony_v104.bin		
	α7 III (A7M3)	Wi-Fi	✓	✓	✗	✓	✗	✓	✗	✗	✓		sony_v104.bin		
	α7R III	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	Ver. 3.01	sony_v104.bin		
	α7 II (A7M2)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	Ver. 4.00	sony_v104.bin		
	α7S II	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✓	Ver. 2.00	sony_v104.bin		
	α7R II	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	Ver. 4.00	sony_v104.bin		
	A7S	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗		sony_v104.bin		
	A7r	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✓	Ver. 2.00	sony_v104.bin		
	α7	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✗	✗		sony_v104.bin	
	RX100 IV (RX100M4)	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	Ver. 1.0.0	sony_v104.bin		
	RX100 V (RX100M5)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	Ver. 1.0.2	sony_v104.bin		
	RX100 VI (RX100M6)	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✓		sony_v104.bin		
	α5100	Wi-Fi	✓	✓	✓	✗	✓	✗	✗	✗	✓		sony_v104.bin		
	α6000	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✓		sony_v104.bin		
	α6500	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✓	Ver. 2.00	sony_v104.bin		
	α6400	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✓	Ver. 1.00	sony_v104.bin		
α6300	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✓	Ver. 2.00	sony_v104.bin			
α6100	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✓	Ver. 1.00	sony_v106.bin			

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By HyperLink	Camera Version	HUB Version Info	Remark
Canon	EOS M50	Wi-Fi	✓	✓	✓	✗	✗	✗	✗	✗	✗	Ver. 1.0.0	canon_v104.bin	
	EOS R	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	Ver. 1.0.0	canon_v104.bin	
	EOS M6 Mark II	Wi-Fi	✓	✓	✓	✓	✓	✗	✗	✗	✗	Ver. 1.0.0	canon_v105.bin	
	EOS RP	Wi-Fi	✓	✓	✓	✓	✗	✗	✗	✗	✗	Ver. 1.3.0	canon_v105.bin	
	EOS 200D II	Wi-Fi	✓	✓	✓	✓	✗	✗	✗	✗	✗	Ver. 1.0.0	canon_v106.bin	
	EOS 90D	Wi-Fi	✓	✓	✓	✓	✗	✗	✗	✗	✗	Ver. 1.0.0	canon_v106.bin	Connecting Step: Camera WiFi Setup—Camera Control API—Connecting
	PowerShot G7 X Mark III	Wi-Fi	✓	✓	✓	✓	✗	✗	✗	✗	✗	Ver. 1.0.1	canon_v105.bin	
	EOS 80D	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✓	✗		canon_v106.bin	
	EOS 6D Mark II	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	1.1.1	canon_v106.bin	Connecting Step: Camera WiFi Setup—Camera Control API—Connecting
	EOS 6D	Wi-Fi	✓	✗	✗	✓	✓	✓	✗	✗	✗	1.1.8	canon_v106.bin	
	EOS 200D	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗		canon_v106.bin	
	EOS 5D Mark IV	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗		canon_v106.bin	
EOS 70D	Wi-Fi	✓	✗	✗	✓	✓	✓	✗	✗	✗	Ver. 1.1.1	canon_v106.bin		
EOS 77D	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	Ver. 1.0.2	canon_v106.bin		

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By HyperLink	Camera Version	HUB Version Info	Remark
Panasonic	DMC-GH4GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 2.7	panasonic_v104.bin	
	DC-GF9GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✓		panasonic_v104.bin	
	DC-GF9GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 1.1.1	panasonic_v104.bin	
	DC-GF10GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗		panasonic_v104.bin	
	DC-GH5GK-K	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 1.0.2	panasonic_v104.bin	
		Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 1.0.0	panasonic_v104.bin	
	DC-GX9GK-K	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗		panasonic_v104.bin	
	DMC-GX85GK (M mode)	Wi-Fi	✓	✓	✓	✓	✗	✓	✗	✓	✗	Ver. 1.2	panasonic_v104.bin	
	DMC-GX85GK (S, A, P mode)	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 1.2	panasonic_v104.bin	
DC-GH5 (M, S, A, P mode)	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	Ver. 2.3	panasonic_v104.bin		

Notice:  
 1. "✓" Means Support this function. "✗" Means Do not Support.  
 2. HyperLink is a remote Control, not a standard accessory for AK2000C



### AK2000C Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By HyperLink	Camera Version	HUB Version Info	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	HUB_V102	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. 4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	BSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	BSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	BSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	BSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	ZV-E10	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.0	HUB_V107	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "[Still Img. Save Dest.]" to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the AK2000C before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the character "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	α6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	HUB_V102	
	α7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	α7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V102	
	α7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	HUB_V102	
	α7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V107	
	α7R M4A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	α7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V102	
α7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	HUB_V102		
α9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	HUB_V102		
α9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	HUB_V102		
A7C	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.0	HUB_V106	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "[Still Img. Save Dest.]" to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video. 6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.	
α1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V106	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. 4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.	
α7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V109		
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V109		
α7 IV (A7M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V109	1. After connecting the cable, be sure to power on the AK2000C before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By HyperLink	Camera Version	HUB Version Info	Remark
Canon	EOS M50	Type-C to micro (A03)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V104	
	EOS M50 Mark II	Type-C to micro (A03)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.00	HUB_V104	
	EOS M6 Mark II	Type-C to Type-C (C02)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V104	
	PowerShot G7 X Mark III	Type-C to Type-C (C02)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.1	HUB_V104	1. Be sure camera Wi-Fi is off before connecting the cable. 2. AK2000C can switch to video mode from P.A shooting mode, but need to switch to video mode from photo mode on camera manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 200D II	Type-C to micro (A03)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V104	
	EOS 850D	Type-C to micro (A03)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V109	
	EOS 80D	Type-C to mini ( B02) (Optional)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.2	HUB_V104	
	EOS 90D	Type-C to micro (A03)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V104	
	EOS 6D	Type-C to mini ( B02) (Optional)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.1.8	HUB_V104	
	EOS 6D Mark II	Type-C to mini ( B02) (Optional)	✓	✓	✗	✗	✗	✗	✗	✓				

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By Hyperlink	Camera Version	HUB Version Info.	Remark
Nikon	Z7	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	1.00	HUB_V106	1. After connecting the cable, be sure to power on the AK2000C before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z7 II	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	1.00	HUB_V106	
	Z5	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	2.00	HUB_V106	
	Z6	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	2.00	HUB_V106	
	Z6 II	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	1.00	HUB_V107	
	Z50	Type-C to micro (A03)	√	√	×	×	×	×	×	×	×	1.00	HUB_V106	
	D7500	Type-C to micro (A03)	√	√	×	×	×	×	×	×	×	1.00	HUB_V109	1. After connecting the cable, be sure to power on the AK2000C before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please make sure the LV is on to use the gimbal to control the camera. 3. The AK2000C can start/ stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration. 5. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.
Zfc	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	1.10	HUB_V109	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom Control By Hyperlink	Camera Version	HUB Version Info.	Remark	
Fujifilm	X-T20	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	2.01	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, AK2000C can control camera to start recording.	
	X-T30	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104		
	X-A5	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	2.00	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu	
	X-A7	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	1.00	HUB_V104		
	X-T100	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	2.00	HUB_V104		
	X-H1	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	2.01	HUB_V104		
	X-T3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	3.01	HUB_V104	1. Make sure to connect AK2000C to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually.	
	X-T4	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104		
	X-S10	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	×	√	×	×	1.02	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.
	X-T200	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	√	×	×	1.00	HUB_V104		
X-E3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.22	HUB_V107			
Sigma	FP	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	1.22	HUB_V109	1. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.	

Notice:

- "√" Means Support this function, "×" Means Do not Support;
- For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;
- Hyperlink is a remote Control, not a standard accessory for AK2000C.