pdating Time:	2:30th June, 2023 Doc. V	Version: 2.0.9 FelyuTech Control Form	Capture	Start/ Stop	AK2000C C	ISO	EV	WB	Halfway Press	Pull Focus	ontrol) Digital Zoom Control	Camera Version	нив	Remark	
J. dild	α 9 α 7 III (Α7Μ3) α 7R III α 7 II (Α7Μ2)	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	Photo √ √ √ √	Recording Video	Photo/ Video Mode × × × ×	Adjustment	Adjustment × × √	Adjustment	X X X	by HyperLink X X X	By Hyper I ink X X X	Ver. 6.00 Ver. 3.01 Ver. 4.00	version Info. sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin	Ayuud A	
	a 7S a 7R A 7S A 7r	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	√ √ √ ×	× × × × ×	× × × × × ×	\frac{1}{1}	× × × × × ×	× × × × ×	× × × × ×	× × × × ×	Ver. 2.00 Ver. 4.00 Ver. 2.00	sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin		
	RX100 IV (RX100M4) RX100 V (RX100M5) RX100 VI (RX100M6) a 5100	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	\frac{1}{4}	× × × × ×	√ × √ ×	\frac{1}{4}	√ × √ ×	× × × ×	× × × × ×	\frac{1}{4}	Ver. 1.0.0 Ver. 1.0.2	sony_v104.bin sony_v104.bin sony_v104.bin sony_v104.bin		
	a 6000 a 6500 a 6400 a 6300 a 6100	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	×	× × × × × ×	× × ✓ ✓ ✓ ✓ ✓	\frac{1}{\sqrt{1}}	× × ✓ ✓ ✓ ✓	× × × × ×	× × × × × ×	\frac{1}{4}	Ver. 2.00 Ver. 1.00 Ver. 2.00 Ver. 1.00	sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin sony_v106. bin		
Brand	Camera Model EOS M50 EOS R	Control Form Wi-Fi Wi-Fi	Capture Photo	√ √	Switch Photo∕ Video Mode √ √	ISO Adjustment ×	EV Adjustment	WB Adjustment ×	Halfway Press To Focus X	Pull Focus by HyperLink ×	Digital Zoom Control By Hyperlink X	Ver. 1.0.0	canon_v104.bin	Remark	
	EOS M6 Mark EOS RP EOS 200D (250D) EOS 90D Powershot G7 X Mark	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	\frac{1}{4}	\frac{1}{1}	\frac{1}{\sqrt{1}}	√ × √ √ × ×	× × × × × ×	× × × × ×	× × × × × ×	× × × × × ×	Ver. 1.0.0 Ver. 1.3.0 Ver. 1.0.0 Ver. 1.0.0 Ver. 1.0.1	canon_v105. bin canon_v105. bin canon_v106. bin canon_v106. bin canon_v105. bin	Connecting Step: Camera:WIFI Setup—Camera Control API—Connecting	
Canon	EOS 80D EOS 6D Mark EOS 6D EOS 200D	Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	√ ✓ ×	× × × ×	\ \(\)	\frac{1}{4}	\frac{1}{\sqrt{1}}	× × × ×	√	× × × ×	1. 1. 1	canon_v106. bin canon_v106. bin canon_v106. bin canon_v106. bin	Connecting Step: Camera:WIFI Setup—Camera Control API—Connecting	
Brand	EOS 5D Mark IV EOS 70D EOS 77D Camera Model	Wi-Fi Wi-Fi Wi-Fi Control Form	√ √ Capture	√ × √ Start/ Stop	√ × √ Switch	√ √ √	√ √ √ EV	√ × ×	× × × Halfway Press	× × × Pull Focus	× × Digital Zoom Control	Ver. 1.1.1 Ver. 1.0.2 Camera Version	canon_v106. bin canon_v106. bin canon_v106. bin	Remark	
	DMC-GH4GK DC-GF9XGK DC-GF9KGK DC-GF10KGK	Wi-Fi Wi-Fi Wi-Fi	Photo		Photo/ Video Mode	Adjustment	Adjustment	Adjustment	X X X	by HyperLink	By Hyperlink X X X	Ver. 2. 7	Version Info. panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin		
Panasonic	DC-GH5SGK-K DC-GX9KGK-K DMC-GX85GK (M mode)	Wi-Fi Wi-Fi Wi-Fi Wi-Fi	\frac{1}{4}	\frac{1}{\sqrt{1}}	\frac{1}{4}	\frac{1}{4}	√ √ √ ×	\frac{1}{\sqrt{1}}	× × ×	\frac{1}{\sqrt{1}}	× × × × ×	Ver. 1.0.2 Ver. 1.0.0	panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin		
otice:	DMC-GX85GK (S. A. P mode) DC-GH5 (M. S. A. P mode)	Wi-Fi Wi-Fi X** Means Do not Support;	√ √	1	J	√ √	√ √	√ √	×	√ √	×	Ver. 1. 2	panasonic_v104.bin		
		a standard accessory for Ak	32000C		AK2000	C Camer	a Compa	atibil	ity (Cab	ole Cont	rol)				
	Camera Model RX100 III (RX100M3) RX100 IV (RX100M4) RX100M5A	Cable Type-C to Multi Type-C to Multi Type-C to Multi	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment × ×	EV Adjustment × ×	WB Adjustment × ×	Halfway Press To Focus	Pull Focus by HyperLink × ×	Digital Zoom Control By Hyperlink	2.00 1.30 2.00	HUB Version Info. HUB_V102 HUB_V102 HUB_V102	Remark	
	RX100 VI (RX100M6) RX100 VI (RX100M7) ZV-1 DSC-WX500	Type-C to Multi	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	× × × ×	× × × ×	× × × × ×	\frac{1}{\sqrt{1}}	× × × × ×	\frac{1}{\sqrt{1}}	1. 00 1. 00 1. 0 1. 0	HUB_V102 HUB_V102 HUB_V102 HUB_V102 HUB_V102	1. After connecting the cable, be sure to power or AX2000C before the camera. 2. Support Optical Zoom; Please set [Zoom Setting] "Clearlmage Zoom" or "Digital Zoom" to enable Dig Zoom. 3. Please set [Auto Review] to be "Off" when shoot timelapse video; 4. Support Switch Photo/ Video Mode in P. A. S. M. Wode.	
	DSC-HX90 DSC-RX10 III DSC-RX10 IV	Type-C to Multi Type-C to Multi Type-C to Multi	√ √ √	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	× × ×	× × ×	× × ×	\frac{1}{\sqrt{1}}	× ×	√ √ √	1.0	HUB_V102 HUB_V102 HUB_V102	Mode. 1. Please set the [Ctrl w/ Smartphone] to be off.	
	ZV-E10	Type-C to Type-C (CO2)	√	√	√	×	×	×	×	×	×	1.0	HUB_V107	(Metwork) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote] - (Network) → [PC Remote] - (Set'Still Img. Save Dest." to be "Camera Only": (Metwork) → [PC Remote Function] → [Still Img. Set Dest.] → [Camera Only] + (Please set [Auto Review] to be "Off" when shoot in time lapse video: 5. After connecting the cable, be sure to power on gimbal before the camera.	
	a 6100	Type-C to Multi	√	√	J	×	×	×	√	×	√	1.00	HUB_V102	6. The camera icon on the gimbal screen lights up successful connection. And the screen of the came displays the characters "PC". 7. When the camera is in photo mode, you can swite between photo and video modes from gimbal; when t camera is in video mode, the gimbal can only contrecording video.	
	a 6100 a 6300 a 6400 a 6500 a 6600 A 78	Type-C to Multi	\frac{1}{\sqrt{1}}	\frac{1}{4}	\frac{1}{1}	× × × × × × ×	× × × × × ×	× × × × × × ×	\frac{1}{\sqrt{1}}	× × × × × × ×	\frac{1}{4} \frac{1}{4} \frac{1}{4} \frac{1}{4} \frac{1}{4}	1. 00 2. 00 1. 00 2. 00 2. 00 2. 00 3. 20	HUB_V102 HUB_V102 HUB_V102 HUB_V102 HUB_V102 HUB_V102		
Sony	A 7S a 7S A 7R a 7R a 7R	Type-C to Multi	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	\frac{1}{1}	× × × × ×	× × × × ×	× × × × ×	\(\)	× × × × × ×	\frac{1}{4}	3. 20 2. 00 2. 00 4. 00 3. 01	HUB_V102 HUB_V102 HUB_V102 HUB_V102 HUB_V102	1. After connecting the cable, be sure to power or AX20000 before the camera. 2. Please set [Zoom Setting] to be "Clearlmage Zoo" Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shoot timelapse video; 4. Support Switch Photo/ Video Mode in P. A. S. M.	
	a 7R III a 7R IV a 7R M4A a 7 II (A7M2) a 7 III (A7M3)	Type-C to Multi	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	\frac{1}{4}	× × × × × ×	× × × × × ×	× × × × × ×	\frac{1}{\sqrt{1}}	× × × × × ×	\frac{1}{4}	3. 01 1. 00 1. 00 4. 00 3. 10	HUB_V102 HUB_V107 HUB_V102 HUB_V102 HUB_V102	4 Support Switch Photo/ Video Mode in P, A, S, M Mode.	
	a9 a9 II	Type-C to Multi Type-C to Multi	√ √	√ √	√ √	×	×	×	√ √	×	√ √	6.00	HUB_V102 HUB_V102	1. After connecting the cable, be sure to power or AK2000C before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote: (Network) → [PC Remote Function] → [PC Remote: (Network) → [PC Remote Function] → [Still Img. Dest.] → [Common of the common o	
	A 7C	Type-C to Type-C (CO2)	√	√	√	×	×	×	4	×	×	1.0	HUB_V106		
	a 1	Type-C to Multi	√ √	√ √	<i>J</i>	×	×	×	√ √	×	√ √	1.01	HUB_V106		
	FX3	Type-C to Multi	√ √	√ √	<i>\</i>	×	×	×	√ √	×	√ √	1. 01	HUB_V109		
Brand	Camera Model	Type-C to Multi Cable Type-C to Micro (AO3)	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus by HyperLink	Digital Zoom	1.00 Camera Version 1.0.0	HUB_V109 HUB Version Info. HUB_V104	Operate digital zoom, the camera's digital zoom function needs to be turned on. Remark 1. AK2000C can switch to video mode from P.A shoo	
	EOS M50 Mark II	Type-C to Micro (AO3) Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	×	√ √	×	1. 00	HUB_V104 HUB_V104	1. MAZUUUU can switch to video mode from P.A. sno mode, but need to switch to video mode from pho on camera manually. 2. Switch to "MF" Mode on the lens when use pull 3. When shooting timelapse video, please set the camera "Image Review" to be off 1. Be sure camera Wi-Fi is off before connecting	
	Powershot G7 X Mark III	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	√	×	1. 0. 1	HUB_V104	cable 2. AK2000C can switch to video mode from P.A shownede, but need to switch to video mode from phot on camera manually. 3. Switch to "ME" Mode on the lens when use pull 4. When shooting timelapse video, please set the camera "Image Review" to be off	
	EOS 200D II (250D) EOS 850D EOS 80D EOS 90D	Type-C to Micro (A03) Type-C to Micro (A03) Type-C to Mini (B02) (Optional) Type-C to Micro (A03)	\frac{1}{\sqrt{1}}	\ \ \ \	× × ×	× × × ×	× × ×	× × × ×	× × ×	√ √ √	× × × × ×	1. 0. 0 1. 0. 0 1. 0. 2	HUB_V104 HUB_V109 HUB_V104 HUB_V104	1.Please switch photo / video mode on camera man	
Ganon	EOS 6D Mark II	Type-C to Mini (B02) (Optional) Type-C to Mini (B02) (Optional)	√ √	1	×	×	×	×	×	√ √	×	1. 1. 8	HUB_V104	2. When using the gimbal to control focus electry you may need to switch the lens between AF and N which best fits your need 3. When shooting timelapse video, please set the camera "Image Review" to be off.	
	EOS 5D Mark IV	Type-C to Mini (B02) (Optional) Type-C to Micro (A03)	√ √	√ √	×	×	×	×	×	√ √	×	1. 3. 5	HUB_V104	1. After connecting the cable, be sure to power of A2000C before the camera and wait for about 5 sc	
	EOS 5DS R	Type-C to Micro (AO3)	√	√	×	×	×	×	×	√ 	×	V1. 1. 1	HUB_V109	for successfully connection after camera power camera icon on the gimbal screen will light up 2. When the camera is in photo mode and the gimb switches to video mode, some keys of the camera respond to commands. 1. AK2000C can switch to video mode from P.A.M mode, but need to switch to video mode from pho	
	EOS RP	Type-C to Type-C (CO2) Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	×	√ √	×	1. 3. 0	HUB_V104 HUB_V104	on camera manually. 2. Switch to "MF" Mode on the lens when use pull 3. Please do not use the release cable to control video recording while in photo mode in RP/R5/R6 as it is easy to cause the camera orash. 4. When shooting timelapse video, please set the camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mc will increase the delay of pull focus.	
														1. Please switch photo / video mode on camera mai 2. Switch to "MF" Mode on the lens when use pull 3. Please do not use the release cable to contro video recording while in photo mode in RP/R5/R6 as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the camera "lmage Review" to be off in the camera crash. 5. It shows that using the adapter with the EF Mr will increase the delay of pull focus. 6. If connect camera to external device via HDMI need to set the "HDMI Display" to be display be camera screen and on the other device to contro photo or video recording. 1. Please toggle photo / video mode on camera mai 2. Switch to "MF" Mode on the lens when use pull 3. Please do not use the release cable to contro video recording while in photo mode in RP/R5/R6 as it is easy to cause the camera crash. 4. It shows that using the adapter with the EF Mr will increase the delay of pull focus. 5. If connect camera to external device via HDMI increase the delay of pull focus.	
	EOS R5	Type-C to Type-C (CO2)	4	√	×	×	×	×	×	√ 	×	1, 1, 1	HUB_V104		
	EOS R6	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	√	×	1.1.1	HUB_V104		
	EOS R7	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	×	×	1. 0. 1	HUB_V109	need to set the "HDMI Display" to be display bo camera screen and on the other device to contro photo or video recording. Please switch photo / video mode on camera manu.	
	EOS R10	Type-C to Type-C (CO2) Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	×	×	×	1. 0. 1	HUB_V109	Please switch photo / video mode on camera manu Please switch photo / video mode on camera manu	
	EOS R6 Mark II	Type-C to Type-C (CO2) Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	×	×	×	1. 0. 0	HUB_V109	Please switch photo / video mode on camera manu Please switch photo / video mode on camera manu	
Brand	Camera Model	Cable Type-C to Type-C (CO2)	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus X	Pull Focus by HyperLink	Digital Zoom Control By Hyperlink	Camera Version	HUB Version Info. HUB_V104	Remark 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cabl control camera as Wi-Fi and USB Trigger can not the same time. 3. The camera will auto focus when control captu	
		Type-C to DC2.5mm	√	√	×	×	×	×	√	×	×	2. 6	HUB_V109	4.To pull focus with gimbal, the focus mode tog the camera should be set to MF. 5. When the camera is connected to the gimbal, i open the album and do nothing, the camera may f When switched to Photo mode, the camera won't r video-capturing commands; when switched to vide the camera won't respond to photo-capturing com	
	GH5	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	√	×	2. 6	HUB_V109	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cabl control camera as Wi-Fi and USB Trigger can not the same time. 3. The camera will auto focus when control captu. 4. To pull focus with gimbal, the focus mode tog the camera should be set to MF.	
	GH4 G9	Type-C to DC2.5mm Type-C to DC2.5mm	√ √	√ √	×	×	×	×	√ √	×	×	2. 7	HUB_V104 HUB_V104	5. When the camera is connected to the gimbal, iopen the album and do nothing, the camera may feel and the second of the camera manual please switch photo / video mode on camera manual process.	
'anason i c	\$5	Type-C to DC2.5mm Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	×	×	×	2. 00	НИВ_V104 НИВ_V104	Please switch photo / video mode on camera manual. 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable control camera as Wi-Fi and USB Trigger can not the same time. 3. AK2000C can switch photo/ video mode in P. A. shooting mode. 4. The camera will auto focus when control captu	
	GH6	Type-C to Type-C (CO2)	√ √	√ √	×	×	×	×	√ ×	×	×	1. 2	HUB_V109	Please switch photo / video mode on camera manu 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cabl control camera as Wi-Fi and USB Trigger can not	
		Type-C to Type-C (CO2) Type-C to DC2.5mm	√ √	1	×	×	×	×	×	×	×	1. 00		control camera as Wi-Fi and USB Trigger can not the same time. 3. AK2000C can switch photo/ video mode in P. A. shooting mode. 4. The camera will auto focus when control captu Please switch photo / video mode on camera manu	
	\$511	Type-C to Type-C (CO2)	√	4	√	×	×	×	×	√	×	1. 00	HUB_V109	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cabl control camera as Wi-Fi and USB Trigger can not the same time. 3. AK/2000C can switch photo/ video mode in P. A. shooting mode. 4. The camera will auto focus when control captu	
Brand	Camera Model 27 27 25	Cable Type-C to Type-C (CO2) Type-C to Type-C (CO2) Type-C to Type-C (CO2)	Capture Photo √ √	Start/ Stop Recording Video	Switch Photo/ Video Mode × ×	ISO Adjustment X X	EV Adjustment × × ×	WB Adjustment × ×	Halfway Press To Focus X X	Pull Focus by HyperLink × ×	Digital Zoom Control By Hyperlink X	Camera Version 1.00 1.00 1.11	HUB Version Info. HUB_V106 HUB_V106 HUB_V109	Remark 1. After connecting the cable, be sure to power camera before the gimbal. 2. It takes a few seconds for the gimbal to conn	
	Z6 Z6 II Z50	Type-C to Type-C (CO2) Type-C to Type-C (CO2) Type-C to Micro (AO3)	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	×	×	×	×	×	X X X	×	2. 00 1. 00 1. 00	HUB_V106 HUB_V107 HUB_V106	the camera 3. Please switch photo / video mode on camera ma 4. The playback operation can be performed only recording operation is performed 1. After connecting the cable, be sure to power AK20000 before the camera and wait for about 6	
	D7500	Type-C to Micro (AO3)	√	4	×	×	×	×	×	×	×	1. 00	HUB_V109	ANALOUGU before the camera and wait for about for successfully connection after camera power 2.Please make sure the LV is on to use the gimt control the cmaera. 3. The AK2000C can start/ stop video recording of the camera is turn on under video mode. 4. When use gimbal to control the video recording camera monitor show the light but not show the duration. 5. When the gimbal is connected to the camera, so of the camera will not respond to commands.	
Nikon	Zfo	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	×	×	1.10	HUB_V109	1. After connecting the cable, be sure to power Feiyu gimbal before the camera and wait for abc seconds for successfully connection after camer on 2. Please switch photo / video mode on camera ma 3. To operate digital focusing in video mode, set the camera's focusing mode to AF-FS or AF-Fs and AF-FS or AF-F	
	Z30	Type-C to Type-C (CO2)	√	√	×	×	×	×	×	×	×	1. 00	HUB_V109	operating digital focus in photo mode, the focus the camera cannot be MF mode. 1. After connecting the cable, be sure to power AX2000C before the camera and wait for about 6 for successfully connection after camera power 2. Please switch photo / video mode on camera man 3. To operate digital focusing in video mode, yo	
		Type-C to Type-C (CO2) Cable	Capture Photo	Start/ Stop	X Switch Photo/ Video Mode	150	EV Adjustment	WB Adjustment	Halfway Press To Focus		Digital Zoom	1.00 Camera Version	HIR		
Brand	Camera Model	Type-C to TRS2.5(T02)	√ √	√	× × × ×	× × × ×	× × × ×	× × × ×	\frac{1}{\sqrt{1}}	× × × ×	× × × ×	2. 01 1. 00 2. 00	HUB_V104 HUB_V104 HUB_V104 HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. After switch to video mode on camera manually can control camera to start recording. Please set [MIC/REMOTE RELEASE] to be [REMOTE]	
Brand	X-T20 X-T30 X-A5	Type-C to TRS2.5(T02) Type-C to TRS2.5(T02) Type-C to TRS2.5(T02)	1	×	× × ×	×	× × × ×	× × × × ×	\frac{1}{4}	× × × ×	× × × × ×	1. 00 2. 00 2. 01 3. 01	HUB_V104 HUB_V104 HUB_V104 HUB_V104	Please set [MIC/REMOTE RELEASE] to be [REMOTE] [MOVIE SETTING] menu 1. Make sure to connect AK2000C to the camera of port. 2. Please switch photo/ video mode on camera man	
Brand	X-T20 X-T30		√ √ √	√ √	×	×	_ ^		√	×	×	1.00	HUB_V104	mode on damera mar	
Brand	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1	Type-C to TRS2. 5 (T02)	√ √	√	× × × ×	× × × ×	× × ×	× × ×	1	×	×	1. 02	HUB_V104	the [MOVIE SETTING] menu	
Brand Fujifilm	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10	Type-C to TRS2.5(T02) Type-C to TRS3.5(T03) (Optional) Type-C to TRS3.5(T03)	\frac{1}{\sqrt{1}}	\frac{1}{4}	×	×	×	×	√					the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man	
Brand Fujifilm	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-T200 X-E3	Type-C to TRS2.5(T02) Type-C to TRS3.5(T03) (Optional) Type-C to TRS3.5(T03) (Optional)	\frac{1}{4}	J J J	× × × ×	× × × ×	× × ×	×	\doldsymbol{J}	×	×	1. 00	HUB_V104 HUB_V107	the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 3. To take photos/video is operated through the photos	
Brand Fujifilm	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-T200 X-E3 X-T30	Type-C to TRS2.5(T02) Type-C to TRS2.5(T03) (Optional) Type-C to TRS3.5(T03) (Optional) Type-C to TRS2.5(T02) Type-C to TRS2.5(T02)	\frac{1}{1}	J J J J J J J J J J J J J J J J J J J	× × × × ×	× × × × × ×	× × × × × ×	× × × × ×	\frac{1}{\sqrt{1}}	× × × ×	× × × × × × ×	1. 00 1. 22 1. 00	HUB_V104 HUB_V107 HUB_V109 HUB_V109	2. Please switch photo/ video mode on camera manual please set [MIC/REMOTE RELEASE] to be [REMOTE; the [MUVIE SETTING] menu 2. Please switch photo/ video mode on camera manual please set [MIC/REMOTE RELEASE] to be [REMOTE; the [MUVIE SETTING] menu 2. Please switch photo/ video mode on camera manual Totake photos/video is operated through the page of the photos/video is operated through the page of the process of the proces	
Brand Fujifilm	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-T200 X-E3 X-T30 X100V X-H2S X-H2	Type-C to TRS2.5(T02) Type-C to TRS2.5(T03) (Optional) Type-C to TRS2.5(T02) Type-C to TRS2.5(T02)	J J J J J J J J J J J J J J J J J J J	\(\frac{1}{2} \) \(\frac{1}{	× × × × × × ×	× × × × × × × × × × × × ×	× × × × × × × × × ×	× × × × × × × ×	\(\frac{1}{2} \)	× × × × × ×	X X X X X X Digital Zoom	1. 00 1. 22 1. 00 2. 00 1. 00	HUB_V104 HUB_V107 HUB_V109 HUB_V109 HUB_V109 HUB_V109	the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera man 3. To take photos/video is operated through the mode Please switch photo/ video mode on camera manua Please switch photo/ video mode on camera manua	