

AK2000S Camera Compatibility List (WiFi Control)

Brand	Camera list	Take Photo	Start/Stop Recording Video	Switch photo/video	Zoom in/out	Follow focus	Specification Adjustment	Remark
Sony	RX100 V/RX100M4	✓	✓	✗	✓	✗	WIFI,ISO,EV	
	RX100 V/RX100M5	✓	✓	✗	✓	✗	EV	
	RX100 V/RX100M6	✓	✓	✗	✓	✗	WIFI,ISO,EV	
	a6100	✓	✓	✓	✓	✗	EV	
	a6100+16-50	✓	✓	✗	✓	✗	WIFI,ISO,EV	a6200s_sony_v106.bin
	a6000	✓	✗	✗	✓	✗	EV	
	a6000+28-70	✓	✓	✗	✓	✗	WIFI,ISO,EV	
	a6000+16-50	✓	✓	✗	✓	✗	WIFI,ISO,EV	
	a6500+28-70	✓	✓	✗	✓	✗	EV	
	a6400+16-50	✓	✓	✗	✓	✗	WIFI,ISO,EV	
	a9	✓	✓	✗	✗	✗	WIFI,ISO	
	a7 III (A7M3)	✓	✓	✗	✓	✗	WIFI,ISO	
	a7R III	✓	✓	✗	✗	✗	WIFI,ISO,EV	
	a7 S (A7M2)	✓	✓	✗	✗	✗	EV	
	a7S II	✓	✓	✗	✓	✗	EV	
	a7R II	✓	✓	✗	✗	✗	EV	
	a7S	✓	✓	✗	✗	✗	EV	
a7R	✓	✓	✗	✗	✗	EV		
a7	✓	✓	✗	✗	✗	EV		
Canon	M50	✓	✓	✓	✗	✗	--	
	R5 R	✓	✓	✓	✗	✗	ISO,EV	
	R5 200D II	✓	✓	✓	✗	✗	ISO,EV	a6200s_canon_v106.bin, Steps to connect WIFI: WIFI SETTINGS—Camera Control APP—CONNECT, For the first WiFi connection, please activate AP function, please ask for help from official support of FeiyuTech
	M6 mark II	✓	✓	✓	✗	✗	ISO,EV	a6200s_canon_v106.bin, Steps to connect WIFI: WIFI SETTINGS—Camera Control APP—CONNECT, For the first WiFi connection, please activate AP function, please ask for help from official support of FeiyuTech
	R5 RP	✓	✓	✓	✗	✗	ISO	a6200s_canon_v106.bin, Steps to connect WIFI: WIFI SETTINGS—Camera Control APP—CONNECT, For the first WiFi connection, please activate AP function, please ask for help from official support of FeiyuTech
	G7X mark II	✓	✓	✓	✓	✗	ISO	a6200s_canon_v106.bin, Steps to connect WIFI: WIFI SETTINGS—Camera Control APP—CONNECT, For the first WiFi connection, please activate AP function, please ask for help from official support of FeiyuTech
	R5 90D	✓	✓	✓	✗	✗	ISO,EV	a6200s_canon_v106.bin, Steps to connect WIFI: WIFI SETTINGS—Camera Control APP—CONNECT, For the first WiFi connection, please activate AP function, please ask for help from official support of FeiyuTech
	R5 80D	✓	✓	✓	✗	✓	WIFI,ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 40 Mark II	✓	✓	✓	✗	✓	WIFI,ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 6D	✓	✗	✗	✗	✓	WIFI,ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 200D	✓	✓	✓	✗	✓	WIFI,ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 5D Mark IV	✓	✓	✓	✗	✓	WIFI,ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 70D	✓	✗	✗	✗	✗	ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
	R5 77D	✓	✓	✓	✗	✓	ISO,EV	AK2000S V2.0, a6200s_canon_v106.bin
Panasonic	GH4	✓	✓	✓	✗	✓	WIFI,ISO,EV	
	GH5 (M mode, S mode, A mode, P mode (H-HS12035))	✓	✓	✓	✗	✗	WIFI,ISO,EV	
	GH5S	✓	✓	✓	✗	✓	WIFI,ISO,EV	
	DC-GX9/GX-K	✓	✓	✓	✗	✓	WIFI,ISO,EV	
	DC-GF9/GX-K	✓	✓	✓	✓	✓	WIFI,ISO,EV	
	DC-GF9/GX-K	✓	✓	✓	✗	✓	WIFI,ISO,EV	
	DC-GF10/GX-K	✓	✓	✓	✗	✓	WIFI,ISO,EV	
	DMC-GH5 (S mode, A mode, P mode)	✓	✓	✓	✗	✓	WIFI,ISO,EV	
DMC-GH5 (M mode)	✓	✓	✓	✗	✓	WIFI,ISO		

AK2000S Camera Compatibility List (Cable Control)

Brand	Camera list	Control cable	Function	Setting notes on Camera/Lens	Camera version	HUB Firmware	
Sony	a6300	Type-C to Multi	1, Take photos 2, Start/Stop recording video 3, Zoom/Follow focus		2.00	AK2000S_HUB_V102	
	a6400				1.00		
	a6500				2.00		
	a6700				1.00		
	a6600				1.00		
	a7R IV				1.00		
	a7R III				3.01		
	a7 III(A7M3)				3.00		
	a7S				2.00		
	a7RII				4.00		
	a7II				4.00		
	a7R				2.00		
	a9				6.00		
RX100 V/RX100M4	1.00						
RX100 V/RX100M7	1.00						
Canon	M50	USB 2.0 to micro (A/B)	1, Take photos 2, Start/Stop recording video	--	1.0.0	AK2000S_HUB_V102	
	R5 R	USB 2.0 to Type-C(D1)	1, Take photos 2, Start/Stop recording video 3, Follow focus electronically	When using Follow focus electronically, the lens needs to be in AF mode	1.0.0		
	R5 RP				1.0.0		
	M6 mark II				1.0.0		
	R5 R				1.0.0		
	G7X mark II				1.0.1		
	R5 90D				1.0.0		
	R5 200D II				1.0.0		
	5D Mark IV				USB 3.0 to Micro 3.0 (AG)		1, Take photos 2, Start/Stop recording video 3, Follow focus electronically
80D	USB 2.0 to mini (B1)				1, Take photos 2, Start/Stop recording video 3, Follow focus electronically	When using Follow focus electronically, the lens needs to be in AF mode	1.02
6D		1.3.5					
5D Mark II		1.0.3					
Panasonic	GH5s	USB 2.0 to Type-C(D1)	1, Take photos 2, Start/Stop recording video 3, Follow focus electronically	1, USB mode choose PC(Tether) 2, WIFI and USB cable-control cannot be used simultaneously 3, When using Follow focus electronically, the lens needs to be in AF mode	1.2	AK2000S_HUB_V102	
	G9	Panasonic Shutter Cable TYPE C to DC2.5	1, Take photos 2, Start/Stop recording video	To control recording, you need to turn the camera to video mode .	2.0		
	GH6				2.7		
Nikon	Z7	USB 2.0 to Type-C(D1)	1, Take photos 2, Start/Stop recording video 3, Follow focus electronically	1, After turning on the camera, it takes a few seconds for the camera to connect successfully 2, Make sure the camera live view function is on when using the gimbal control function (EV) 3, To control recording, you need to turn the camera to video mode . 4, When using Follow focus electronically, the lens needs to be in AF mode and very slow	1.00	AK2000S_HUB_V102	
	Z6				2.00		
	Z7500				1.0.0		
Fujifilm	X-T20	Type-C to TRS2.5 (T02)	1, Take photos 2, Start/Stop recording video 3, Half-press to focus	1, Please set up "MIC/REMOTE RELEASE" to REMOTE, Steps: Press Menu, Video Setting) MIC/REMOTE RELEASE) REMOTE 2, To control recording, you need to turn the camera to video mode .	2.01	AK2000S_HUB_V102	
	X-T20				1.00		
	X-T4				1.00		
	XA-S				2.00		
	X-A7				1.00		
	XT-100				2.00		
	XH-1				2.01		
	XT-2				3.01		
X-T200	Type-C to TRS2.5 (T02)	1, Take photos 2, Start/Stop recording video 3, Half-press to focus	1, Please set up "MIC/REMOTE RELEASE" to REMOTE, Steps: Press Menu, Video Setting) MIC/REMOTE RELEASE) REMOTE 2, To control recording, you need to turn the camera to video mode .	1.00	AK2000S V2.0, AK2000S_HUB_V102		