



 
### AK2000S Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Sony	a9	Wi-Fi	√	√	×	√	×	√	×	×	×	Ver. 6.00	sony_v104.bin	
	a7 III (A7M3)	Wi-Fi	√	√	×	√	×	√	×	×	√		sony_v104.bin	
	a7R III	Wi-Fi	√	√	×	√	√	√	×	×	×	Ver. 3.01	sony_v104.bin	
	a7 II (A7M2)	Wi-Fi	√	√	×	×	×	×	×	×	×	Ver. 4.00	sony_v104.bin	
	a7S II	Wi-Fi	√	√	×	×	×	×	×	×	√	Ver. 2.00	sony_v104.bin	
	a7R II	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 4.00	sony_v104.bin	
	A7S	Wi-Fi	√	√	×	×	√	×	×	×	×		sony_v104.bin	
	A7r	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin	
	a7	Wi-Fi	√	×	×	×	√	×	×	×	×		sony_v104.bin	
	RX100 IV (RX100M4)	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.0.0	sony_v104.bin	
	RX100 V (RX100M5)	Wi-Fi	√	√	×	√	√	×	×	×	√	Ver. 1.0.2	sony_v104.bin	
	RX100 VI (RX100M6)	Wi-Fi	√	√	×	√	√	√	×	×	√		sony_v104.bin	
	a5100	Wi-Fi	√	√	√	×	√	×	×	×	√		sony_v104.bin	
	a6000	Wi-Fi	√	×	×	×	√	×	×	×	√		sony_v104.bin	
	a6500	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin	
	a6400	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.00	sony_v104.bin	
	a6300	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 2.00	sony_v104.bin	
	a6100	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.00	sony_v106.bin	

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Canon	EOS M50	Wi-Fi	√	√	√	×	×	×	×	×	×	Ver. 1.0.0	canon_v104.bin	
	EOS R	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v104.bin	
	EOS M6 Mark II	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v105.bin	
	EOS RP	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.3.0	canon_v105.bin	
	EOS 200D II	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin	Connecting Step: Camera/WiFi Setup—Camera Control API—Connecting
	EOS 90D	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin	
	Powershot G7 X Mark III	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.0.1	canon_v105.bin	
	EOS 80D	Wi-Fi	√	√	×	√	√	√	×	√	×		canon_v106.bin	
	EOS 6D Mark II	Wi-Fi	√	√	×	√	√	√	×	√	×		canon_v106.bin	Connecting Step: Camera/WiFi Setup—Camera Control API—Connecting
	EOS 6D	Wi-Fi	√	×	×	√	√	√	×	×	×		canon_v106.bin	
	EOS 200D	Wi-Fi	√	√	√	√	√	√	×	×	×		canon_v106.bin	
	EOS 5D Mark IV	Wi-Fi	√	√	√	√	√	√	×	×	×		canon_v106.bin	
EOS 70D	Wi-Fi	√	×	×	√	√	×	×	×	×	Ver. 1.1.1	canon_v106.bin		
EOS 77D	Wi-Fi	√	√	√	√	√	√	×	×	×	Ver. 1.0.2	canon_v106.bin		

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Panasonic	DMC-GH4GK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.2.7	panasonic_v104.bin	
	DC-GF9XGK	Wi-Fi	√	√	√	√	√	√	×	√	√		panasonic_v104.bin	
	DC-GF9KGK	Wi-Fi	√	√	√	√	√	√	×	×	√	Ver. 1.1.1	panasonic_v104.bin	
	DC-GF10GK	Wi-Fi	√	√	√	√	√	√	×	√	×		panasonic_v104.bin	
	DC-GH5SGK-K	Wi-Fi	√	√	√	√	√	√	×	×	√	Ver. 1.0.2	panasonic_v104.bin	
		Wi-Fi	√	√	√	√	√	√	×	×	×	Ver. 1.0.0	panasonic_v104.bin	
	DC-GX9KGK-K	Wi-Fi	√	√	√	√	√	√	×	√	×		panasonic_v104.bin	
	DMC-GX85GK (M8)	Wi-Fi	√	√	√	√	×	√	×	√	×	Ver.1.2	panasonic_v104.bin	
	DMC-GX85GK (S, A, P8)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.1.2	panasonic_v104.bin	
DC-GH5 (M, S, A, P8)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver.2.3	panasonic_v104.bin		

Notice:  
1. "√" Means Support this function, "×" Means Do not Support;



### AK2000S Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	RX100 IV (RX100M4)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.30	HUB_V102	
	RX100M5A	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	RX100 VI (RX100M6)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V102	1. After connecting the cable, be sure to power on the AK2000S before the camera.
	RX100 VII (RX100M7)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V102	2. Support Optical Zoom, Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	ZV-1	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HUB_V102	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	ZV-E10	USB 2.0 to Type-C (C01)	√	√	√	×	×	×	√	×	√	1.0	HUB_V107	4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	DSC-WX500	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HUB_V102	
	DSC-HX90	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HUB_V102	
	DSC-RX10 III	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	HUB_V102	
	DSC-RX10 IV	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	a6100	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V102	
	a6300	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	a6400	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V102	
	a6500	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	a6600	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	
	A7S	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.20	HUB_V102	
	a7S II	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	1. After connecting the cable, be sure to power on the AK2000S before the camera.
	A7R	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	HUB_V102	2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	a7R II	Type-C to Multi	√	√	√	×	×	×	√	×	√	4.00	HUB_V102	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	a7R III	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.01	HUB_V102	4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	a7R IV	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V107	
	a7R M4A	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	HUB_V102	
	a7 II (A7M2)	Type-C to Multi	√	√	√	×	×	×	√	×	√	4.00	HUB_V102	
	a7 III (A7M3)	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.10	HUB_V102	
a9	Type-C to Multi	√	√	√	×	×	×	√	×	√	6.00	HUB_V102		
a9 II	Type-C to Multi	√	√	√	×	×	×	√	×	√	3.00	HUB_V102		
A7C	USB 2.0 to Type-C (C01)	√	√	√	×	×	×	√	×	×	×	1.0	HUB_V106	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set the [Ctrl w/ Smartphone] to be Off (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video; 6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
a1	Type-C to Multi	√	√	√	×	×	×	√	×	×	√	1.01	HUB_V106	1. After connecting the cable, be sure to power on the AK2000S before the camera.
a7S III	USB 2.0 to Type-C (C01)	√	√	√	×	×	×	√	×	√	√	1.01	HUB_V109	2. Support Optical Zoom when equipped with a Motorize Lens, Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
FX3	Type-C to Multi	√	√	√	×	×	×	√	×	×	√	1.01	HUB_V109	3. Please set [Auto Review] to be "Off" when shooting the timelapse video; 4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark	
Canon	EOS M50	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	HUB_V104	1. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually.	
	EOS M50 Mark II	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.00	HUB_V104	2. Switch to "MF" Mode on the lens when use pull focus.	
	EOS M6 Mark II	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.0.0	HUB_V104	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off	
	Powershot G7 X Mark III	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	√	×	1.0.1	HUB_V104	1. Be sure camera Wi-Fi is off before connecting the cable. 2. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually.
			√	√	×	×	×	×	×	×	√	×	1.0.0	HUB_V104	3. Switch to "MF" Mode on the lens when use pull focus.
	EOS 200D II	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	HUB_V104	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off	
	EOS 80D	USB 2.0 to mini (B01)	√	√	×	×	×	×	×	√	×	1.0.2	HUB_V104		
	EOS 90D	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	HUB_V104	1. Please switch photo / video mode on camera manually.	
	EOS 6D	USB 2.0 to mini (B01)	√	√	×	×	×	×	×	√	×	1.0.0	HUB_V104	2. switch to "MF" Mode on the lens when use pull focus.	
	EOS 6D Mark II	USB 2.0 to mini (B01)	√	√	×	×	×	×	×	√	×	1.0.3	HUB_V104	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.	
	EOS 5D Mark III	USB 2.0 to mini (B01)	√	√	×	×	×	×	×	√	×	1.3.5	HUB_V104		
	EOS 5D Mark IV	USB2.0 to micro (A01)	√	√	×	×	×	×	×	√	×	1.1.2	HUB_V104		
EOS 5DS R	USB2.0 to Micro(A01)	√	√	×	×	×	×	×	√	×	√	V1.1.1	HUB_V109	1. After connecting the cable, be sure to power on the AK2000S before the camera and wait for about 5 seconds for successfully connection after camera power on the camera icon on the gimbal screen will light up. 2. When the camera is in photo mode and the gimbal switches to video mode, some keys of the camera will not respond to commands.	
EOS RP	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	×	1.3.0	HUB_V104	1. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually.	
EOS R	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	×	1.0.0	HUB_V104	2. switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/RS/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.	
EOS R5	USB 2.0 to Type-C (C01)	√	√	×	×	×	×								