



AK2000S Camera Compatibility List (Wi-Fi Control)

Table with 14 columns: Brand, Camera Model, Control Form, Capture Photo, Start/ Stop Recording Video, Switch Photo/ Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Halfway Press To Focus, Pull Focus, Zoom Control (digital or optical), Camera Version, HBB Version Info, Remark. Lists compatibility for Sony and Canon cameras.

Notice: 1. "✓" Means Support this function, "×" Means Do not Support;



AK2000S Camera Compatibility (Cable Control)

Table with 14 columns: Brand, Camera Model, Cable, Capture Photo, Start/ Stop Recording Video, Switch Photo/ Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Halfway Press To Focus, Pull Focus, Zoom Control (digital or optical), Camera Version, HBB Version Info, Remark. Lists compatibility for Panasonic and Sony cameras using various cable types.

Table with 14 columns: Brand, Camera Model, Cable, Capture Photo, Start/ Stop Recording Video, Switch Photo/ Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Halfway Press To Focus, Pull Focus, Zoom Control (digital or optical), Camera Version, HBB Version Info, Remark. Lists compatibility for Canon and Fujifilm cameras using various cable types.

Notice: 1. "✓" Means Support this function, "×" Means Do not Support;

2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03)release cable can charge Sony camera but not control it;