



AK2000S Camera Compatibility List (Wi-Fi Control)

| Brand | Camera Model | Control Form | Capture Photo | Start/ Stop Recording Video | Switch Photo/ Video Mode | ISO Adjustment | EV Adjustment | WB Adjustment | Halfway Press To Focus | Pull Focus | Digital Zoom Control | Camera Version | HUB Version Info | Remark |
|-------|--------------------|--------------|---------------|-----------------------------|--------------------------|----------------|---------------|---------------|------------------------|------------|----------------------|----------------|------------------|--------|
| Sony | a9 | Wi-Fi | √ | √ | X | √ | X | √ | X | X | X | 6.0 | sony_v104.bin | |
| | a7 III (A7M3) | Wi-Fi | √ | √ | X | √ | X | √ | X | X | √ | | sony_v104.bin | |
| | a7R III | Wi-Fi | √ | √ | X | √ | √ | X | X | X | X | 3.01 | sony_v104.bin | |
| | a7 II (A7M2) | Wi-Fi | √ | √ | X | X | √ | X | X | X | X | 4.00 | sony_v104.bin | |
| | a7S II | Wi-Fi | √ | √ | X | X | √ | X | X | X | √ | 2.00 | sony_v104.bin | |
| | a7R II | Wi-Fi | √ | √ | X | X | √ | X | X | X | X | 4.00 | sony_v104.bin | |
| | A7S | Wi-Fi | √ | √ | X | X | √ | X | X | X | X | | sony_v104.bin | |
| | A7r | Wi-Fi | √ | √ | X | X | √ | X | X | X | √ | 2.00 | sony_v104.bin | |
| | a7 | Wi-Fi | √ | X | X | X | √ | X | X | X | X | | sony_v104.bin | |
| | RX100 IV (RX100M4) | Wi-Fi | √ | √ | X | √ | √ | √ | X | X | √ | 1.0.0 | sony_v104.bin | |
| | RX100 V (RX100M5) | Wi-Fi | √ | √ | X | X | √ | √ | X | X | √ | 1.0.2 | sony_v104.bin | |
| | RX100 VI (RX100M6) | Wi-Fi | √ | √ | X | √ | √ | √ | X | X | √ | | sony_v104.bin | |
| | a5100 | Wi-Fi | √ | √ | √ | X | √ | X | X | X | √ | | sony_v104.bin | |
| | a6000 | Wi-Fi | √ | X | X | X | √ | X | X | X | √ | | sony_v104.bin | |
| a6500 | Wi-Fi | √ | √ | X | X | √ | √ | X | X | √ | 2.00 | sony_v104.bin | | |
| a6400 | Wi-Fi | √ | √ | X | √ | √ | √ | X | X | √ | 1.0 | sony_v104.bin | | |
| a6300 | Wi-Fi | √ | √ | X | √ | √ | √ | X | X | √ | 2.00 | sony_v104.bin | | |
| a6100 | Wi-Fi | √ | √ | X | √ | √ | √ | X | X | √ | 1.0 | sony_v106.bin | | |

Notice: 1. "√" Means Support this function, "X" Means Do not Support.



AK2000S Camera Compatibility List (Cable Control)

| Brand | Camera Model | Cable | Capture Photo | Start/ Stop Recording Video | Switch Photo/ Video Mode | ISO Adjustment | EV Adjustment | WB Adjustment | Halfway Press To Focus | Pull Focus | Digital Zoom Control | Camera Version | HUB Version Info | Remark |
|---------------|-------------------------|-------------------------|---------------|-----------------------------|--------------------------|----------------|---------------|---------------|------------------------|------------|----------------------|----------------|--|---|
| Sony | RX100 III (RX100M3) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | RX100 IV (RX100M4) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.30 | HUB_V102 | |
| | RX100M5A | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | RX100 VI (RX100M6) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V102 | 1. After connecting the cable, be sure to power on the AK2000S before the camera. |
| | RX100 VII (RX100M7) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V102 | 2. Support Optical Zoom. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. |
| | ZV-1 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.0 | HUB_V102 | 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. |
| | DSC-WX500 | Type-C to Multi | √ | √ | √ | X | X | X | √ | √ | √ | 1.0 | HUB_V102 | 4. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode. |
| | DSC-HX90 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.0 | HUB_V102 | |
| | DSC-RX10 III | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.0 | HUB_V102 | |
| | DSC-RX10 IV | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | ZV-E10 | USB 2.0 to Type-C (C01) | √ | √ | √ | X | X | X | X | X | X | 1.0 | HUB_V107 | 1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PO". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video. |
| | a6100 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V102 | |
| | a6300 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | a6400 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V102 | |
| | a6500 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | a6600 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | A7S | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 3.20 | HUB_V102 | |
| | a7S II | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | |
| | A7r | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 2.00 | HUB_V102 | 1. After connecting the cable, be sure to power on the AK2000S before the camera. |
| | a7R II | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 4.00 | HUB_V102 | 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. |
| | a7R III | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 3.01 | HUB_V102 | 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. |
| | a7R IV | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V107 | 4. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode. |
| | a7R M4A | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V102 | |
| | a7 II (A7M2) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 4.00 | HUB_V102 | |
| a7 III (A7M3) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 3.1 | HUB_V102 | | |
| a9 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 6.00 | HUB_V102 | | |
| a9 II | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 3.00 | HUB_V102 | | |
| A7C | USB 2.0 to Type-C (C01) | √ | √ | √ | X | X | X | √ | X | √ | 1.0 | HUB_V106 | 1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PO". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video. | |
| a1 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.01 | HUB_V106 | 1. After connecting the cable, be sure to power on the AK2000S before the camera. | |
| a7S III | USB 2.0 to Type-C (C01) | √ | √ | √ | X | X | X | √ | X | √ | 1.01 | HUB_V109 | 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. | |
| FX3 | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.01 | HUB_V109 | 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. | |
| a7 IV (A7M4) | Type-C to Multi | √ | √ | √ | X | X | X | √ | X | √ | 1.00 | HUB_V109 | 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 5. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode. | |

Notice: 1. "√" Means Support this function, "X" Means Do not Support.



AK2000S Camera Compatibility List (USB Control)

| Brand | Camera Model | Cable | Capture Photo | Start/ Stop Recording Video | Switch Photo/ Video Mode | ISO Adjustment | EV Adjustment | WB Adjustment | Halfway Press To Focus | Pull Focus | Digital Zoom Control | Camera Version | HUB Version Info | Remark |
|-------|--------------|-------|---------------|-----------------------------|--------------------------|----------------|---------------|---------------|------------------------|------------|----------------------|----------------|------------------|--------|
|-------|--------------|-------|---------------|-----------------------------|--------------------------|----------------|---------------|---------------|------------------------|------------|----------------------|----------------|------------------|--------|

| Brand | Camera Model | Cable | Capture Photo | Start/ Stop Recording Video | Switch Photo/ Video Mode | ISO Adjustment | EV Adjustment | WB Adjustment | Halfway Press To Focus | Pull Focus | Digital Zoom Control | Camera Version | HUB Version Info. | Remark |
|----------|-----------------------|--|---------------|-----------------------------|--------------------------|----------------|---------------|---------------|------------------------|------------|----------------------|----------------|-------------------|--|
| Fujifilm | X-T20 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 2.01 | HUB_V104 | 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, AK2000S can control camera to start recording. |
| | X-T30 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 1.00 | HUB_V104 | |
| | X-A5 | Type-C to TRS2.5(T02) | √ | × | × | × | × | × | √ | × | × | 2.00 | HUB_V104 | 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu |
| | X-A7 | Type-C to TRS2.5(T02) | √ | × | × | × | × | × | √ | × | × | 1.00 | HUB_V104 | |
| | X-T100 | Type-C to TRS2.5(T02) | √ | × | × | × | × | × | √ | × | × | 2.00 | HUB_V104 | |
| | X-H1 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 2.01 | HUB_V104 | |
| | X-T3 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 3.01 | HUB_V104 | 1. Make sure to connect AK2000S to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually. |
| | X-T4 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 1.00 | HUB_V104 | |
| | X-S10 | Type-C to TRS3.5(T03) <i>(Optional)</i> | √ | √ | × | × | × | × | √ | × | × | 1.02 | HUB_V104 | 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. |
| | X-T200 | Type-C to TRS3.5(T03) <i>(Optional)</i> | √ | √ | × | × | × | × | √ | × | × | 1.00 | HUB_V104 | |
| X-E3 | Type-C to TRS2.5(T02) | √ | √ | × | × | × | × | √ | × | × | 1.22 | HUB_V107 | | |
| Sigma | FP | USB 2.0 to Type-C (C01) | √ | √ | √ | × | × | × | × | × | × | 1.22 | HUB_V109 | 1. When the gimbal is connected to the camera, some keys of the camera will not respond to commands. |

Notice:

1. "√" Means Support this function, "×" Means Do not Support;

2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;