Brand	α 9 α 7 III (A7M3) α 7R III α 7 II (A7M2) α 7S II	Control Form Wi-Fi Wi-Fi Wi-Fi Wi-Fi Wi-Fi	Capture Photo	Start/ Stop	Switch Photo/ Video Mode × × × ×	ISO Adjustment	EV Adjustment X V	WB Adjustment	Halfway Press To Focus X X X	Pull Focus X X X X	Digital	Camera Version 6. 0 3. 01 4. 00 2. 00	HUB Version Info. sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin sony_v104. bin	Remark
	a 7R I A 7S A 7r a 7	Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	√ √ √ ×	× × × × ×	× × ×	\frac{1}{\sqrt{1}}	× × ×	× × × ×	× × × ×	× × × × × ×	2. 00	sony_v104.bin sony_v104.bin sony_v104.bin sony_v104.bin	
Sony	RX100 IV (RX100M4) RX100 V (RX100M5) RX100 VI (RX100M6)	Wi-Fi Wi-Fi Wi-Fi	√ √	\frac{1}{\sqrt{1}}	× × ×	√ ×	\frac{1}{\sqrt{1}}	√ ×	× × ×	×	√ √	1. 0. 0	sony_v104.bin	
	α 5100 α 6000 α 6500	Wi-Fi Wi-Fi	√ √	√ ×	√ × ×	×	\frac{1}{\sqrt{1}}	×	×	×	√ √ √	2. 00	sony_v104.bin sony_v104.bin sony_v104.bin	
	α 6400 α 6300 α 6100	Wi-Fi Wi-Fi	\ \ \ \	√ √ √	× × ×	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	J J	× × × Halfway	×	√ √ Digital	1. 0 2. 00 1. 0	sony_v104.bin sony_v104.bin sony_v106.bin	
Brand	Camera Model EOS M50 EOS R	Control Form Wi-Fi Wi-Fi	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment ×	EV Adjustment	WB Adjustment	Press To Focus X	Pull Focus X		Camera Version 1.0.0	HUB Version Info. canon_v104. bin canon_v104. bin	Remark
	EOS M6 Mark EOS RP EOS 200D (250D)	Wi-Fi Wi-Fi	\ \ \ \	√ √ √	√ √ √	√ √ √	√ ×	×	×	×	×	1. 0. 0 1. 3. 0 1. 0. 0	canon_v105.bin	Connecting Step: Camera:WIF1 Setup—Camera Control API—Connecting
Canon	EOS 90D Powershot G7 X Mark III EOS 80D	Wi-Fi Wi-Fi	\ \ \ \ \	√ √ √	√ √ ×	√ √ √	× ×	× ×	×	× ×	×	1. 0. 0	canon_v106. bin canon_v105. bin canon_v106. bin	Connecting Step:
	EOS 6D Mark II EOS 6D EOS 200D EOS 5D Mark IV	Wi-Fi Wi-Fi Wi-Fi	\frac{1}{\sqrt{1}}	× ×	× × ,	\ \ \ \ \	\frac{1}{\sqrt{1}}	\ \ \ \ \	× × × ×	× × ×	× × ×	1. 1. 1	canon_v106. bin canon_v106. bin canon_v106. bin canon_v106. bin	Camera:WIFI Setup—Camera Control API—Connecting
Brand	EOS 70D EOS 77D Camera Model	Wi-Fi Wi-Fi Control Form	√ √ Capture Photo	X	× √ Switch	√ √ 180	√ √ EV	×	× X Halfway Press	× × Pull Focus	× V Digital Zoom	1. 1. 1 1. 0. 2 Camera	canon_v106.bin	Remark
Di aliu	DMC-GH4GK DC-GF9XGK DC-GF9KGK	Wi-Fi Wi-Fi Wi-Fi	√	Recording Video	Photo/ Video Mode √ √	Adjustment	Adjustment	Adjustment	To Focus X X	√	Control X	2. 7 1. 1. 1	Version Info. panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin	Nemar N
Panasoni	DC-GF10KGK DC-GH5SGK-K	Wi-Fi Wi-Fi Wi-Fi	\frac{1}{1}	\frac{1}{1}	√ √ √	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	×	\frac{1}{\sqrt{1}}	×	1. 0. 2	panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin	
	DC-GX9KGK-K DMC-GX85GK (Mmode) DMC-GX85GK (S, A, P	Wi-Fi Wi-Fi Wi-Fi	\ \ \ \ \	√ √ √	\frac{1}{\sqrt{1}}	\ \(\)	√ × √	\frac{1}{\sqrt{1}}	× × × × ×	\frac{1}{\sqrt{1}}	× × × ×	1. 2 1. 2 2. 3	panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin panasonic_v104. bin	
Notice: 1. "√" M	Weans Support this functi	on, "×" Means Do not Suppo	ort;						•	•				
		FelyuTech			AK2000S Ca				/ (Cabl	e Cont	rol)			
Brand		Cable Type-C to Multi Type-C to Multi	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	Adjustment ×	EV Adjustment ×	WB Adjustment	Press To Focus	Pull Focus X		Camera Version 2.00	HUB Version Info. HUB_V102 HUB_V102	Remark
	RX100M5A RX100 VI (RX100M6) RX100 VII (RX100M7) ZV-1	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\ \ \ \ \ \	\frac{1}{1}	\frac{1}{\sqrt{1}}	× × ×	× × ×	× × ×	\frac{1}{\sqrt{1}}	× × × ×	\frac{1}{\sqrt{1}}	2. 00 1. 00 1. 00	HUB_V102 HUB_V102 HUB_V102 HUB_V102	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zo 3. Please set [Auto Review] to be "Off" when shooting the
	DSC-WX500 DSC-HX90 DSC-RX10 III	Type-C to Multi Type-C to Multi Type-C to Multi	J J	J J	√ √ √	×	×	×	\frac{1}{\sqrt{1}}	× × ×	√ √ √	1. 0	HUB_V102 HUB_V102 HUB_V102	timelapse video; 4.Support Switch Photo/ Video Mode in P, A, S, M, AUTO M
	DSC-RX10 IV	Type-C to Multi	√	√	√	×	×	×	√	×	√	2. 00	HUB_V102	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote":
	ZV-E10	USB 2.0 to Type-C (CO1)	√	√	√	×	×	×	×	×	×	1. 0	HUB_V107	(Network) → [PC Remote Function] → [PC Remote]→ [On] 3. Set'Still Img. Save Dest. "to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save De →[Camera Only] 4. Please set [Auto Review] to be"Off" when shooting the timelapse video: 5. After connecting the cable, be sure to power on the Gó
														before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera disp the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal: when the camera is in video mode, the gimbal can only control recording video.
	α 6100 α 6300 α 6400	Type-C to Multi Type-C to Multi Type-C to Multi	\frac{1}{}	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	×	× × ×	× × ×	\frac{1}{\sqrt{1}}	× × ×	√ √ √	1. 00 2. 00 1. 00	HUB_V102 HUB_V102 HUB_V102	J
Sony	α 6500 α 6600 A 7S α 7S I	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\frac{1}{}	\frac{1}{\sqrt{1}}	\frac{1}{4}	× × × ×	× × ×	× × × × ×	\frac{1}{\sqrt{1}}	× × ×	\frac{1}{}	2. 00 2. 00 3. 20 2. 00	HUB_V102 HUB_V102 HUB_V102 HUB_V102	1.After connecting the cable, be sure to power on the
Sony	A 7R α 7R II α 7R III	Type-C to Multi Type-C to Multi Type-C to Multi	\frac{1}{\sqrt{1}}	√ √ √	√ √ √	× × ×	×	×	\ \ \ \	× ×	√ √ √	2. 00 4. 00 3. 01	HUB_V102 HUB_V102 HUB_V102	1. After connecting the cable, be sure to power on the AKZ000S before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video; 4. Support Switch Photo/ Video Mode in P. A. S. M. AUTO M.
	a 7R M4A a 7 II (A7M2) a 7 III (A7M3)	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\frac{1}{\sqrt{1}}	√ √ √	\frac{1}{\sqrt{1}}	× × ×	× × ×	× × ×	\frac{1}{\sqrt{1}}	× × ×	\frac{1}{\sqrt{1}}	1. 00 1. 00 4. 00 3. 1	HUB_V107 HUB_V102 HUB_V102 HUB_V102	
	a9 a9 II	Type-C to Multi Type-C to Multi	J J	J J	√ √	×	×	×	√ √	×	√ √	6. 00 3. 00	HUB_V102	1 After connecting the coble he give to rever so the
	A 7C	USB 2.0 to Type-C (CO1)	√	√	√	×	×	×	√	×	×	1. 0	нив_v106	1. After connecting the cable, be sure to power on the AKZ000S before the camera. 2. Please set the [Otrl w/ Smartphone] to be off. (Network) → [Otrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only":
														(Network) → [PC Remote Function] → [Still Img. Save De- [Camera Only] 5.Please set [Auto Review] to be "Off" when shooting the timelapse video; 6.Support Switch Photo/ Video Mode in P. A. S. M. AUTO Me
	a 1	Type-C to Multi USB 2.0 to Type-C (CO1)	√ √	√ √	√ √	×	×	×	√ √	×	√ ×	1. 01	HUB_V106	1. After connecting the cable, be sure to power on the AKZ000S before the camera. 2. Support Optical Zoom when equiped with a Motorize Lens Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	FX3	Type-C to Multi	√	√	√	×	×	×	√	×	√	1. 01	HUB_V109	3.Please set [Auto Review] to be "Off" when shooting the timelapse video; 4.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 5.Support Switch Photo/ Video Mode in P, A, S, M, AUTO M
	α7 IV (A7M4)	Type-C to Multi	√	√	√	×	×	×	√ 	×	√	1.00	HUB_V109	After connecting the cable, be sure to power on the gibefore the camera. Operate digital zoom, the camera's digital zoom functioneeds to be turned on.
Brand	Camera Model	USB 2.0 to Micro (A01)	Capture Photo	√	Switch Photo/ Video Mode	×	EV Adjustment	×	Halfway Press To Focus	Pull Focus	Control ×	Camera Version	HUB Version Info. HUB_V104	Remark 1. AKZ000S can switch to video mode from P. A. M shooting m to the discount of the mode on came manually.
	EOS M50 Mark EOS M6 Mark	USB 2.0 to Micro (A01) USB 2.0 to Type-C (C01)	√ √	√ √	×	×	×	×	×	√ √	×	1. 0. 0	HUB_V104 HUB_V104	Switch to "MF" Mode on the lens when use pull focus. When shooting timelapse video, please set the Canon can "Image Review" to be off Be sure camera Wi-Fi is off before connecting the cable.
	Powershot G7 X Mark III	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	1. 0. 1	HUB_V104	2. AKZOOOS can switch to video mode from P.A. M shooting mbut need to switch to video mode from photo mode on came manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon can "Image Review" to be off
	EOS 200D II (250D) EOS 850D EOS 80D EOS 90D	USB 2.0 to Micro (A01) USB 2.0 to Micro (A01) USB 2.0 to Mini (B01) USB 2.0 to Micro (A01)	\ \ \ \ \ \	\frac{1}{\sqrt{1}}	× × × × ×	× × × ×	× × ×	× × ×	× × × ×	\ \ \ \ \	× × ×	1. 0. 0 1. 0. 0 1. 0. 2	HUB_V104 HUB_V109 HUB_V104 HUB_V104	1.Please switch photo / video mode on camera manually. 2.When using the gimbal to control focus electronically,
	EOS 6D EOS 6D Mark II EOS 5D Mark III	USB 2.0 to Mini (B01) USB 2.0 to Mini (B01) USB 2.0 to Mini (B01)	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	× × ×	×	×	×	×	√ √	×	1. 1. 1 1. 1. 8 1. 3. 5	HUB_V104 HUB_V104 HUB_V104	may need to switch the lens between AF and MF to see whi best fits your need. 3. When shooting timelapse video, please set the Canon can "Image Review" to be off.
0	EOS 5D Mark IV	USB2. 0 to Micro (A01) USB2. 0 to Micro (A01)	√ √	√ √	×	×	×	×	×	√ √	×	1. 1. 2 V1. 1. 1	HUB_V104	1. After connecting the cable, be sure to power on the A2 before the camera and wait for about 5 seconds for successfully connection after camera power on, the camera icon on the gimbal screen will light up.
Canon	EOS RP	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	1. 3. 0	HUB_V104	2. When the camera is in photo mode and the gimbal switch to video mode, some keys of the camera will not respond commands. 1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus.
	EOS R	USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1)	√ √	√ √	×	×	×	×	×	√ √	×	1. 0. 0	HUB_V104	3. Please do not use the release cable to control the vid recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon can "Image Review" to be off 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS R6	USB 2.0 to Type-C (CO1)	√	√ .	×	×	×	×	×	√	×	1. 1. 1	HUB_V104	6. If connect camera to external device via HDMI Cable, noto set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo video recording.
	EOS R7 EOS R10 EOS R8	USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1)	√ √	√ √ √	×	×	×	×	×	×	×	1. 0. 1	HUB_V109 HUB_V109	Please switch photo / video mode on camera manually. Please switch photo / video mode on camera manually. Please switch photo / video mode on camera manually.
	EOS R50	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	1. 0. 0	HUB_V109	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode togg on the camera should be set to MF.
Brand	EOS R6 Mark II Camera Model	USB 2.0 to Type-C (CO1)	√ Capture Photo	√ Start/Stop	X Switch	X ISO Adjustment	× EV Adjustment	× WB Adjustment	Halfway Press	√ Pull Focus		1.1.2 Camera Version	HUB_V109 HUB Version Info.	Please switch photo / video mode on camera manually. To pull focus with gimbal, the focus mode togg on the camera should be set to MF. Remark
Brand	GH5S	USB 2.0 to Type-C (CO1)	√	√ √	× Prioto/ Video mode	×	×	×	To Focus	√	Control	1. 2	HUB V104	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to cont camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo.
												2		4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH5	Type-C to DC2.5mm	√	√	×	×	×	×	1	×	×	2. 6	HUB_V109	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands. 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Gamera Wi-Fi before use the cable to contrainer as Wi-Fi and USB Trigger can not used at the same
Panasonio		USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	2. 6	HUB_V109	camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH4 G9	Type-C to DC2.5mm Type-C to DC2.5mm Type-C to DC2.5mm	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	× × ×	×	×	×	\display \di	×	×	2. 7	HUB_V104 HUB_V104 HUB_V104	Please switch photo / video mode on camera manually. Please switch photo / video mode on camera manually.
	\$5	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	2	HUB_V104	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to cont camera as Wi-Fi and USB Trigger can not used at the same time. 3. AK2000S can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.
	au.	Type-C to DC2.5mm	√	√	×	×	×	×	1	×	×			4. The camera will auto focus when control capture photo. Please switch photo / video mode on camera manually. 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to cont
	GH6	USB 2.0 to Type-C (CO1)	√ 	√	×	×	×	×	×	√	×	1. 2	HUB_V109	
	\$511	Type-C to DC2. 5mm	√ ./	√ 	×	×	×	×	√ 	×	×	1. 0	HUB_V109	Please switch photo / video mode on camera manually. 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to cont camera as Wi-Fi and USB Trigger can not used at the same
Brand	Camera Model	USB 2.0 to Type-C (CO1)	√ Capture Photo	Start/ Stop	X Switch	ISO	EV Adjustment	WB	Halfway Press	√ Pull Focus		Camera	HUB Version Info	time. 3. AKZ000C can switch photo/ video mode in P. A. S. M shooting mode. 4. The camera will auto focus when control capture photo.
Dite	Camera Model	USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1)	Capture Photo		Photo/ Video Mode X X			Adjustment X X	Press To Focus X X	× × ×	Zoom Control X X	Version 1. 00 1. 10 1. 11	Version Info. HUB_V106 HUB_V106 HUB_V109	After connecting the cable, be sure to power on the cambefore the gimbal. It takes a few seconds for the gimbal to connect to the gimbal to connect the gimbal the gimbal to connect the gimbal to connect the gimbal
	Z6 Z6 II Z50	USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1) USB 2.0 to Type-C (CO1) USB 2.0 to Micro (AO1)	\frac{1}{\sqrt{1}}	\frac{1}{\sqrt{1}}	× × ×	× × ×	× × ×	× × ×	× × × × ×	× × ×	× × ×	1. 11 2. 00 1. 00	HUB_V109 HUB_V106 HUB_V107 HUB_V106	2. It takes a few seconds for the gimbal to connect to the camera 3. Please switch photo / video mode on camera manually. 4. The playback operation can be performed only after the recording operation is performed
	D7500	lich o o · · ·		√			×	×	×	√	×	4	me "	1. After connecting the cable, be sure to power on the AKZ000S before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please make sure the LV is on to use the gimbal to conthe camera. 3. The AKZ000S can start/ stop video recording only if the
Nikon	D7500	USB 2.0 to Micro (A01)	√ 	· ·	×	×	^	^	^			1.00	НИВ_V109	3. The AK2000S can start/ stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camonitor show the light but not show the video duration. 5. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.
	Zfo	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	1. 10	HUB_V109	1. After connecting the cable, be sure to power on the Fe gimbal before the camera and wait for about 6 seconds fo successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to the camera's focusing mode to AF-FS or AF-FC. When
														the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of camera cannot be MF mode. 1. After connecting the cable, be sure to power on the AK2000C before the camera and wait for about 6 seconds for
	1	USB 2.0 to Type-C (CO1)	√	√	×	×	×	×	×	√	×	1.00	нив_V109	AKZ000C before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to the camera's focusing mode to AF-F5 or AF-FC. When operating digital focus in photo mode, the focus mode of camera cannot be MF mode.
	Z30	1	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment ×	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version 2.01	HUB Version Info. HUB_V104	Remark 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under t
Brand	Z30 Camera Model X-T20	Cable Type-C to TRS2.5(TO2)	1	√	×	×	×	×	\display \di	×	×	1.00	HUB_V104 HUB_V104 HUB_V104	[MOVIE SETTING] menu 2. After switch to video mode on camera manually, AK2000S control camera to start recording. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the
Brand	Camera Model		\ \ \ \	_ ^	× × ×	× × ×	× × × ×	× × ×	\ \ \ \ \ \	× × × ×	× × ×	1. 00 2. 00 2. 01 3. 01	HUB_V104 HUB_V104 HUB_V104 HUB_V104	[MOVIE SETTING] menu 1. Make sure to connect AK2000S to the camera ø2.5mm port
Brand	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1	Type-C to TRS2. 5 (T02)	\frac{1}{\sqrt{1}}	×		×	×	×	1	× × ×	×	3. 01 1. 00 1. 02	HUB_V104 HUB_V104 HUB_V104	 Make sure to connect AK2000S to the camera @2.5mm port Please switch photo/ video mode on camera manually.
Brand	X-T20 X-T30 X-A5 X-A7 X-T100	Type-C to TRS2.5(T02)	\ \ \ \		× × ×	×	×			×	×	1. 00	HUB V104	•
	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3	Type-C to TRS2.5(T02)	\frac{1}{\sqrt{1}}	√ √	×		× × ×	×	1	×	×	1. 22	HUB_V107	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under t [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manually.
	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-T200	Type-C to TRS2.5(T02) Type-C to TRS3.5(T03) (Optional)	\(\sqrt{1} \)	\rightarrow \right	×	×	×			×	×	1. 22		[MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under t [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under
	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-T200 X-E3	Type-C to TRS2. 5 (T02) Type-C to TRS3. 5 (T03) (Optional) Type-C to TRS3. 5 (T03) (Optional) Type-C to TRS3. 5 (T03)	\(\frac{1}{2} \)	\frac{1}{4}	× × × × ×	×	×	×	√				НИВ_V107	Please switch photo/ video mode on camera manually. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-T200 X-E3 X-T30 I X-T30 I	Type-C to TRS2. 5 (T02) Type-C to TRS3. 5 (T03)	\frac{1}{1}	\rightarrow \right	× × × × × ×	× × × × ×	× × × ×	×	\frac{1}{4}	×	×	1. 00	HUB_V107 HUB_V109 HUB_V109	[MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under ti [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under ti [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 3. To take photos/video is operated through the photo mode.
	Camera Mode X-T20 X-T30 X-A5 X-A7 X-T100 X-H1 X-T3 X-T4 X-S10 X-E3 X-T30 I X100V X-H2S X-H2	Type-C to TRS2. 5 (T02) Type-C to TRS3. 5 (T03) (Optional) Type-C to TRS2. 5 (T02) Type-C to TRS2. 5 (T02)	\frac{1}{1}	\ \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \display \qua	× × × × × × × ×	× × × × × × × × × × × × ×	× × × × × × ×	× × × × ×	\frac{1}{\sqrt{1}}	×	× × × × × × × × × × × × × × × × × × ×	1. 00 2. 00 1. 00 1. 21	HUB_V107 HUB_V109 HUB_V109 HUB_V109	[MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under ti [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under ti [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 3. To take photos/video is operated through the photo mode Please switch photo/ video mode on camera manually. Please switch photo/ video mode on camera manually.