

**AK4500 Camera Compatibility List (WIFI Control)**

Brand	Model	Photo	Video	Follow focus	Zoom In/out	ISO	EV	WB	Switch photos/video	Keyboard firmware version on gimbal	Camera firmware	Note for WiFi Connection	
SONY	a6	√	√	×	×	√	×	√	×	AK4500_gbl_sony_v1.2.6	---	Enter the interface of smartphone control	
	a7R	√	√	×	√	√	×	√	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7R II	√	√	×	×	√	√	√	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7S II	√	√	×	√	×	√	×	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7R II	√	√	×	×	×	√	×	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7S	√	√	×	×	×	√	×	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7S	√	√	×	×	×	√	×	×	AK4500_gbl_sony_v1.2.6	---	---	
	a7S	√	√	×	×	×	√	×	×	AK4500_gbl_sony_v1.2.6	---	---	
	RX100M6	√	√	×	√	√	√	√	√	AK4500_gbl_sony_v1.2.6	1.0.0	---	
	RX100M5	√	√	×	√	×	√	√	×	AK4500_gbl_sony_v1.2.6	1.0.2	---	
	RX100 M5A	√	√	×	√	√	√	√	√	AK4500_gbl_sony_v1.2.6	Vw 1.00	Enter the interface of smartphone control	
	RX100M6	√	√	×	√	√	√	√	√	AK4500_gbl_sony_v1.2.6	---	---	
	a5100	√	√	×	√	×	√	√	×	√	AK4500_gbl_sony_v1.2.6	---	---
	a6000	√	×	×	√	×	√	√	×	×	AK4500_gbl_sony_v1.2.6	---	---
	a6300	√	√	×	√	√	√	√	√	×	AK4500_gbl_sony_v1.2.6	10.0.0	---
		√	√	×	√	√	√	√	√	×	AK4500_gbl_sony_v1.2.6	10.0.1	---
	a6400	√	√	×	√	√	√	√	√	×	AK4500_gbl_sony_v1.2.6	Vw 1.00	Enter the interface of smartphone control
	a6500	√	√	×	√	√	√	√	×	×	AK4500_gbl_sony_v1.2.6	---	---
	RX0	√	√	√	√	×	√	√	√	√	AK4500_gbl_sony_v1.2.6	1.1.1	Enter the interface of smartphone control
	FDR-X3300R	√	√	×	×	×	√	√	√	√	AK4500_gbl_sony_v1.2.6	---	---
	HDR-A330R	√	√	×	×	×	√	√	√	√	AK4500_gbl_sony_v1.2.6	---	---
	ZR1	√	√	×	√	√	√	√	√	√	AK4500_gbl_sony_v1.2.6	---	---
	RX1R0	√	×	×	√	×	√	√	×	×	AK4500_gbl_sony_v1.2.6	---	---
	WX300	√	√	×	√	×	√	√	×	×	AK4500_gbl_sony_v1.2.6	Vw 1.00	---
	HX90	√	√	×	√	×	√	√	×	×	AK4500_gbl_sony_v1.2.6	Vw 1.00	---
Canon	S10500	√	√	√	×	√	√	√	√	AK4500_gbl_canon_v1.2.6	---	---	
	S1050	√	×	√	×	√	√	√	×	AK4500_gbl_canon_v1.2.6	---	---	
	S1050 Mark II	√	√	√	×	√	√	√	√	AK4500_gbl_canon_v1.2.6	---	---	
	S1050 Mark IV	√	√	√	×	√	√	√	√	AK4500_gbl_canon_v1.2.6	---	---	
	S10500	√	×	×	×	√	√	√	×	×	AK4500_gbl_canon_v1.2.6	Vw 1.1.1	---
	S10500	√	√	√	×	√	√	√	×	---	Vw 1.0.2	---	
	S105R	√	√	×	×	√	√	√	×	---	Vw 1.0.0	---	
	S105000	√	√	√	×	√	√	√	√	---	---	---	
	M50	√	√	×	×	√	√	√	×	---	AK4500_gbl_canon_v1.2.2	---	---
	M50	√	√	×	×	√	√	√	×	---	AK4500_gbl_canon_v1.2.2	---	---
Panasonic	DMC-GX100	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DMC-LX10	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DC-ZS700K	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DC-ZS200K	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DMC-GH4	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DC-GP90SK	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DC-GP85K	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.1.1	---	
	DC-GH50K-K	√	√	√	×	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.0.2	---
		√	√	√	×	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.0.0	---
	DC-G990K-K	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DC-GP100K	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	---	---	
	DMC-ZS10	M	√	√	√	√	√	×	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.2	---
		S.A.P	√	√	√	√	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.2	---
		M	√	√	√	×	√	×	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.2	---
		S.A.P	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 1.2	---
GH5	M.S.A.P	√	√	√	×	√	√	√	√	AK4500_gbl_panasonic_v1.2.6	Vw 2.3	---	

**AK4500 Camera Compatibility List (Cable Control)**

Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware
Sony	a6000	2.00	USB 2.0 TO Micro(A27). Connect the cable with camera control port on the gimbal and USB port on camera.	1. Take photos 2. Start/stop recording video	1. Select "Network" and then turn off "CMI w/Smartphone" in camera setting. 2. Set up the USB Connection to PC remote in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting/Camera with old version Firmware don't have this feature. 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photos, and then take next photo or recording.	AK4500_HUB_V102
	a6300	2.00		1. Take photos 2. Start/stop recording video	1. Set up the USB Connection to PC remote in camera setting menu. 2. Be able to set up Photo storage location in PC remote setting/Camera with old version Firmware don't have this feature. 3. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photos, and then take next photo or recording.	AK4500_HUB_V104
	a6500	1.10		1. Take photos 2. Start/stop recording video 3. Camera will focus automatically first before taking photo	1. Can control motorized zoom lens to zoom. 2. Can only control digital zoom while using non-motorized lens. 3. Select "Network" and then turn off "CMI w/Smartphone" in camera setting. 4. Set up the USB Connection to PC remote in camera setting menu.	AK4500_HUB_V104
	a6100	2.00		1. Take photos 2. Start/stop recording video	1. Set up the USB Connection to PC remote in camera setting menu. 2. Set up USB Power Supply to CRF in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting/Camera with old version Firmware don't have this feature. 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photos, and then take next photo or recording.	AK4500_HUB_V102
	RX100 IV	1.30		1. Take photos 2. Start/stop recording video	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 3. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 4. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 5. Please set [Auto Review] to be "OFF" when shooting the timelapse video.	AK4500_HUB_V106
	a7R	2.00		1. Take photos 2. Start/stop recording video	1. Select "Network" and then turn off "CMI w/Smartphone" in camera setting. 2. Set up the USB Connection to PC remote in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting/Camera with old version Firmware don't have this feature. 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photos, and then take next photo or recording.	AK4500_HUB_V102
	a7S II	2.00		1. Take photos 2. Start/stop recording video	1. Set up USB Power Supply to CRF in camera setting menu. 2. Be able to set up Photo storage location in PC remote setting/Camera with old version Firmware don't have this feature. 3. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photos, and then take next photo or recording.	AK4500_HUB_V102
	a7R II	4.00		1. Take photos 2. Start/stop recording video	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 3. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 4. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 5. Please set [Auto Review] to be "OFF" when shooting the timelapse video.	AK4500_HUB_V106
	a7R	4.00		1. Take photos 2. Start/stop recording video	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 3. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 4. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 5. Please set [Auto Review] to be "OFF" when shooting the timelapse video.	AK4500_HUB_V106
	ATC	1.00		1. Take photos 2. Start/stop recording video	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 3. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 4. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 5. Please set [Auto Review] to be "OFF" when shooting the timelapse video.	AK4500_HUB_V106
AT51	1.01	1. Take photos 2. Start/stop recording video	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 3. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 4. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 5. Please set [Auto Review] to be "OFF" when shooting the timelapse video.	AK4500_HUB_V106		
Canon	ZH-610	1.00	USB 2.0 to Type-C (C01)	1. Take photos 2. Start/stop recording video	1. Please set the [CMI w/Smartphone] to be off. [Network] → [CMI w/Smartphone] → [OFF] 2. Set "USB Connecting" to be "PC Remote". [Network] → [PC Remote Function] → [PC Remote] → [ON] 3. Set "ISO Inv. Save Dns." to be "Camera Only". [Network] → [PC Remote Function] → [ISO Inv.] → [Camera Only] 4. Please set [Auto Review] to be "OFF" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the GEMAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the character "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal when the camera is in video mode, the gimbal can only control recording video.	AK4500_HUB_V107
	S10 Mark IV	1.1.2	USB 2.0 TO Micro B2 (A22)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102
	S10 Mark II	1.0.5	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102
	S10	1.0.2	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102
	S10	1.0.0	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102
	S10 Mark	1.0.3	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102
	G7X mark II	1.0.1	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video	Please turn off the WiFi connection for Cable control.	AK4500_HUB_V102
	M50 mark II	1.1.0	USB 2.0 TO Micro B21	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V104
	S105 R	1.0.0	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. Due to camera system, please switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. 2. For S105 R/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera will easily crash.	AK4500_HUB_V104
	S105 RP	1.2.0	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. Due to camera system, please switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. 2. For S105 RP/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera will easily crash.	AK4500_HUB_V104
	S105 R6	1.1.1	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. Due to camera system, please switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. 2. For S105 R6/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera will easily crash.	AK4500_HUB_V104
	S105 S16 R	1.1.1K	USB 2.0 to micro (A07)	1. Take photos 2. Start/stop recording video 3. Switch Photo/Video Mode	1. After connecting the cable, be sure to power on the A22023 before the camera and wait for about 5 seconds for successfully connection after camera power on the camera icon on the gimbal screen will light up. 2. When the camera is in photo mode and the gimbal switches to video mode, some type of the camera will not respond to commands.	AK4500_HUB_V107
	S105 SD Mark IV	1.2.1	USB 2.0 to micro (A07)	1. Take photos 2. Start/stop recording video	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to use which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107
	S105 S10D	1.0.0	USB 2.0 to micro(A21)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to use which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107
	M50	1.1.0	USB 2.0 to micro(A21)	1. Take photos 2. Start/stop recording video	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to use which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107
Nikon	Z7	1.00	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. When controlling with gimbal, please make sure Camera Live view function(CV) is on. 3. Turn the camera to video mode in order to control the recording. 4. The lens should work in AF mode when follow focus electronically.	AK4500_HUB_V104(C) 1
	Z6	2.00	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. When controlling with gimbal, please make sure Camera Live view function(CV) is on. 3. Turn the camera to video mode in order to control the recording. 4. The lens should work in AF mode when follow focus electronically.	AK4500_HUB_V104(C) 1
	Z7II	1.00	USB 2.0 TO Micro(A27)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. When controlling with gimbal, please make sure Camera Live view function(CV) is on. 3. Turn the camera to video mode in order to control the recording. 4. The lens should work in AF mode when follow focus electronically. 5. In video mode, there is only indicator shows that Z7II is recording, it won't show up the time of video.	AK4500_HUB_V104(C) 1
	Z6II	1.01	USB 2.0 TO Micro(A27)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. When controlling with gimbal, please make sure Camera Live view function(CV) is on. 3. Turn the camera to video mode in order to control the recording. 4. The lens should work in AF mode when follow focus electronically.	AK4500_HUB_V104(C) 1
	Z6	1.00	USB 2.0 TO Type C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. After connecting the cable, be sure to power on the Feiyu Qing before the camera and wait for about 5 seconds for successfully connection after camera power on. 2. Please make sure the CV is on to use the gimbal to control the camera. 3. Please switch photo / video mode on camera manually.	AK4500_HUB_V104(C) 1
	Z6 II	1.21	USB 2.0 TO Type C (C01)	1. Take photos 2. Start/stop recording video	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. Please switch photo / video mode on camera manually.	AK4500_HUB_V107(C) 1
	Z6 II	1.21	USB 2.0 TO Type C (C01)	1. Take photos 2. Start/stop recording video	1. It takes a few seconds to automatically connect the camera with the gimbal. 2. Please switch photo / video mode on camera manually.	AK4500_HUB_V107(C) 1
Panasonic	S5	1.2	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Camera will focus automatically first before taking photo	1. No need to manually switch camera shooting modes	AK4500_HUB_V104
	GH5	V2.0	USB 2.0 TO Type C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. The photo button of gimbal controls the picture-taking when the camera is in photo mode. It also controls the recording with photo button when the camera is in video mode. 2. Video button of camera is not available to control the recording or switch camera modes with shutter release cable, please directly switch camera mode with camera function knob. 3. Please connect shutter button cable when the gimbal and camera are both off. The sequence to power on: Turn the gimbal on first, and then the camera. The sequence to power off: Turn the camera off, and then the gimbal, remove the shutter release.	AK4500_HUB_V107
		V2.0	Type-C to B21 lens	1. Take photos 2. Start/stop recording video 3. Follow focus electronically	1. Please switch photo / video mode on camera manually.	AK4500_HUB_V107
	GH5	1.2	USB 2.0 TO Type-C (C01)	1. Take photos 2. Start/stop recording video 3. Follow focus electronically (from AK4500_HUB_V104)	1. USB mode of Camera setting should work in PC (Yellow) 2. Cannot use WiFi control and cable control together. 3. The lens should work in MF mode when Follow focus electronically	AK4500_HUB_V104