



### Feiyu Scorp 3 Camera Compatibility

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	1.32	
	RX100 V (RX100M5)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	RX100 VA (RX100M5A)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera.
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	2. Support Optical Zoom. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.
	DSC-RX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	1.32	4. Please make sure the dial on the camera is set to M mode.
	DSC-RX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	1.32	
	DSC-RX10 III (RX10M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	1.32	
	DSC-RX10 IV (RX10M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	A6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera.
	A6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	2. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.
	A6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.06	1.32	3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.
	A6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	1.32	4. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected
	A6700	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1. Set the computer remote control on the camera MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]
	A7C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	1.32	3. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected 4. Please make sure the dial on the camera is set to M mode.
	A7C II (A702C)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]
	A7R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.01	1.32	5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected
	ATS	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	1.32	7. Please make sure the dial on the camera is set to M mode.
	ATS II (A7S2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera.
	A7R II (A7R2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	2. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.
	A7R III (A7R3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.32	3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.
	A7R IV (A7R4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	1.32	4. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected
	A7R IVA (A7RM4A)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	5. After coming from one cable to another, both camera and gimbal need to be rebooted.
	A7RM IV (A7RM4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	7. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected
	A7R V (A7R5)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	1.32	8. Please make sure the dial on the camera is set to M mode.
	A7R VI (A7R6)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	
	A7R VII (A7R7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R VIII (A7R8)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R IX (A7R9)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R X (A7R10)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XI (A7R11)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XII (A7R12)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XIII (A7R13)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XIV (A7R14)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XV (A7R15)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XVI (A7R16)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XVII (A7R17)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XVIII (A7R18)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XIX (A7R19)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XX (A7R20)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXI (A7R21)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXII (A7R22)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXIII (A7R23)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXIV (A7R24)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXV (A7R25)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXVI (A7R26)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXVII (A7R27)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXVIII (A7R28)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXIX (A7R29)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXX (A7R30)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXI (A7R31)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXII (A7R32)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXIII (A7R33)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXIV (A7R34)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXV (A7R35)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXVI (A7R36)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXVII (A7R37)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXVIII (A7R38)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XXXIX (A7R39)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XL (A7R40)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLI (A7R41)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLII (A7R42)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLIII (A7R43)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLIV (A7R44)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLV (A7R45)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLVI (A7R46)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLVII (A7R47)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLVIII (A7R48)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R XLIX (A7R49)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R L (A7R50)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LI (A7R51)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LII (A7R52)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LIII (A7R53)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LIV (A7R54)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LV (A7R55)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LVI (A7R56)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LVII (A7R57)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LVIII (A7R58)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LIX (A7R59)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LX (A7R60)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXI (A7R61)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXII (A7R62)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXIII (A7R63)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXIV (A7R64)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXV (A7R65)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXVI (A7R66)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	A7R LXVII (A7R67)	Type-C to Multi	✓	✓	✓									

A7R (A7RS)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<p>1. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1. Set the computer remote control on the camera. MENU → network → transmission/remote → Computer remote control function → computer remote control → open</p> <p>2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]</p> <p>3. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected.</p> <p>4. Please make sure the dial on the camera is set to M mode.</p>
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✗	✗	✗	✓	1.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Please make sure the dial on the camera is set to M mode.</p>
A7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected.</p>	
A7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Operate digital zoom, the camera's digital zoom function needs to be turned on.</p> <p>3. Please make sure the dial on the camera is set to M mode.</p>	
A7 IV (A7M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Operate digital zoom, the camera's digital zoom function needs to be turned on.</p> <p>3. Please make sure the dial on the camera is set to M mode.</p>	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<p>1. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]</p> <p>2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1. Set the computer remote control on the camera. MENU → network → transmission/remote → Computer remote control function → computer remote control → open</p> <p>3. When using the electronic focusing function of the camera, you need to set the lens mode to AF and camera mode to MF.</p> <p>4. Settings to avoid losing photos when taking photos: Network → Transfer/Remote → PC Remote Control → Still Img. Save Dest. → Camera only.</p> <p>5. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected.</p> <p>6. Please make sure the dial on the camera is set to M mode.</p>	
A9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected.</p>	
A9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Operate digital zoom, the camera's digital zoom function needs to be turned on.</p> <p>3. Please make sure the dial on the camera is set to M mode.</p>	
A9 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Operate digital zoom, the camera's digital zoom function needs to be turned on.</p> <p>3. Please make sure the dial on the camera is set to M mode.</p>	
A1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]</p> <p>5. Please make sure the dial on the camera is set to M mode.</p>	
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	<p>1. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]</p> <p>2. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>3. The camera icon on the gimbal screen lights up after a successful connection.</p> <p>4. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>6. After swaping from one cable to another, both camera and gimbal need to be rebooted.</p> <p>7. Please make sure the dial on the camera is set to M mode.</p>	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<p>1. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]</p> <p>2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1. Set the computer remote control on the camera. MENU → network → transmission/remote → Computer remote control function → computer remote control → open</p> <p>3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]</p> <p>4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC".</p> <p>5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>6. After swaping from one cable to another, both camera and gimbal need to be rebooted.</p> <p>7. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected.</p> <p>8. Please make sure the dial on the camera is set to M mode.</p>	
FDR-AX60	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	<p>Please make sure the dial on the camera is set to M mode.</p>	
FDR-AX700	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	<p>Please make sure the dial on the camera is set to M mode.</p>	
ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Support Optical Zoom. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Please make sure the dial on the camera is set to M mode.</p>	
ZV-1M2	Type-C to Type-C	✓	✓	✓	✗	✓	✓	✓	✗	✗	1.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Please make sure the dial on the camera is set to M mode.</p>	
ZV-E1	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<p>1. After connecting the cable, be sure to power on the gimbal before the camera.</p> <p>2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.</p> <p>3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram.</p> <p>4. Please make sure the dial on the camera is set to M mode.</p>	

	ZV-E10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<ol style="list-style-type: none"> <li>1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]</li> <li>2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On]</li> <li>3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]</li> <li>4. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.</li> <li>5. After connecting the cable, be sure to power on the GIMBAL before the camera.</li> <li>6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC".</li> <li>7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.</li> <li>8. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable, please make sure bluetooth is disconnected.</li> <li>9. Please make sure the dial on the camera is set to M mode.</li> </ol>
	ZV-E10 II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	<ol style="list-style-type: none"> <li>1. Set "USB Connecting" to be "PC Remote".</li> <li>2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]</li> </ol>	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Canon	EOS M50	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.0	1.32	<ol style="list-style-type: none"> <li>1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> <li>2. Switch to "MF" Mode on the lens when use pull focus.</li> <li>3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> </ol>	
	EOS M50 Mark II	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	1.32	<ol style="list-style-type: none"> <li>1. Be sure camera Wi-Fi is off before connecting the cable</li> <li>2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> <li>3. Switch to "MF" Mode on the lens when use pull focus.</li> <li>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> </ol>	
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	1.32	<ol style="list-style-type: none"> <li>1. Be sure camera Wi-Fi is off before connecting the cable</li> <li>2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> <li>3. Switch to "MF" Mode on the lens when use pull focus.</li> <li>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> </ol>	
	PowerShot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.3.0	1.32	<ol style="list-style-type: none"> <li>1. Be sure camera Wi-Fi is off before connecting the cable</li> <li>2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> <li>3. Switch to "MF" Mode on the lens when use pull focus.</li> <li>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> </ol>	
	EOS 200D II (250D)	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.3	1.32		
	EOS 850D	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32		
	EOS 80D	Type-C to Mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	1.32	<ol style="list-style-type: none"> <li>1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> </ol>	
	EOS 90D	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	1.32	<ol style="list-style-type: none"> <li>1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.</li> </ol>	
	EOS 6D	Type-C to Mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.6	1.32	<ol style="list-style-type: none"> <li>2. When using the gimbal to control focus electronically, you may need to switch the lens between MF and M to see which best fits your need.</li> </ol>	
	EOS 6D Mark II	Type-C to Mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	1.32	<ol style="list-style-type: none"> <li>3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> </ol>	
	EOS S0 Mark III	Type-C to Mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	1.32	<ol style="list-style-type: none"> <li>4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.</li> </ol>	
	EOS S0 Mark IV	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	1.32		
	EOS S0S R	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	1.32		
	EOS RP	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.6.0	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. Switch to "MF" Mode on the lens when use pull focus.</li> <li>3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R5S camera as it is easy to cause the camera crash.</li> <li>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.</li> <li>5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.</li> <li>6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.</li> </ol>	
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32		
	EOS R5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.9.0	1.32		
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.8.2	1.32		
	EOS R6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.2	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> </ol>	
	EOS R7	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.3.1	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. Please do not use the release cable to control the video recording while in photo mode in R7 camera as it is easy to cause the camera crash.</li> </ol>	
	EOS R8	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32	Please switch photo / video mode on camera manually.	
	EOS R10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	1.32		
	EOS R50	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> </ol>	
	EOS R50 V	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.37	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> </ol>	
EOS R5C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.5.1	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. Switch to "MF" Mode on the lens when use pull focus.</li> <li>3. Please make sure single tap the shutter button in photo mode, and long press the shutter button about 3 seconds to start/stop video. Otherwise, the camera will get stuck.</li> </ol>		
EOS M200	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32	<ol style="list-style-type: none"> <li>1. Please switch photo / video mode on camera manually.</li> <li>2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> </ol>		
EOS R100	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32	To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.		
EOS R8 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32			
PowerShot V10	Type-C to Type-C	✗	✓	✓	✓	✓	✓	✗	✗	✗	1.0.0	1.32			
EOS R6 Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.2	2.62			
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
	GHS5 (DC-GH55K-K)	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.5	1.37	<ol style="list-style-type: none"> <li>1. Set the USB Mode to be PG(tether) on camera.</li> <li>2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.</li> <li>3. The camera will auto focus when control capture photo.</li> <li>4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> <li>5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.</li> </ol>	
	GHS (DC-GHS)	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	1.32	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	1.32	<ol style="list-style-type: none"> <li>1. Set the USB Mode to be PG(tether) on camera.</li> <li>2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.</li> <li>3. The camera will auto focus when control capture photo.</li> <li>4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.</li> <li>5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.</li> </ol>	
	GH4 (DMC-GH4K)	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	1.32		
69 (DC-69K-K)	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	1.32	Please switch photo / video mode on camera manually.		

Panasonic	S5	Type-C to D02.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	1.32	Please switch photo / video mode on camera manually.
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.00	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	S1H	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.40	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
		Type-C to D02.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	1.32	Please switch photo / video mode on camera manually.
	GH6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.20	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
		Type-C to D02.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	Please switch photo / video mode on camera manually.
	S511	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
Type-C to D02.5mm		✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	Please switch photo / video mode on camera manually.	
S9	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
GH1	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.10	1.32	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Nikon	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.11	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z6II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. The gimbal controls the camera to take photos or videos, which may cause delays and requires patient operation. 3. The camera needs to be set to the recording file and turned on 4. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z6III	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.02	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z7	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z7II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z8	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.01	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z50	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.50	1.32	1. Please switch photo / video mode on camera manually. 2. After connecting the cable, be sure to power on the camera, then power on the gimbal. 3. Please finish recording before playback the album. 4. To pull focus with gimbal, the focus mode toggle on the camera cannot be MF mode.
	Z50II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode toggle on the camera cannot be MF mode.
	Z f	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.32	1. When the camera set up with photo mode, please do not single tap the shutter button, but long press the shutter button able 3 seconds, otherwise, the camera may get stuck. 2. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode. 3. Please switch photo/ video mode on camera manually.
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	D7500	Type-C to Micro	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on 2. Control the camera with the gimbal, the camera Live View function needs to be enabled 3. Gimbal can control camera recording only when the camera is turned on in video recording mode 4. The camera screen does not show the duration of the video, but only lights 5. The camera button is unavailable when connected to the gimbal 6. When controlling the electronic focus, the lens needs to be in MF mode and is slow

	D850	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	1.32	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on. 2. Control the camera with the gimbal, the camera Live View function needs to be enabled. 3. Gimbal can control camera recording only when the camera is turned on in video recording mode. 4. If you go back to the album and play the video, you have to reconnect to control it again.
	Z511	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.37	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode toggle on the camera cannot be MF mode.
	ZR	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.01	2.61	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, please set the camera's focusing mode to AF.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Fujifilm	X-T20	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.
	X-T30	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. Please switch photo/ video mode on camera manually.
	X-T30 II	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. Please switch photo/ video mode on camera manually.
		Type-C to Type-C	✗	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	MENU→NETWORK/USB SETTING→USB NETWORK SHARING SHOOTING AUTOMATIC MENU→CONNECTION SETTING→CONNECTION MODE→USB TETHER AUTO 2. Due to camera system reasons, it does not support taking photos and does not support plugging and unplugging camera control cables with power on.
	X-A5	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	1.32	
	X-A7	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.
	X-T100	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	1.32	
	X-T200	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. Please switch photo/ video mode on camera manually.
	X-T3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	1.32	1. Make sure to connect the cable to camera's 02.5mm port. 2. Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	
	X-T5	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	1.32	Please switch photo/ video mode on camera manually.
	X-S10	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. Please switch photo/ video mode on camera manually.
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1. MENU→NETWORK/USB SETTING→USB NETWORK SHARING SHOOTING AUTOMATIC MENU→CONNECTION SETTING→CONNECTION MODE→USB TETHER AUTO 2. The camera's button function is not supported. If you need to use it, please disconnect the camera control cable or put the gimbal into sleep mode. If you need to switch between the camera's recording mode and shooting mode, you need to restart the camera or put the gimbal into sleep mode to switch.
	X-S20	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.11	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. Please switch photo/ video mode on camera manually.
	X-E3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	1.32	
	GFX 100S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.32	1.32	Please switch photo/ video mode on camera manually.
	X-H1	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	1.32	
	X-H2S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	Please switch photo/ video mode on camera manually.
	X-H2	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.21	1.32	Please switch photo/ video mode on camera manually.
	X-T50	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.10	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.
X100V	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.	
X100VI	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.10	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.	
X-M5	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface. video Settings > Microphone/Remote shutter Settings/remote control 2. For both vlog mode and video mode, please select "Remote" for "Microphone/Remote Shutter Settings". 3. Please switch photo/ video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
SIGMA	FP	Type-C to Type-C	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	1.32	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Black magic design	BMPOC 6K	Type-C to Type-C	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	1.32	
	BMPOC 4k	Type-C to Type-C	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	1.32	
Notice: 1. "✓" Means Support this function. "✗" Means Do not Support. 2. When connecting by Type C to TRS3.5 and Type C to TRS2.5, the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in recording mode. 3. This product's functionality depends entirely on the software interface of the compatible camera. Camera manufacturers may modify, restrict, or disable related interfaces through software upgrades, resulting in the permanent malfunction of some or all of this product's functions. This is not considered a product quality issue, and we will not be liable for compensation. We recommend that you consult our technical support to confirm compatibility before upgrading your camera firmware.														