



## Feiyu SCORP Camera Compatibility (Cable Control)

| Brand     | Camera Model                     | Cable                            | Capture Photo | Start/ Stop Recording Video | Switch Photo/ Video Mode | Playback | Shutter Speed Adjustment | Aperture Adjustment | ISO Adjustment | Halfway Press To Focus | Pull Focus | Zoom Control (digital or optical) | Camera Firmware Version | HUB Version Info.  | Remark   |
|-----------|----------------------------------|----------------------------------|---------------|-----------------------------|--------------------------|----------|--------------------------|---------------------|----------------|------------------------|------------|-----------------------------------|-------------------------|--|--|
| Sony      | RX100 III (RX100M3)              | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   | 1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.<br>2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.<br>3. Please set [Auto Review] to be "Off" when shooting the timelapse video;<br>4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.   |
|           | RX100 IV (RX100M4)               | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.30                    | HUB_V103   |  |
|           | RX100M5A                         | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | RX100 VI (RX100M6)               | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   |  |
|           | RX100 VII (RX100M7)              | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   |  |
|           | ZV-1                             | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.0                     | HUB_V103   |  |
|           | ZV-E10                           | Type-C to Type-C (C02)           | √             | √                           | √                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.00                    | HUB_V103   |  |
|           | DSC-WX500                        | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.0                     | HUB_V103   |  |
|           | DSC-HX90                         | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.0                     | HUB_V103   |  |
|           | DSC-RX10 III                     | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.0                     | HUB_V103   |  |
|           | DSC-RX10 IV                      | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | α6100                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   | 1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.<br>2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.<br>3. Please set [Auto Review] to be "Off" when shooting the timelapse video;<br>4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.   |
|           | α6300                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | α6400                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   |  |
|           | α6500                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | α6600                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | A7S                              | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 3.20                    | HUB_V103   |  |
|           | α7S II                           | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | A7R                              | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 2.00                    | HUB_V103   |  |
|           | α7R II                           | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 4.00                    | HUB_V103   |  |
|           | α7R III                          | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 3.01                    | HUB_V103   |  |
|           | α7R IV                           | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   |  |
|           | α7R M4A                          | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.00                    | HUB_V103   |  |
|           | α7 II (A7M2)                     | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 4.00                    | HUB_V103   |  |
|           | α7 III (A7M3)                    | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 3.10                    | HUB_V103   |  |
|           | α9                               | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 6.00                    | HUB_V103   |  |
|           | α9 II                            | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 3.00                    | HUB_V103   |  |
|           | A7C                              | Type-C to Type-C (C02)           | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 1.0                     | HUB_V103   | 1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.<br>2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]<br>3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On]<br>4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]<br>5. Please set [Auto Review] to be "Off" when shooting the timelapse video;<br>6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.   |
|           | α1                               | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.01                    | HUB_V103   | 1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.<br>2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.<br>3. Please set [Auto Review] to be "Off" when shooting the timelapse video;<br>4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]<br>5. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.  |
|           | α7S III                          | Type-C to Multi                  | √             | √                           | √                        | √        | ×                        | ×                   | ×              | √                      | ×          | √                                 | 1.01                    | HUB_V103   |  |
| Canon     | EOS M50                          | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.0                   | HUB_V103   | 1. Feiyu SCORP can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually.<br>2. switch to "MF" Mode on the lens when use pull focus.<br>3. When shooting timelapse video, please set the Canon camera "Image Review" to be off  |
|           | EOS M50 Mark II                  | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.00                    | HUB_V103   |  |
|           | EOS M6 Mark II                   | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.0                   | HUB_V103   |  |
|           | Powershot G7 X Mark III          | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.1                   | HUB_V103   | 1. Be sure camera Wi-Fi is off before connecting the cable<br>2. Feiyu SCORP can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually.<br>3. Switch to "MF" Mode on the lens when use pull focus.<br>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off  |
|           | EOS 200D II                      | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.0.0                   | HUB_V103   | 1. Please switch photo / video mode on camera manually.<br>2. switch to "MF" Mode on the lens when use pull focus.<br>3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.  |
|           | EOS 80D                          | Type-C to mini ( B02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.2                   | HUB_V103   |  |
|           | EOS 90D                          | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.0                   | HUB_V103   |  |
|           | EOS 6D                           | Type-C to mini ( B02) (Optional) | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | HUB_V103                |  |  |
|           | EOS 6D Mark II                   | Type-C to mini ( B02) (Optional) | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | HUB_V103                |  |  |
|           | EOS 5D Mark III                  | Type-C to mini ( B02) (Optional) | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.3.5                   | HUB_V103   |  |
|           | EOS 5D Mark IV                   | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.1.2                   | HUB_V103   |  |
|           | EOS 5DS R                        | Type-c to micro (A03)            | √             | √                           | √                        | √        | √                        | √                   | √              | ×                      | ×          | ×                                 | 1.1.1                   | HUB_V103   |  |
|           | EOS RP                           | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.3.0                   | HUB_V103   |  |
|           | EOS R                            | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.0.0                   | HUB_V103   | 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.<br>5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.  |
|           | EOS R5                           | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.1.1                   | HUB_V103   | 1. Please switch photo / video mode on camera manually.<br>2. switch to "MF" Mode on the lens when use pull focus.<br>3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash.<br>4. When shooting timelapse video, please set the Canon camera "Image Review" to be off<br>5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.<br>6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording. |
| EOS R6    | Type-C to Type-C (C02)           | √                                | √             | ×                           | √                        | √        | √                        | √                   | ×              | √                      | ×          | 1.1.1                             | HUB_V103                | 1. Please toggle photo / video mode on camera manually.<br>2. switch to "MF" Mode on the lens when use pull focus.<br>3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash.<br>4. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.<br>5. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording. |  |
| Panasonic | GH5S                             | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.2                     | HUB_V103   | 1. Set the USB Mode to be PC(tether) on camera.<br>2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.<br>3. Feiyu SCORP can switch photo/ video mode in P, A, S, M shooting mode.<br>4. The camera will auto focus when control capture photo.  |
|           | GH4                              | Type-C to DC2.5mm                | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 2.7                     | HUB_V103   |  |
|           | G9                               | Type-C to DC2.5mm                | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 2.00                    | HUB_V103   |  |
| S5        | Type-C to DC2.5mm                | √                                | √             | ×                           | √                        | ×        | ×                        | ×                   | √              | ×                      | ×          | 2.00                              | HUB_V103                | 1. Please switch photo / video mode on camera manually.<br>2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.<br>3. Feiyu SCORP can switch photo/ video mode in P, A, S, M shooting mode.<br>4. The camera will auto focus when control capture photo.  |  |
| Nikon     | Z7                               | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.00                    | HUB_V103   | 1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on<br>2. Please switch photo / video mode on camera manually.   |
|           | Z7 II                            | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.00                    | HUB_V103   |  |
|           | Z5                               | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 2.00                    | HUB_V103   |  |
|           | Z6                               | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 2.00                    | HUB_V103   |  |
|           | Z6 II                            | Type-C to Type-C (C02)           | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.00                    | HUB_V103   |  |
|           | Z50                              | Type-C to micro (A03)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | ×          | ×                                 | 1.00                    | HUB_V103   |  |
| D7500     | Type-C to micro (A03)            | √                                | √             | ×                           | √                        | ×        | ×                        | ×                   | ×              | ×                      | ×          | 1.00                              | HUB_V103                | 1. After connecting the cable, be sure to power on the AK2000S before the camera and wait for about 6 seconds for successfully connection after camera power on<br>2. Please make sure the LV is on to use the gimbal to control the camera.<br>3. The Feiyu SCORP can start/ stop video recording only if the camera is turn on under video mode.<br>4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration.  |  |
| Fujifilm  | X-T20                            | Type-C to TRS2.5(T02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 2.01                    | HUB_V103   | 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu<br>2. After switch to video mode on camera manually, AK2000S can control camera to start recording.   |
|           | X-T30                            | Type-C to TRS2.5(T02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 1.00                    | HUB_V103   |  |
|           | X-A5                             | Type-C to TRS2.5(T02)            | √             | ×                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 2.00                    | HUB_V103   |  |
|           | X-A7                             | Type-C to TRS2.5(T02)            | √             | ×                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.00                    | HUB_V103   |  |
|           | X-T100                           | Type-C to TRS2.5(T02)            | √             | ×                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 2.00                    | HUB_V103   |  |
|           | X-H1                             | Type-C to TRS2.5(T02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 2.01                    | HUB_V103   |  |
|           | X-T3                             | Type-C to TRS2.5(T02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 3.01                    | HUB_V103   |  |
|           | X-T4                             | Type-C to TRS2.5(T02)            | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.00                    | HUB_V103   |  |
|           | X-S10                            | Type-C to TRS3.5(T03) (Optional) | √             | √                           | ×                        | √        | ×                        | ×                   | ×              | ×                      | √          | ×                                 | 1.02                    | HUB_V103   |  |
| X-T200    | Type-C to TRS3.5(T03) (Optional) | √                                | √             | ×                           | √                        | ×        | ×                        | ×                   | ×              | √                      | ×          | 1.00                              | HUB_V103                |  |  |
| X-E3      | Type-C to TRS2.5(T02)            | √                                | √             | ×                           | √                        | ×        | ×                        | ×                   | ×              | √                      | ×          | ×                                 | 1.22                    | HUB_V103   |  |

Notice:  
 1. "√" Means Support this function, "×" Means Do not Support;  
 2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;  
 3. When connecting by Type C to TRS3.5(T03), Type C to TRS2.5(T02) and USB2.0 to Mini USB (B01), the camera icon on the gimbal screen will not light up.