



Feiyu SCORP Camera Compatibility

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HB Version Info.	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	HUB_V103	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103	2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V103	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V103	
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V103	
	DSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V103	
	DSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103	
ZV-E10	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V103	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video; 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.	
a 6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103		
a 6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103		
a 6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103		
a 6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103		
a 6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103		
A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	HUB_V103		
a7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103		
A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V103		
a7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.	
a7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	HUB_V103	2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.	
a7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103	3. Please set [Auto Review] to be "Off" when shooting the timelapse video;	
a7R IV	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V105		
a7R MA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103		
a7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V103		
a7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	HUB_V103		
a9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	HUB_V103		
a9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	HUB_V103		
A7C	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	HUB_V105	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video;	
a1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video; 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
a7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video; 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
a7S III	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	HUB_V105	1.1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V105	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. After connecting the cable, be sure to power on the gimbal before the camera. 3. The camera icon on the gimbal screen lights up after a successful connection. 4. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 5. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	
FX3	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V105	1.1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HB Version Info.	Remark
Canon	EOS M50	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.0	HUB_V103	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS M50 Mark II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.00	HUB_V103	2. switch to "MF" Mode on the lens when use pull focus.
	EOS M6 Mark II	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.0	HUB_V103	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	Powershot G7 X Mark III	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.1	HUB_V103	1. Be sure camera Wi-Fi is off before connecting the cable 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 200D II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.0	HUB_V103	
	EOS 850D	Type-C to micro (A03)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.0.0	HUB_V105	
	EOS 80D	Type-C to mini (B02) (Optional)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.2	HUB_V103	
	EOS 90D	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.0	HUB_V103	
	EOS 6D	Type-C to mini (B02) (Optional)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.1.8	HUB_V103	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS 6D Mark II	Type-C to mini (B02) (Optional)	✓	✓	✓	✓	✓	✓	✓	✗	✓	1.1.1	HUB_V103	2. when using the gimbal to control focus electronically, you may need to switch the lens between MF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 5D Mark III	Type-C to mini (B02) (Optional)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.3.5	HUB_V103	4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.
	EOS 5D Mark IV	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.1.2	HUB_V103	
	EOS 5DS R	Type-c to micro (A03)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V103	
	EOS RP	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.3.0	HUB_V103	1. Please switch photo / video mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus.
	EOS R	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.0	HUB_V103	3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
EOS R5	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.1.1	HUB_V103	5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus. 6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.	
EOS R6	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.1.1	HUB_V103		

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HB Version Info.	Remark
Panasonic	GH5S	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.2	HUB_V103	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	HUB_V105	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.
	GH5	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	2.60	HUB_V105	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	HUB_V103	
	69	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	1. Please switch photo / video mode on camera manually.
S5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	1. Please switch photo / video mode on camera manually.	
S5	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✓	✗	2.00	HUB_V103	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HB Version Info.	Remark
Nikon	Z7	Type-C to Type-C (C02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
	Z7 II	Type-C to Type-C (C02)	✓	✓	✗	✗	✗	✓	✗	✗	✗	1.00	HUB_V103	
	Z5	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on.
	Z6	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	2. Please switch photo / video mode on camera manually.
	Z6 II	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
	Z50	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
07500	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on. 2. Please make sure the LV is on to use the gimbal to control the camera. 3. The Feiyu SCORP can start/ stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HB Version Info.	Remark
Fujifilm	X-T20	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T30	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	2. After switch to video mode on camera manually, The Feiyu SCORP can control camera to start recording.
	X-A5	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	
	X-A7	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T100	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	
	X-H1	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V103	
	X-T3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	HUB_V103	1. Make sure to connect Feiyu SCORP to the camera e2.5mm port. 2. Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5(T02)	✓	✓	✓	✗								