

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Fujifilm	X-T20	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	Gimbal_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually. The Feiyu SCORP can control camera to start recording.
	X-T30	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V103	
	X-A5	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	Gimbal_V105	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	1.00	Gimbal_V103	
	X-T100	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	Gimbal_V103	
	X-H1	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	Gimbal_V103	
	X-T3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	3.01	Gimbal_V103	1. Make sure to connect Feiyu SCORP to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V103	
	X-S10	Type-C to TRS3.5 (Optional)	√	√	√	×	×	×	√	×	×	1.02	Gimbal_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.
	X-T200	Type-C to TRS3.5 (Optional)	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V103	
	X-E3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.22	Gimbal_V103	
	X-T30 II	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V106	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. Please switch photo/ video mode on camera manually.
X100V	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.00	Gimbal_V106	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. After switch to video mode on camera manually. The Feiyu SCORP can control camera to start recording.	
SIGMA	FP	TypeC to TypeC	×	√	×	×	×	×	×	×	×	4.00	Gimbal_V106	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.

Notice:

1. "√" Means Support this function, "×" Means Do not Support;

2. When connecting by Type C to TRS3.5, Type C to TRS2.5 and USB2.0 to Mini USB , the camera icon on the gimbal screen will not light up. long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.