	2023 Doc. Version: 1.0.8				Fe	iyu Sr	CORP (	Camera C	ompat;	bilitv			
Camera Model RX100 III (RX100M	Cable Cable Type-C to Multi	Capture Photo √	Start∕ Stop Recording Video √	Playback √	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment X	Halfway Press To Focus √	-	Digital Zoom Control √	Camera Firmware Version 2.00	Gimbal Firmware Version Gimbal_V103	Remark
RX100 Ⅳ (RX100M RX100M5A RX100 Ⅵ (RX100M	Type-C to Multi	\ \ \	ل ب ب	ل ب ب	× × ×	× × ×	× × ×	√ √ √	× × ×	ل ب ب	1. 30 2. 00 1. 00	Gimbal_V103 Gimbal_V103 Gimbal_V103	1.After connecting the cable, be sure to power on the Feiyu SC before the camera.
RX100 VII (RX100M ZV-1 DSC-WX500 DSC-HX90	7) Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\ \ \ \	ل ب ب ب	\ \ \ \	× × ×	× × × ×	× × × ×	\ \ \ \	× × ×	7 7 7 7	1.00 1.0 1.0	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V103	2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;
DSC-RX10 III DSC-RX10 IV	Type-C to Multi Type-C to Multi	4 4 4	マ レ レ レ	√ √ √	× × ×	× ×	× ×	7 7 7	× × ×	4 4 4	1.0	Gimbal_V103 Gimbal_V103 Gimbal_V103	
													1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 3.Set"Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]
ZV-E10	Type-C to Type-C	V	V	~	×	×	×	×	×	×	1. 00	Gimbal_V103	4. Please set [Auto Review] to be"Off" when shooting the timela video or Panorama; 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays t characters "PC".
α 6100	Type-C to Multi	~	~	~	×	×	×	4	×	4	1. 00	Gimbal_V103	7. When the camera is in photo mode, you can switch between pho and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
α 6300 α 6400 α 6500 α 6600	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\ \ \ \ \		\ \ \ \ \	× × × ×	× × × ×	× × × ×	\ \ \ \ \	× × × ×	\ \ \ \ \	2.00 1.00 2.00 1.10	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V103	
A 7S a 7S    A 7R a 7R	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	ノ ノ ノ ノ	√ √ √ √	\ \ \ \	× × × ×	× × ×	× × ×	\ \ \ \	× × × ×	لا بر بر	3. 20 2. 00 2. 00 4. 00	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V103	1.After connecting the cable, be sure to power on the Feiyu SC before the camera. 2.Please set [Zoom Setting] to be "ClearImage Zoom" or "Digita
a 7R III a 7R IV	Type-C to Multi Type-C to Multi Type-C to Type-C	マ ノ ノ ノ	√ √ √ √	√ √ √ √	× × × √	× × ×	× × ×	√ √ √ √	× × × ×	4 4 4 ×	3. 01 1. 00 1. 00	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V105	2.Please set [200m Setting] to be clearingge 200m or Digita Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;
α 7R M4A α 7 ΙΙ (Α7M2) α 7 ΙΙΙ (Α7M3) α 9	Type-C to Multi Type-C to Multi Type-C to Multi Type-C to Multi	\ \ \ \ \	\ \ \ \	\ \ \ \	× × × ×	× × × ×	× × × ×	\ \ \ \ \	× × × ×	\ \ \ \ \	1.00 4.00 3.10 6.00	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V103	
a9	Type-C to Multi	7	~	~	×	×	×	V	×	1	3. 00	Gimbal_V103	1. After connecting the cable, be sure to power on the Feiyu SC before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]
A 7C	Type-C to Type-C	J	V	V	V	~	~	J	×	×	1.0	Gimbal_V105	3. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the
													timelapse video or Panorama; 1. After connecting the cable, be sure to power on the Feiyu SG before the camera. 2. Support Optical Zoom when equiped with a Motorize Lens; Plea
α 1	Type-C to Multi	V	V	V	×	×	×	V	×	V	1. 01	Gimbal_V103	set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" t enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]
ony	Type-C to Multi	~	~	~	×	×	×	4	×	V	1. 01	Gimbal_V103	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Support Optical Zoom when equiped with a Motorize Lens; Plea set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" t enable Digital Zoom.
													3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama: 4.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]
a 7S III													1. Please set the [Gtr1 w/ Smartphone] to be off: (Network) → [Gtr1 w/ Smartphone] → [Gff] 2. set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 3. set ""Still Img. Save Dest."" to be ""Camera Only"": (Network) → [PC Remote Function] → [Still Img. Save Dest.]→
	Type-C to Type-C	V	V	J	V	V	V	V	×	×	1. 01	Gimbal_V105	[Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays t characters "PC". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 6. after swaping from one cable to another, both camera and gim
													o arter swaping from one cable to another, both camera and gim need to be rebooted. 1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]
	Type-C to Multi	~	J	V	×	×	×	Ŷ	×	×	1. 00	Gimbal_V105	INETWORK → LUTI W SMARTPHONE] → LUTI 2. After connecting the cable, be sure to power on the gimbal before the camera. 3. The camera icon on the gimbal screen lights up after a successful connection. 4. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digita Zoom" to enable Digital Zoom.
													Zoom to enable Digital Zoom 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 6. after swaping from one cable to another, both camera and gim need to be rebooted.
FX3													<ol> <li>Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]</li> <li>Set "USB Connecting" to be "PC Remote":</li> <li>(Network) → [PC Remote Function] → [PC Remote] → [On]</li> <li>Set "Still Img. Save Dest." to be ""Camera Only":</li> <li>(Network) → [PC Remote Function] → [Still Img. Save Dest] →</li> </ol>
	Type-C to Type-C	V	J	~	V	J	V	J	×	×	1.00	Gimbal_V105	$(Network) \rightarrow [PC Remote Function] \rightarrow [Still Img. Save Dest.] \rightarrow [Camera Only] (A. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays to characters "PC". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama:$
													timelapse video or Panorama; 6.after swaping from one cable to another, both camera and gir need to be rebooted.
	Type-C to Multi	~	J	V	×	×	×	J	×	V	1.00	Gimbal_V105	<ol> <li>After connecting the cable, be sure to power on the gimbal before the camera.</li> <li>Operate digital zoom, the camera's digital zoom function neer to be turned on.</li> </ol>
A7M4													<ol> <li>Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]</li> <li>Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On]Set the "USB Connection" to be "Commuter Remote". The remotific setting</li> </ol>
	Type-C to Type-C	V	V	V	V	J	J	V	×	×	1.00	Gimbal_V106	"USB Connection" to be "Computer Remote". The specific settin method is as follows: Step 1: Set the computer remote control the camera. MENU — network — transmission/remote — Computer remote control function — computer remote control — open 3. When using the electronic focusing function of the camera, need to set the lens mode to AF and camera mode to MF. 4. Settings to avoid losing photos when taking photos:
													<ol> <li>A: Settings to avoid losing photos when taking photos: Network → Transfer/Remote → PC Remote Control → Still Img. Save Dest. → Gamera only.</li> <li>After connecting the cable, be sure to power on the gimbal before the camera.</li> </ol>
A7RM IV	Type−c to Multi	4	v	J	×	×	×	×	×	~	1. 10	Gimbal_V104	before the camera. 2. Support Optical Zoom when equiped with a Motorize Lens; Ple set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" - enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;
FDR-AX60 FDR-AX700	Type-C to Multi Type-C to Multi	×	J J	ب ب	×	×	×	J J	×	ب ب	1.00	Gimbal_V106 Gimbal_V120	
nd Camera Model	Cable	× Capture Photo	√ Start/ Stop Recording Video	√ Playback √	× Shutter Speed Adjustment	× Aperture Adjustment	× ISO Adjustment √	√ Halfway Press To Focus ×		√ Digital Zoom Control ×	Comera Firmware	Gimbal_V120 Gimbal Firmware Version Gimbal_V103	Remark 1.When taking photos or recording video from the gimbal, it i
EOS M50 EOS M50 Mark II EOS M6 Mark II	Type-C to Micro Type-C to Micro Type-C to Type-C	7 7 7	J J J	7 7 7	√ × √	√ × √	√ × √	× × ×	√ √ √	× × × ×	1. 1. 0 1. 00 1. 0. 0	Gimbal_V103 Gimbal_V103 Gimbal_V103	<ol> <li>When taking photos or recording video from the gimbal, it i recommended to manually set the camera to the corresponding m otherwise control failure may occur.</li> <li>switch to "WF" Mode on the lens when use pull focus.</li> <li>When shocting timelapse video, please set the Canon camera "Image Review" to be off</li> </ol>
Powershot G7 X Mark III	Type-C to Type-C	Å	~	V	Å	~	V	×	$\checkmark$	×	1. 0. 1	Gimbal_V103	<ol> <li>Be sure camera Wi-Fi is off before connecting the cable</li> <li>When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding m otherwise control failure may occur.</li> <li>Switch to "MF" Mode on the lens when use pull focus.</li> </ol>
EOS 200D    (250 EOS 850D	D) Type-C to Micro Type-C to Micro	√ √		ل ب	× √	× √	× √	×××	~	×	1. 0. 0	Gimbal_V103 Gimbal_V105	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
EOS 80D EOS 90D EOS 6D	Type-C to Mini (Optional) Type-C to Micro Type-C to Mini	ل ب ب	لا ب ب	۲ ۲ ۲	××××	×××	× ×	×××××××××××××××××××××××××××××××××××××××	\ \ \	× × ×	1. 0. 2 1. 0. 0 1. 1. 8	Gimbal_V103 Gimbal_V106 Gimbal V103	<ol> <li>When taking photos or recording video from the gimbal, it i recommended to manually set the camera to the corresponding m otherwise control failure may occur.</li> <li>When using the gimbal to control focus electronically, you need to switch the lens between AF and WF to see which best for</li> </ol>
EOS 6D Mark II EOS 5D Mark III	(Optional) Type-C to Mini (Optional) Type-C to Mini (Optional)	~ ~ ~	~ ~ ~	~ ~	√ √ ×	√ √ ×	√ √ ×	×	√ √ √	× ×	1. 1. 1 1. 3. 5	Gimbal_V103	your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 4. EOS 90D/EOS 200D camera needs to be powered on in photo mo otherwise the camera screen may not display.
EOS 5D Mark IV EOS 5DS R EOS RP	Type-C to Micro Type-c to Micro Type-C to Type-C	بر بر بر	۲ ۲ ۲	ل ب ب	× √ ×	× ✓ ×	×	× × ×	√ × √	× × ×	1. 1. 2 1. 1. 1 1. 3. 0	Gimbal_V103 Gimbal_V103 Gimbal_V103	
EOS R EOS R5	Type-C to Type-C Type-C to Type-C	ل ب	ب ب	J	√ ×	√ ×	√ ×	×	√ √	×	1. 0. 0	Gimbal_V103 Gimbal_V103	<ol> <li>Please switch photo / video mode on camera manually.</li> <li>Switch to "MF" Mode on the lens when use pull focus.</li> <li>Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is eas cause the camera crash.</li> <li>When shocting timelapse video, please set the Canon camera</li> </ol>
EOS R6	Type-C to Type-C	V	J	~	J	J	J	×	$\checkmark$	×	1. 1. 1	Gimbal_V103	"Image Review" to be off 5.1t shows that using the adapter with the EF Mount Lens will increase the delay of pull focus. 6.1f connect camera to external device via HDMI Cable, need t set the "HDMI Display" to be display both on camera screen an the other device to control capture photo or video recording.
													1. After the gimbal and camera are turned on, you need to wait
EOS R5C	Type-C to Type-C	J	v	V	V	V	V	×	V	×	1. 0. 0. 1	Gimbal_V1.06	about 10 seconds to establish a connection 2. When the camera is in photo file, the gimbal can control ta and recording; 3. When the camera is in video file, the gimbal can control recording 4. When you look back at an image, you have to switch to photo and when you look back at a video, you have to switch to video
EOS R7	Type-C to Type-C	~	√	~	~	~	~	×	1	×	1. 0. 1	Gimbal_V1.06	ang when you look back at a video, you have to switch to vide
EOS R10 EOS R8 EOS R50	Type-C to Type-C Type-C to Type-C Type-C to Type-C	√ √ √	ل ب ب	J J J	√ √ √	√ √ √	۷ ۷ ۷	× × ×	√ √ √	× × ×	1. 0. 1 1. 0. 0 1. 0. 0	_	Please switch photo / video mode on camera manually. 1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode toggle on the cam should be set to MF.
EOS Ró Mark II Ind Camera Model	Type-C to Type-C Cable	√ Capture	√ Start∕ Stop	√ Playback	√ Shutter Speed		√ 150	× Halfway Press	√ Pull Focus	X Digital Zoom Control		Gimbal Firmware	<ol> <li>Please switch photo / video mode on camera manually.</li> <li>To pull focus with gimbal, the focus mode toggle on the cam should be set to MF.</li> <li>Remark</li> </ol>
	Valite	Photo	Recording Video		Adjustment	Adjustment					Version	Version	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo.
GH5S	Type-C to Type-C	V	~	V	×	×	×	×	$\checkmark$	×	1.2	Gimbal_V103	<ol> <li>The camera will alto focus withen function capture protoc.</li> <li>A. To pull focus with gimbal, the focus mode toggle on the cam should be set to MF.</li> <li>When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.</li> </ol>
	Type-C to DC2.5mm	J	~	V	×	×	×	V	×	×	2. 60	Gimbal_V105	When switched to Photo mode, the camera won't respond to vide capturing commands; when switched to video mode, the camera w respond to photo-capturing commands. 1. Set the USB Mode to be PC(tether) on camera.
GH5	Type-C to Type-C	V	V	1	×	×	×	×	V	×	2. 60	Gimbal_V105	<ol> <li>Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.</li> <li>The camera will auto focus when control capture photo.</li> <li>To pull focus with gimbal, the focus mode toggle on the cam should be set to MF.</li> <li>When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.</li> </ol>
6H4 69	Type-C to DC2.5mm Type-C to DC2.5mm	بر ب	J J	ل ب	×××	×××	×××	J J	× ×	× ×	2. 7 2. 00	Gimbal_V103 Gimbal_V103	Please switch photo / video mode on camera manually.
onic S5	Type-C to DC2.5mm Type-C to Type-C	~	√ √	~	×	×	×	√ ×	× √	×	2.00	Gimbal_V103 Gimbal_V103	Please switch photo / video mode on camera manually. 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time 3. The camera will auto focus when control capture photo.
	Type-C to DC2.5mm	4	J	J	×	×	×	J	×	×	1. 20		3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the cam should be set to MF. Please switch photo / video mode on camera manually.
GH6	Type-C to Type-C	v 	J	~	×	×	×	×	~	×	1. 20	Gimbal_V106	<ol> <li>Set the USB Mode to be PC(tether) on camera.</li> <li>Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time 3. The camera will auto focus when control capture photo.</li> </ol>
	Type-C to DC2.5mm	~	↓ ↓	~	×	×	×	~	×	×	1. 20		3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the cam should be set to MF. Please switch photo / video mode on camera manually.
S5 I I	Type-C to Type-C	~	J	~	×	×	×	×	V	×	1.00	Gimbal_V120	<ol> <li>Set the USB Mode to be PC(tether) on camera.</li> <li>Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.</li> <li>The camera will auto focus when control capture photo.</li> <li>To pull focus with gimbal, the focus mode toggle on the came</li> </ol>
Ind Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus		Digital Zoom Control	Version	Version	4. To pull focus with gimbal, the focus mode toggle on the cam should be set to MF. Remark
27 27    25 26	Type-C to Type-C Type-C to Type-C Type-C to Type-C Type-C to Type-C	\ \ \ \ \	\ \ \ \ \	× √ √ √	× × × ×	× × × ×	× × × ×	× × × ×	× × × ×	× × × ×	1.00 1.00 1.11 2.00	Gimbal_V103 Gimbal_V103 Gimbal_V103 Gimbal_V103	<ol> <li>After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds f successfully connection after camera power on 2 Blacen cmitch beto. Under med on camera moundly.</li> </ol>
Z6 Z6    Z50	Type-C to Type-C Type-C to Type-C Type-C to Micro		7 7 7	7 7 7	× × ×	× × ×	× × ×	× × ×	× × ×	× × ×	2.00 1.00 1.00	Gimbal_V103 Gimbal_V103 Gimbal_V103	<ol> <li>Please switch photo / video mode on camera manually.</li> <li>After connecting the cable, be sure to power on the Feiyu</li> </ol>
Z fo	Type-C to Type-C	Å	J	V	×	×	×	×	V	×	1. 10	Gimbal_V105	gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set camera's focusing mode to AF-FS or AF-FC. When operating dig focus in photo mode, the focus mode of the camera cannot be M
		$\left  \right $											mode. 1. After connecting the cable, be sure to power on the Feiyu
con D7500	Type-C to Micro	4	V	×	×	×	×	×	J	×	1. 10	Gimbal_V120	gimbal before the camera and wait for about 6 seconds to hear "click" sound for successfully connection after camera power 2. Control the camera with the gimbal, the camera Live View function needs to be enabled 3. Gimbal can control camera recording only when the camera is turned on in video recording mode 4. The camera screen does not show the duration of the video. I
													4. The camera screen does not show the duration of the video, only lights 5. The camera button is unavailable when connected to the gimb 6. When controlling the electronic focus, the lens needs to be AF mode and is slow
													<ol> <li>After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power 2 Control the camera with the gimbal, the camera Live View</li> </ol>
D850	Type-C to Micro	V	V	V	×	×	×	×	V	×	1. 2	Gimbal_V120	2. Control the data with the gimbal, the camera is the view function needs to be enabled 3. Gimbal can control camera recording only when the camera is turned on in video recording mode 4. If you go back to the album and play the video, you have to reconnect to control it again.
Z30	Type-C to Type-C	Å	J	~	×	×	×	×	V	×	1. 00	Gimbal_V104	<ol> <li>After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.</li> <li>To operate digital focusing in video mode, you need to set camera's focusing mode to AF-FS or AF-FC. When operating dig</li> </ol>
nd Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	I SO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	camera's focusing mode to AF-FS or AF-FC. When operating dig focus in photo mode, the focus mode of the camera cannot be M mode. Remark
X-T20 X-T30	Type-C to TRS2.5	√ √	√ √	۲ ۲	×	×	×	√ √	×	×	2. 01 1. 00	Gimbal_V103	<ol> <li>Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [M SETTING] menu</li> <li>After switch to video mode on camera manually. The Feiyu SC can control camera to start recording.</li> </ol>
X-A5 X-A7 X-T100 X-H1	Type-C to TRS2.5 Type-C to TRS2.5 Type-C to TRS2.5 Type-C to TRS2.5	J J J J	× × × √	\ \ \ \	× × × ×	× × × ×	× × × ×	\ \ \ \ \	× × × ×	× × × ×	2.00 1.00 2.00 2.01	Gimbal_V105 Gimbal_V103 Gimbal_V103 Gimbal_V103	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOV SETTING] menu
х-н1 х-тз х-т4	Type-C to TRS2.5 Type-C to TRS2.5 Type-C to TRS2.5	\ \ \	√ √ √	7 7 7	× × ×	× × ×	× × ×	√ √ √	× × ×	× × ×	2. 01 3. 01 1. 00	Gimbal_V103 Gimbal_V103 Gimbal_V103	<ol> <li>Make sure to connect Feiyu SCORP to the camera ø2.5mm port.</li> <li>Please switch photo/ video mode on camera manually.</li> </ol>
X-14 X-S10 X-T200	Type-C to TRS. 5 Type-C to TRS. 5 (Optional) Type-C to TRS. 5 (Optional)		7 7 7	7 7 7	× × ×	× × ×	×××××	7 7 7	× × ×	× × ×	1.00	Gimbal_V103 Gimbal_V103 Gimbal_V103	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [M SETTING] menu 2.Please switch photo/ video mode on camera manually.
X-E3	Type-C to TRS2.5	~	V	~	×	×	×	V	×	×	1. 22	Gimbal_V103	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [M
X-T30 II	Type-C to TRS2.5	V	V	J	×	×	×	V	×	×	1. 00	Gimbal_V106	<ol> <li>Please set [MiC/REMOTE RELEASE] to be [REMOTE] under the [M SETTING] menu.Specific operations: Enter the setting interfac video Settings &gt;Microphone/Remote Shutter Settings&gt;remote con 2.Please switch photo/ video mode on camera manually.</li> </ol>
X100V	Type-C to TRS2.5	Å	J	V	×	×	×	J	×	×	2. 00	Gimbal_V106	<ol> <li>Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [M SETTING] menu. Specific operations: Enter the setting interfac video Settings &gt;Microphone/Remote shutter Settings&gt;remote con 2. After switch to video mode on camera manually. The Feiyu SC can control camera to start recording.</li> </ol>
GFX 100S	Type-C to TRS2.5	4	J	~	×	×	×	J	×	×	1. 32	Gimbal_V106	2. After switch to video mode on camera manually, the relyd so can control camera to start recording. Please switch photo/ video mode on camera manually.
X-H2S X-H2	Type-C to TRS2.5	1	ل ب	ل ب	×	×	×	ل ب	×	×	1. 00		Please switch photo/ video mode on camera manually. Please switch photo/ video mode on camera manually.
	Type-C to TRS2.5	√ Capture	√ Start/Stop	√ Playback	× Shutter Speed Adjustment	× Aperture Adjustment	× ISO Adjustment	√ Halfway Press To Focus	×	× Digital Zoom Control	1. 02		Please switch photo/ video mode on camera manually. Remark
X-T5 Ind Camera Model	Cable		Recording Video	.,Jack			Adjustment		. Jous				
		Photo	√	×	×	×	×	×	×	×	4. 00	Gimbal_V106	<ol> <li>The camera icon on the gimbal screen lights up after a successful connection.</li> <li>When the cable is connected, the camera button function can be used.</li> </ol>