



Feiyu SCORP-C Camera Compatibility

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info.	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	HUB_V101	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	1. Support Optical Zoom, Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V101	2. Please set [Auto Review] to be "Off" when shooting the timelapse video.
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V101	3. After connecting the cable, be sure to power on the GIMBAL before the camera.
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V101	4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC".
	DSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V101	5. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	DSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	ZV-E10	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	1. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]
	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	2. Set "USB Connecting" to be "PC Remote".
	α6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	(Network) → [PC Remote Function] → [PC Remote] → [On]
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	(Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	(Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only]
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	HUB_V101	
	α7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.
	α7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101	2. Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.
α7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	HUB_V101	3. Please set [Auto Review] to be "Off" when shooting the timelapse video.	
α7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101		
α7R IV	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.00	HUB_V101		
α7R IMA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101		
α7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101		
α7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	HUB_V101		
α9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	HUB_V101		
α9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	HUB_V101		
A7C	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.0	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.	
α1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101	2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.	
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101	3. Please set [Auto Review] to be "Off" when shooting the timelapse video.	
α7S III	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	HUB_V101	4. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]	
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	5. Please set [Auto Review] to be "Off" when shooting the timelapse video.	
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	1. After connecting the cable, be sure to power on the gimbal before the camera.	
	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V101	2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom.	
α7 IV (A7M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	3. Please set [Auto Review] to be "Off" when shooting the timelapse video.	
	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V101	4. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off]	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info.	Remark
Canon	EOS M50	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS M50 Mark II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	HUB_V101	2. Switch to "MF" Mode on the lens when use pull focus.
	EOS M6 Mark II	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	PowerShot G7 X Mark III	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✓	✓	✗	1.0.1	HUB_V101	1. Be sure camera Wi-Fi is off before connecting the cable.
	EOS 200D II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS 850D	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	3. Switch to "MF" Mode on the lens when use pull focus.
	EOS 80D	Type-C to mini (B02) (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	HUB_V101	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 90D	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	5. It does that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS 6D	Type-C to mini (B02) (Optional)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.1.8	HUB_V101	6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.
	EOS 6D Mark II	Type-C to mini (B02) (Optional)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.1.1	HUB_V101	
	EOS 5D Mark III	Type-C to mini (B02) (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	HUB_V101	
	EOS 5D Mark IV	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	HUB_V101	
	EOS 5DS R	Type-c to micro (A03)	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.1.1	HUB_V101	
	EOS RP	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	HUB_V101	1. Please switch photo / video mode on camera manually.
	EOS R	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0.0	HUB_V101	2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.
EOS R5	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.1	HUB_V101	3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R5R camera as it is easy to cause the camera crash.	
EOS R6	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V101	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info.	Remark
Panasonic	GH5S	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	HUB_V101	1. Set the USB Mode to be PC(tether) on camera.
		Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	HUB_V101	2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.
	GH5	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	HUB_V101	3. The camera will auto focus when control capture photo.
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	HUB_V101	4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	GH9	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	SS	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.00	HUB_V101	1. Please switch photo / video mode on camera manually.

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info.	Remark
Nikon	Z7	Type-C to Type-C (002)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
	Z7 II	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
	Z5	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	HUB_V101	
	Z6	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on.
	Z6 II	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	2. Please switch photo / video mode on camera manually.
	Z50	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
	D7500	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera power on.
		Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time.
	Z fc	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	HUB_V101	3. The Feiyu SCORP can start/ stop video recording only if the camera is turn on under video mode.
		Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration.

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info.	Remark
Fujifilm	X-T20	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.
	X-T30	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	2. After switch to video mode on camera manually, the Feiyu SCORP can control camera to start recording.
	X-A5	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	X-A7	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.
	X-T100	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	X-H1	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	
	X-T3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	HUB_V101	1. Make sure to connect Feiyu SCORP to the camera's α2.5mm port.
	X-T4	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	2. Please switch photo/ video mode on camera manually.
	X-S10	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	HUB_V101	
	X-T200	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.
X-E3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗				