



Feiyu SCORP-Mini3/mini3pro Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	1.32	
	RX100 V (RX100M5)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	RX100 VA (RX100M5A)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	ZV-1M2	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected . 2.Please make sure the dail on the camera is set to M mode.
	ZV-E10	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.32	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4.Please set [Auto Review] to be"Off" when shooting the timelapse video or Panorama; 5.After connecting the cable, be sure to power on the gimbal before the camera. 6.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7.When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video. 8.Please make sure the dail on the camera is set to M mode.
	ZV-E10II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1.Set "USB Connecting" to be "PC Remote": 2.Set "Still Img. Save Dest." to be "Camera Only": 3.Please set [Auto Review] to be"Off" when shooting the timelapse video or Panorama; 4.After connecting the cable, be sure to power on the gimbal before the camera. 5.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 6.When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	ZV-E1	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	6.When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	1.After connecting the cable,be sure to power on the gimbal before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	α5100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	1.32	
	α6000	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	α6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32	
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32	
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.06	1.32	
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	1.32	
α6700	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1.Set "USB Connecting" to be "PC Remote": 2.Set "Still Img. Save Dest." to be "Camera Only": 3.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected . 4.Please make sure the dail on the camera is set to M mode.	
FX3	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	5.02	1.32	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 6.after swaping from one cable to another, both camera and gimbal need to be rebooted. 7.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected . 8.Please make sure the dail on the camera is set to M mode.
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	✓	5.02	1.32	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.After connecting the cable, be sure to power on the gimbal before the camera. 3.The camera icon on the gimbal screen lights up after a successful connection. 4.Please set [Zoom Setting] to be "Clear Image Zoom" or "Digital Zoom" to enable Digital Zoom. 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 6.after swaping from one cable to another, both camera and gimbal need to be rebooted. 7.Please make sure the dail on the camera is set to M mode.
DSC-RX0	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	1.32		
DSC-RX0 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.32		
A7 II (A7 M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.32		
A7S II (A7 S2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32		
A7R II (A7 R2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.32	1.After connecting the cable,be sure to power on the gimbal before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.	
A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	1.32		
A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.32		
α7	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	1.32		

A7 III (A7 M3)	Type-C to Multi	✓	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	1.32	
A7C	Type-C to Type-C	✓	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 3.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 4.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 6.Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode.
A7S III (A7 S3)	Type-C to Multi	✓	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.1	1.32	1.Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3.Please make sure the dail on the camera is set to M mode.
	Type-C to Type-C	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	2.1	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on. 3.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected . 4.Please make sure the dail on the camera is set to M mode.
A7 IV (A7M4)	Type-C to Multi	✓	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on. 3.Please make sure the dail on the camera is set to M mode.
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	1.32	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 3.When using the electronic focusing function of the camera, you need to set the lens mode to AF and camera mode to MF. 4.Settings to avoid losing photos when taking photos: Network → Transfer/Remote → PC Remote Control → Still Img. Save Dest. → Camera only. 5.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected . 6.Please make sure the dail on the camera is set to M mode.
A7CR	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.01	1.32	1.Set "USB Connecting" to be "PC Remote": 2.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Please make sure the dail on the camera is set to M mode.
A7CII (A7C M2)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected . 4.Please make sure the dail on the camera is set to M mode.
A7RV (A7R5)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.32	1.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected . 4.Please make sure the dail on the camera is set to M mode.
	Type-c to Multi	✓	✓	✓	✓	✗	✗	✗	✗	✗	✓	1.00	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
	EOS M50	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.0.0	1.32	1.Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M50 Mark II	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	1.32	
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✗	✓	✓	✗	1.8.0	1.32	1Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3.Please do not use the release cable to control the video recording while in photo mode camera as it is easy to cause the camera crash.
	EOS RP	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	1.32	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS M6	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.0.0	1.32	
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	1.32	1.Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II (250D)	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.32	1.Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	PowerShot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.3.0	1.32	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Canon	Powershot V10	Type-C to Type-C	×	√	√	√	√	√	×	×	×	1.0.0	1.32	
	Powershot V1	Type-C to Type-C	√	√	√	√	√	√	×	×	×	1.0.0	1.32	1.Switch to "MF" Mode on the lens when use pull focus. 2.Please switch photo / video mode on camera manually.
	EOS R6	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.4.0	1.32	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS R7	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.1	1.32	
	EOS R10	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.1	1.32	
	EOS R8	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.0	1.32	Please switch photo / video mode on camera manually.
	EOS R50	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.0	1.32	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOSR100	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.0	1.32	1.Switch to "MF" Mode on the lens when use pull focus. 2.Please switch photo / video mode on camera manually.
	EOS R6 Mark II	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.1.2	1.32	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS R50 V	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.0	1.37	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS R6 Mark III	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1.0.2	1.37	
Panasonic	DC-G9GK-K	Type-C to DC2.5mm	√	√	√	×	×	×	√	×	×	2.00	1.32	Please switch photo / video mode on camera manually.
	DMC-GH4GK	Type-C to DC2.5mm	√	√	√	×	×	×	√	×	×	2.70	1.32	Please switch photo / video mode on camera manually.
	S9	Type-C to Type-C	√	√	√	×	×	×	√	√	×	1.0	1.32	
	G9M2	Type-C to Type-C	√	√	√	×	×	×	×	√	×	2.1	1.32	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	DMC-GH5S	Type-C to Type-C	√	√	√	×	×	×	×	√	×	2.5	1.37	
Fujifilm	X-T20	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	1.32	
	X-T30	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.20	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T30 II	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	1.32	
		Type-C to Type-C	×	√	√	×	×	×	√	×	×	1.00	1.32	1.MENU→NETWORK/USB SETING→USB NETWORK SHARING SHOOTING AUTOMATIC MENU→CONNECTION SETING→CONNECTION MODE→USB TETHER AUTO 2.Due to camera system reasons, it does not support taking photos and does not support plugging and unplugging camera control cables with power on.
	X-T100	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T200	Type-C to TRS3.5	√	√	√	×	×	×	√	×	×	1.00	1.32	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A5	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	1.30	1.32	2.Please switch photo / video mode on camera manually.
	X-T3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	3.01	1.32	1.Make sure to connect the cable to camera's 02.5mm port. 2.Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	1.32	
	X-T5	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.02	1.37	Please switch photo/ video mode on camera manually.
	X-M5	Type-C to TRS3.5	√	√	√	×	×	×	√	×	×	1.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2.For both vlog mode and video mode, please select "Remote" for "Microphone/Remote Shutter Settings" 3.Please switch photo/ video mode on camera manually.
	X-H1	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	1.32	
	X-S10	Type-C to TRS3.5	√	√	√	×	×	×	√	×	×	1.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
		Type-C to Type-C	√	√	√	×	×	×	√	×	×	1.00	1.32	1.MENU→NETWORK/USB SETING→USB NETWORK SHARING SHOOTING AUTOMATIC MENU→CONNECTION SETING→CONNECTION MODE→USB TETHER AUTO 2.The camera's button function is not supported. If you need to use it, please disconnect the camera control cable or put the gimbal into sleep mode. If you need to switch between the camera's recording mode and shooting mode, you need to restart the camera or put the gimbal into sleep mode to switch
	X-S20	Type-C to TRS3.5	√	√	√	×	×	×	√	×	×	1.00	1.32	
X-T50	Type-C to TRS3.5	√	√	√	×	×	×	√	×	×	1.10	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.	
X-E3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.22	1.32		
X100V	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.	
X100VI	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.10	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.	
X-H2	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.21	1.32	Please switch photo / video mode on camera manually.	

Brand	Camera Model	Cable	Photo	Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Nikon	Z50	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.50	1.32	1.Please switch photo / video mode on camera manually. 2.After connecting the cable, be sure to power on the camera, then power on the gimbal. 3.Please finish recording before playback the album. 4.To pull focus with gimbal,the focus mode toggle on the camera should be set to MF.
	Z50 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	1.32	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.32	
	Z6 III	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.02	1.32	
	Z7	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	3.31	1.32	
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.32	
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.11	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 3.Please switch photo / video mode on camera manually. 4. If you go back to the album and play the video, you have to reconnect to control it again.
	Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.32	1.After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
Z f	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.32	1.When the camera set up with photo mode, please do not single tap the shutter button, but long press the shutter button able 3 seconds, otherwise, the camera may get stuck. 2.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode. 3.Please switch photo/ video mode on camera manually.	
Z5 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.37	1.Please switch photo / video mode on camera manually. 2.To pull focus with gimbal,the focus mode toggle on the camera cannot be MF mode.	
ZR	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.01	1.37	1.Please switch photo / video mode on camera manually. 2.To pull focus with gimbal,please set the camera's focusing mode to AF	
SIGMA	FP	Type-C to Type-C	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	1.32	1.Select "Camera Control" for USB mode. 2.All keys of the camera are unavailable after the connection with the SCORP-Mini

\*Notice:  
1. "✓" Means Support this function. "✗" Means Do not Support;  
2. When connecting by Type-C to TRS3.5, Type-C to TRS2.5 and USB2.0 to Mini USB, the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in corresponding mode."  
3. This product's functionality depends entirely on the software interface of the compatible camera. Camera manufacturers may modify, restrict, or disable related interfaces through software upgrades, resulting in the permanent malfunction of some or all of this product's functions. This is not considered a product quality issue, and we will not be liable for compensation. We recommend that you consult our technical support to confirm compatibility before upgrading your camera firmware.