



Feiyu SCORP Pro Camera Compatibility List(Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
Sony	α6100	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.00	HUB_V101	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video; 4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	α6300	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	2.00	HUB_V101	
	α6400	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.00	HUB_V101	
	α6500	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	2.00	HUB_V101	
	α6600	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	2.00	HUB_V101	
	A7S	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	3.20	HUB_V101	
	α7S II	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	2.00	HUB_V101	
	A7R	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	2.00	HUB_V101	
	α7R II	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	4.00	HUB_V101	
	α7R III	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	3.01	HUB_V101	
	α7R IV	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.00	HUB_V101	
	α7R M4A	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.00	HUB_V101	
	α7 II (A7M2)	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	4.00	HUB_V101	
	α7 III (A7M3)	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	3.10	HUB_V101	
	α9	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	6.00	HUB_V101	
α9 II	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	3.00	HUB_V101		
	A7C	Type-C to Type-C (C02)	√	√	√	√	×	×	×	√	×	×	1.0	HUB_V101	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video; 6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	α1	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.01	HUB_V101	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	α7S III	Type-C to Multi	√	√	√	√	×	×	×	√	×	√	1.01	HUB_V101	4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 5. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
Canon	Powershot G7 X Mark III	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	1.0.1	HUB_V101	1. Be sure camera Wi-Fi is off before connecting the cable 2. Feiyu SCORP PRO can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II	Type-C to micro (A03)	√	√	×	√	×	×	×	×	√	×	1.0.0	HUB_V101	1. Please switch photo / video mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 80D	Type-C to mini (B02)	√	√	×	√	×	×	×	×	√	×	1.0.2	HUB_V101	
	EOS 90D	Type-C to micro (A03)	√	√	×	√	×	×	×	×	√	×	1.0.0	HUB_V101	
	EOS 6D	Type-C to mini (B02) (Optional)	√	√	×	√	×	×	×	×	√	×		HUB_V101	
	EOS 6D Mark II	Type-C to mini (B02) (Optional)	√	√	×	√	×	×	×	×	√	×		HUB_V101	
	EOS 5D Mark III	Type-C to mini (B02) (Optional)	√	√	×	√	×	×	×	×	√	×	1.3.5	HUB_V101	
	EOS 5D Mark IV	Type-C to micro (A03)	√	√	×	√	×	×	×	×	√	×	1.1.2	HUB_V101	
	EOS 5DS R	Type-c to micro (A03)	√	√	√	√	√	√	√	√	×	×	×	1.1.1	HUB_V101
		EOS RP	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	1.3.0	HUB_V101
	EOS R	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	1.0.0	HUB_V101	1. Please switch photo / video mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS R5	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	1.1.1	HUB_V101	1. Please switch photo / video mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus. 6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.
	EOS R6	Type-C to Type-C (C02)	√	√	×	√	√	√	√	×	√	×	1.1.1	HUB_V101	1. Please toggle photo / video mode on camera manually. 2. switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus. 5. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.
Panasonic	GH5S	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	1.2	HUB_V101	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. Feiyu SCORP PRO can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.
	GH4	Type-C to DC2.5mm	√	√	×	√	×	×	×	√	×	×	2.7	HUB_V101	1. Please switch photo / video mode on camera manually.
	G9	Type-C to DC2.5mm	√	√	×	√	×	×	×	√	×	×	2.00	HUB_V101	
		Type-C to DC2.5mm	√	√	×	√	×	×	×	√	×	×	2.00	HUB_V101	
	S5	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	√	×	2.00	HUB_V101	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. Feiyu SCORP PRO can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.
Nikon	Z7	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	×	×	1.00	HUB_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP PRO before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.
	Z7 II	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	×	×	1.00	HUB_V101	
	Z5	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	×	×	2.00	HUB_V101	
	Z6	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	×	×	2.00	HUB_V101	
	Z6 II	Type-C to Type-C (C02)	√	√	×	√	×	×	×	×	×	×	1.00	HUB_V101	
	Z50	Type-C to micro (A03)	√	√	×	√	×	×	×	×	×	×	1.00	HUB_V101	
	D7500	Type-C to micro (A03)	√	√	×	√	×	×	×	×	×	×	1.00	HUB_V101	1. After connecting the cable, be sure to power on the AK2000S before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please make sure the LV is on to use the gimbal to control the camera. 3. Feiyu SCORP PRO can start/ stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration.
富士	X-T20	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	√	×	×	2.01	HUB_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, Feiyu SCORP PRO can control camera to start recording.
	X-T30	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	√	×	×	1.00	HUB_V101	
	X-T100	Type-C to TRS2.5(T02)	√	×	×	√	×	×	×	√	×	×	2.00	HUB_V101	
	X-H1	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	√	×	×	2.01	HUB_V101	
	X-T3	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	×	√	×	3.01	HUB_V101	
	X-T4	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	×	√	×	1.00	HUB_V101	
	X-S10	Type-C to TRS3.5(T03) (Optional)	√	√	×	√	×	×	×	×	√	×	1.02	HUB_V101	
	X-T200	Type-C to TRS3.5(T03) (Optional)	√	√	×	√	×	×	×	×	√	×	1.00	HUB_V101	
	X-E3	Type-C to TRS2.5(T02)	√	√	×	√	×	×	×	√	×	×	1.22	HUB_V101	

Notice:
 1. "√" Means Support this function, "×" Means Do not Support;
 2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;
 3. When connecting by Type C to TRS3.5(T03), Type C to TRS2.5(T02) and USB2.0 to Mini USB (B01), the camera icon on the gimbal screen will not light up.