



Feiyu SCORP Pro Camera Compatibility List

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info	Remark
Sony	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	1. After connecting the cable, be sure to power on the SCORP Pro before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. 3. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 4. Set "Still Img. Save Dest." to be "Camera Only". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video.
	α6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	HUB_V101	
	α7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	α7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101	
	α7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	HUB_V101	
	α7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
		Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V103	
	α7R IMA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
	α7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101	
	α7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	HUB_V101	
α9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	HUB_V101		
α9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	HUB_V101		
A70	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	HUB_V103	
α1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101		
α7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101		
	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	HUB_V103	
		Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
FX3	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V103	
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V103		
α7 IV (A7M4)	TypeC to TypeC (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V104		

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info	Remark
Canon	Powershot G7 X Mark III	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.1	HUB_V101	1. Be sure camera Wi-Fi is off before connecting the cable. 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 200D II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.
	EOS 850D	Type-C to micro (A03)	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	HUB_V103	
	EOS 80D	Type-C to mini (B02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	HUB_V101	
	EOS 90D	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	
	EOS 6D	Type-C to mini (B02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.8	HUB_V101	
	EOS 6D Mark II	Type-C to mini (B02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V101	
	EOS 5D Mark III	Type-C to mini (B02)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.3.5	HUB_V101	
	EOS 5D Mark IV	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	HUB_V101	
	EOS 5DS R	Type-c to micro (A03)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V101	
	EOS RP	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	HUB_V101	
	EOS R	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✓	1.0.0	HUB_V101	
	EOS R5	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.1	HUB_V101	
	EOS R6	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V101	
EOS-1D X Mark III	Type-C to Type-C (002)	✓	✓	✓	✓	✓	✓	✓	✗	✗	VI.1.0	HUB_V101		

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info	Remark
Panasonic	BHSS	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	HUB_V101	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	BH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	HUB_V103	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.
		TypeC to TypeC (002)	✓	✓	✓	✗	✗	✗	✗	✓	✓	2.60	HUB_V103	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	BH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	HUB_V101	
	09	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	S5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	1. Please switch photo / video mode on camera manually.
		Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	HUB_V101	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
S1H	TypeC to TypeC (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	V2.4	HUB_V1.02	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info	Remark
Nikon	Z7	Type-C to Type-C (002)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	1. After connecting the cable, be sure to power on the SCORP Pro before the camera and wait for about 6 seconds for successfully connection after camera power on. 2. Please make sure the LV is on to use the gimbal to control the camera. 3. Feiyu SCORP PRO can start/stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration.
	Z7 II	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
	Z5	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	HUB_V101	
	Z6	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	HUB_V101	
	Z6 II	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
	Z50	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101	
D7500	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	HUB_V101		
Z fc	Type-C to Type-C (002)	✓	✓	✓	✗	✗	✗	✗	✓	✓	1.10	HUB_V103	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on. 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	HUB Version Info	Remark
富士	X-T20	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	1. Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. After switch to video mode on camera manually, Feiyu SCORP PRO can control camera to start recording.
	X-T30	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
	X-A5	Type-C to TRS2.5(T02)	✓	✗	✗	✗	✗	✗	✓	✗	✗	2.00	HUB_V103	
	X-A7	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
	X-T100	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	X-H1	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	
	X-T3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	HUB_V101	
	X-T4	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
	X-S10	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	HUB_V101	
	X-T200	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
X-E3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	HUB_V101		
SIGMA	FP	TypeC to TypeC (002)	✓	✓	✗	✗	✗	✗	✗	✗	✗	3.00	HUB_V103	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
BMPOCC	6K	TypeC to TypeC (002)	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	HUB_V1.02	

Notice:
1. "✓" Means Support this function, "✗" Means Do not Support.
2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A02) release cable to charge Sony camera but not control it.
3. When connecting by Type C to TRS3.5(T03), Type C to TRS2.5(T02) and USB2.0 to Mini USB (B01), the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.