



Feiyu SCORP Pro Camera Compatibility List

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Sony	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	α6000	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	Gimbal_V101	
	α7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	1. After connecting the cable, be sure to power on the SCORP Pro before the camera.
	α7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101	2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	α7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	Gimbal_V101	3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.
	α7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
		Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V103	
	α7R NAA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	α7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101	
	α7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	Gimbal_V101	
α9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	Gimbal_V101		
α9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	Gimbal_V101		
A7C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	Gimbal_V103	1. After connecting the cable, be sure to power on the SCORP Pro before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. 3. Set "USB Connecting" to be "PC Remote". 4. Set "Still Img. Save Dest." to be "Camera Only". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.
α1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101		
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4. Please set the [Ctrl w/ Smartphone] to be off. 5. Please set the [Ctrl w/ Smartphone] to be off. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	
α7S III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	Gimbal_V103	1. Please set the [Ctrl w/ Smartphone] to be off. 2. Set "USB Connecting" to be "PC Remote". 3. Set "Still Img. Save Dest." to be "Camera Only". 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	1. Please set the [Ctrl w/ Smartphone] to be off. 2. After connecting the cable, be sure to power on the gimbal before the camera. 3. The camera icon on the gimbal screen lights up after a successful connection. 4. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	
FX3	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V103	1. Please set the [Ctrl w/ Smartphone] to be off. 2. Set "USB Connecting" to be "PC Remote". 3. Set "Still Img. Save Dest." to be "Camera Only". 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on.	
α7R V (A7R5)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V104	1. Please set the [Ctrl w/ Smartphone] to be off. 2. Set "USB Connecting" to be "PC Remote". 3. Set "Still Img. Save Dest." to be "Camera Only". 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.
RX10IV (RX10M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V104	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.	
Canon	Powershot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V101	1. Be sure camera Wi-Fi is off before connecting the cable. 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 200D II	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V101	
	EOS 850D	Type-C to micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V103	
	EOS 80D	Type-C to mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	Gimbal_V101	
	EOS 90D	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V104	
	EOS 6D	Type-C to mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.8	Gimbal_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need.
	EOS 6D Mark II	Type-C to mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V101	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 5D Mark III	Type-C to mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	Gimbal_V101	4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.
	EOS 5D Mark IV	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	Gimbal_V101	
	EOS 5DS R	Type-C to micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V101	
	EOS RP	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.3.0	Gimbal_V101	1. Switch to "MF" Mode on the lens when use pull focus. 2. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash.
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V101	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS R5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.1	Gimbal_V101	5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.4.0	Gimbal_V104	6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.
	EOS-1D X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.0	Gimbal_V101	1. Set the camera to video mode before power on, otherwise control failure may occur. 2. The camera and gimbal need to be power on before connecting the data cable.
EOS R3	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V1.04	1. Switch to "MF" Mode on the lens when use pull focus, set the camera to MF mode (adjusting speed is slow). 2. Can control the photos and videos in photo mode, only video in video mode.	
EOS R50	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✓	1.0.0.1	Gimbal_V1.04	1. After the gimbal and camera are turned on, you need to wait about 10 seconds to establish a connection. 2. When the camera is in photo file, the gimbal can control taking and recording. 3. When the camera is in video file, the gimbal can control taking and recording. 4. When you look back at an image, you have to switch to photo, and when you look back at a video, you have to switch to video.	
Panasonic	GHS5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
		Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	Gimbal_V103	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.
	GHS	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	Gimbal_V103	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	Gimbal_V101	
	G9	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	1. Please switch photo / video mode on camera manually.
		Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	1. Please switch photo / video mode on camera manually.
	G5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.00	Gimbal_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	S1H	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.40	Gimbal_V102	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
		Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Gimbal_V104	Please switch photo / video mode on camera manually.
	G6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.20	Gimbal_V104	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
Nikon	Z7	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP Pro before the camera and wait for about 6 seconds for successfully connection after camera power on.
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V101	2. Please switch photo / video mode on camera manually.
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	
	Z50	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V103	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on. 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z9	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗		Gimbal_V104	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on. 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
		Type-C to micro	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V105	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on. 2. Control the camera with the gimbal, the camera Live View function needs to be enabled. 3. Gimbal can control camera recording only when the camera is turned on in video recording mode. 4. If you go back to the album and play the video, you have to reconnect to control it again.
	850	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V105	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on. 2. Control the camera with the gimbal, the camera Live View function needs to be enabled. 3. Gimbal can control camera recording only when the camera is turned on in video recording mode. 4. If you go back to the album and play the video, you have to reconnect to control it again.

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Fujifilm	X-T20	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, Feiyu SCORP PRO can control camera to start recording.
	X-T30	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V101	
	X-A5	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	Gimbal_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	1.00	Gimbal_V103	
	X-T100	Type-C to TRS2.5	√	×	√	×	×	×	√	×	×	2.00	Gimbal_V101	
	X-H1	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.01	Gimbal_V101	
	X-T3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	3.01	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T4	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V101	
	X-S10	Type-C to TRS3.5 (Optional)	√	√	√	×	×	×	√	×	×	1.02	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T200	Type-C to TRS3.5 (Optional)	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V101	2. Please switch photo/ video mode on camera manually.
	X-E3	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.22	Gimbal_V101	
	X-T30 II	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, The Feiyu SCORP can control camera to start recording.
X100V	Type-C to TRS2.5	√	√	√	×	×	×	√	×	×	2.00	Gimbal_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.	
SIGMA	FP	TypeC to TypeC	×	√	×	×	×	×	×	×	×	4.00	Gimbal_V104	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
BMPCC	6K	TypeC to TypeC	×	√	√	×	×	×	×	×	×	V7.3	Gimbal_V1.02	
	BMPCC 4k	TypeC to TypeC	×	√	√	×	×	×	×	×	×	V7.3	Gimbal_V104	

Notice:

1. "√" Means Support this function, "×" Means Do not Support;

2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro release cable can charge Sony camera but not control it;

3. When connecting by Type C to TRS3.5, Type C to TRS2.5 and USB2.0 to Mini USB, the camera icon on the gimbal screen will not light up. long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.