and	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
	α 6100	Type-C to Multi	√ √	y	4	×	×	×	\frac{1}{\sqrt{1}}	×	7	1.00	Gimbal_V101	
	α 6400 α 6500 α 6600	Type-C to Multi Type-C to Multi Type-C to Multi	√ √	\frac{1}{\sqrt{1}}	√ √	×	×	×	√ √	×	√ √	1. 00 2. 00 2. 00	Gimbal_V101 Gimbal_V101 Gimbal_V101	
	A 7S α 7S II	Type-C to Multi	√ √	√ √	1	×	×	×	√ √	×	J	3. 20 2. 00	Gimbal_V101	
	A 7R a 7R II	Type-C to Multi	√ √	√ √	√ √	×	×	×	√ √	×	√ √	2. 00 4. 00	Gimbal_V101	1. After connecting the cable, be sure to power of SCORP Pro before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zo" Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shoo
	a 7R III	Type-C to Multi Type-C to Multi Type-C to Type-C	√ √	<i>,</i>	√ √	×	× ×	×	\ \ \	×	√ √ ×	3. 01 1. 00 1. 00	Gimbal_V101 Gimbal_V101 Gimbal_V103	timelapse video or Panorama:
	a 7R M4A a 7 II (A7M2)	Type-C to Multi	√ √	<i>y</i>	1	×	×	×	√ √	×	4	1. 00	Gimbal_V101	
	α 7 III (A7M3) α 9	Type-C to Multi	√ √	٠ ١	√ √	×	×	×	√ √	×	<i>J</i>	3. 10 6. 00	Gimbal_V101	
	α9	Type-C to Multi	√	√	1	×	×	×	√	×	√	3.00		1. After connecting the cable, be sure to power of SCORP Pro before the camera. 2. Please set the [Ctrl w Smartphone] to be off.
	A 70	Type-C to Type-C	√	4	√	√	√	√	√	×	×	1.0	Gimbal_V103	(Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] 4. Set "Still Img. Save Dest." to be "Camera Only (Network) → [PC Remote Function] → [Still Img. Dest.] → [Camera Only]
														5.Please set [Auto Review] to be "Off" when shoot timelapse video or Panorama;
	a 1	Type-C to Multi	√	√	4	×	×	×	√	×	√	1. 01	Gimbal_V101	1. After connecting the cable, be sure to power of SOORP Pro before the camera. 2. Support Optical Zoom when equiped with a Motor Lens; Please set [Zoom Setting] to be "ClearImag or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shoo
														timelapse video or Panorama: 4.Please set the [Otrl w/ Smartphone] to be off. (Network) → [Otrl w/ Smartphone] → [Off]
														1.After connecting the cable, be sure to power or gimbal before the camera. 2. Support Optical Zoom when equiped with a Motor Lens; Please set [Zoom Setting] to be "GlearImag
		Type-C to Multi	√ 	√	√	×	×	×	√	×	√ -	1. 01		or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shoo timelapse video or Panorama: the last the last set the [Ctrl w / Smartphone] to be off: (Network) \rightarrow [Ctrl w / Smartphone] \rightarrow [Off]
ny	α 7S III													1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote [unction] → [PC Remote]
		Type-C to Type-C	√	√	√	√	√	√	√	×	×	1. 01	Gimbal_V103	wetwork → Fro Amender Junicing → Fro Amender Network) → Fro Remote Function] → [Still Img. Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up successful connection. And the screen of the cam displays the characters "PC".
														5. Please set [Auto Review] to be "Off" when shoot timelapse video or Panorama. 6. after smajning from one cable to another, both and gimbal need to be rebooted.
														1.Please set the [Otrl w/ Smartphone] to be off: (Network) → [Otrl w/ Smartphone] → [Off] 2. After connecting the cable, be sure to power of gimbal before the camera. 3. The camera icon on the gimbal screen lights up
		Type-C to Multi	√ 	√	√	×	×	×	√	×	×	1. 00		successful connection. 4. Please set [Zoom Setting] to be "ClearImage Zo" Digital Zoom" to enable Digital Zoom. 5. Please set [Auto Review] to be "Off" when shoot timelapse video or Panorama. 6. after swaping from one cable to another, both and simbal need to be rebooted.
	FX3													and gimbal need to be reposited. 1. Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote":
		Type-C to Type-C	√	√	√	√	√	√	√	×	×	1. 00	Gimbal_V103	(Network) → [PC Remote Function] → [PC Remote] 3. Set ""Still Img. Save Dest."" to be ""Camera O (Network) → [PC Remote Function] → [Still Img. Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up
														successful connection. And the screen of the cam displays the characters "PC". 5. Please set [Auto Review] to be "Off" when shoot timelapse video or Panorama. 6. After smaping from one cable to another, both and gimbal need to be rebooted.
		Type-C to Multi	√	4	√	×	×	×	√	×	<i>J</i>	1.00	Gimbal_V103	After connecting the cable, be sure to power ogimbal before the camera. Operate digital zoom, the camera's digital zoom.
														function needs to be turned on. 1. Please set the $[Otrl \ w' \ Smartphone]$ to be off: (Network) \rightarrow $[Otrl \ w' \ Smartphone]$ \rightarrow $[Off]$
	a 7 IV (A7M4)	Type-C to Type-C	,	√	J	,			J	×	×	1.00		2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] [On]Set the "USB Connection" to be "Computer Rem The specific setting method is as follows: Step the computer remote control on the camera.MENU -
		Type−C to Type−C	√	*	√	√	√ 	√ 	√	×	×	1. 00		network — transmission/remote — Computer remot control function — computer remote control — of 3. When using the electronic focusing function of camera, you need to set the lens mode to AF and mode to MF. 4. Settings to avoid losing photos when taking ph Network → Transfer/Remote → PC Remote Control
														Still Img. Save Dest. → Camera only. 1. After connecting the cable, be sure to power og imbal before the camera.
	RX10IV (RX10M4)	Type-C to Multi	√	4	4	×	×	×	4	×	√	2. 00	Gimbal_V104	gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on. 3. Please set [Auto Review] to be "Off" when shoot timelapse video or Panorama:
	FDR-AX700	Type-C to Multi	×	√ √	√ √	×	×	×	×	×	√ √	1. 00	Gimbal_V104	
nd	Camera Model	Cable	Capture Photo	Start/ Stop	Playback	Shutter Speed Adjustment			Halfway Press To Focus		Dinital Zaan	Camera Firmware Version		Remark
	Powershot	Tun- C.	√	y			√		×	√	×	1, 0, 1		1. Be sure camera Wi-Fi is off before connecting cable 2. When taking photos or recording video from the it is recommended to manually set the camera to
	Powershot G7 X Mark III	Type-C to Type-C		√ 	√	√	√ 	√	×	√ 	×	1. 0. 1	Gimbal_VIUI	it is recommended to manually set the camera to corresponding mode, otherwise control failure ma 3. Switch to "MF" Mode on the lens when use pull 4. When shooting timelapse video, please set the camera "Image Review" to be off
	EOS M50	Type-C to Micro	√	√	4	√	√	√	×	√	×	1. 1. 0	Gimbal_V104	1. When taking photos or recording video from the it is recommended to manually set the camera to corresponding mode, otherwise control failure may 2. Switch to "MF" Mode on the lens when use pull 3. When shooting timelapse video, please set the
	EOS 200D II (250D)	Type-C to Micro	√ √	\ \	√ √	×	×	×	×	√ √	×	1. 0. 0		 When shooting timelapse video, please set the camera "Image Review" to be off
	EOS 850D EOS 80D EOS 90D	Type-C to Micro Type-C to Mini Type-C to Micro	√ √	٠ ١	1	×	×	×	×	√ √	×	1. 0. 0 1. 0. 2 1. 0. 0	Gimbal_V103 Gimbal_V101 Gimbal_V104	1. When taking photos or recording video from the it is recommended to manually set the camera to corresponding mode, otherwise control failure ma
	EOS 6D Mark II	Type-C to Mini	√ √	√ √	1	J	√ √	√ √	×	√ √	×	1. 1. 8	_	2. When using the gimbal to control focus electro you may need to switch the lens between AF and M which best fits your need. 3. When shooting timelapse video, please set the camera "Image Review" to be off. 4. EUS 900/E
	EOS 5D Mark IV	Type-C to Mini	√ √	<i>J</i>	√ √	×	×	×	×	√ √	×	1. 3. 5	Gimbal_V101 Gimbal_V101	photo mode, otherwise the camera screen may not
	EOS 5DS R EOS RP EOS R	Type-C to Micro Type-C to Type-C Type-C to Type-C	√ √	\ \ \	J J	√ ×	× ×	√ ×	× ×	×	× ×	1. 1. 1	Gimbal_V101 Gimbal_V101 Gimbal_V101	1. Please switch photo / video mode on camera man 2. Switch to "MF" Mode on the lens when use pull
	EOS R5	Type-C to Type-C	√ √	√ √	√ √	×	×	×	×	√ √	×	1.1.1	Gimbal_V101	3.Please do not use the release cable to control video recording while in photo mode in RP/RG/R6 as it is easy to cause the camera crash. 4.When shooting timelapse video, please set the camera "Image Review" to be off 5. It shows that using the dapater with the EF Mo
	EOS R6	Type-C to Type-C	√	√	√	√	√	√	×	√	×	1. 4. 0	Gimbal_V104	will increase the delay of pull focus. 6. If connect camera to external device via HDMI need to set the "HDMI Display" to be display bot camera screen and on the other device to control photo or video recording.
n	EOS-1D X Mark III	Type-C to Type-C	√	4	√	√	√	√	×	×	×	1. 1. 0	dimbai_vioi	Set the camera to video mode before power on, otherwise control failure may occur. The camera and gimbal need to be power on before the comment of
	EOS R3	Type−C to Type−C	√	√	√	√	√	√	×	√	×	1. 1. 1	Gimbal_V1.04	connecting the data cable 1. Switch to "MF" Mode on the lens when use pull foous, set the camera to MF mode (adjusting speed slow)
		٠ موړ.												Can control the photos and videos in photo movideo in video mode After the gimbal and camera are turned on, you wait about 10 seconds to establish a connection
	EOS R5C	Type-C to Type-C	√	√	4	√	√	√	×	√	×	1. 0. 0. 1	Gimbal_V1.04	2. When the camera is in photo file, the gimbal control taking and recording: 3. When the camera is in video file, the gimbal control recording 4. When you look back at an image, you have to suphoto, and when you look back at a video, you ha
														switch to video 1. When taking photos or recording video from the it is recommended to manually set the camera to corresponding mode, otherwise control failure me
	EOS M6 Mark II	Type-C to Type-C	√	1	1	√	√	√	×	√	×	1. 0. 0	Gimbal_VI. 04	corresponding mode, otherwise control railure ma 2. Switch to "ME" Mode on the lens when use pull 3. When shooting timelapse video, please set the camera "Image Review" to be off 4. Be sure camera Wi-Fi is off before connecting cable
	EOS R7	Type-C to Type-C	√	√	√	√	√	√	×	~	×	1. 0. 1	Gimbal_V1.04	1. When taking photos or recording video from the it is recommended to manually set the camera to corresponding mode, otherwise control failure mmz 2. When shooting timelapse video, please set the camera "Image Review" to be off.
	EOS R10	Type-C to Type-C	√	J	√	√	√	√	×	√	×	1. 0. 1	Gimbal V1.04	1. When taking photos or recording video from the it is recommended to manually set the camera to corresponding mode, otherwise control failure mm 2. When shooting timelapse video, please set the camera "Image Review" to be off.
	EOS R8	Type-C to Type-C	√ √	√ √	√ √	√ √	√ √	√ √	×	√ √	×	1. 0. 0	Gimbal_V1.04	Please switch photo / video mode on camera manua 1. Please switch photo / video mode on camera man
	EOS R6 Mark II	Type-C to Type-C	√ √	√	1	1	√ √	√ √	×	<i>J</i>	×	1. 1. 2		Switch to "MF" Mode on the lens when use pull Please switch photo / video mode on camera man Switch to "MF" Mode on the lens when use pull
nd	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
	GH5S	Type-C to Type-C	√	√	4	×	×	×	×	√	×	1. 2	Gimbal_V101	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable control camera as Wi-Fi and USB Trigger can not the same time. 3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togg
														the camera should be set to MF. 5. When the camera is connected to the gimbal, if open the album and do nothing, the camera may fr
		Type-C to DC2.5mm	√	√	√	×	×	×	√	×	×	2. 60	Gimbal_V103	When switched to Photo mode, the camera won't re video-capturing commands; when switched to video the camera won't respond to photo-capturing comm
	GH5													1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable control camera as Wi-Fi and USB Trigger can not the same time.
		Type-C to Type-C	√	√	√	×	×	×	×	√ 	×	2. 60		3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togg the camera should be set to MF. 5. When the camera is connected to the gimbal, if open the album and do nothing, the camera may fr
	GH4 G9	Type-C to DC2.5mm Type-C to DC2.5mm	√ √	٠ ١	√ √	×	×	×	√ √	×	×	2. 7	Gimbal_V101	Please switch photo / video mode on camera manua
nic	\$5	Type-C to DC2.5mm	√	4	1	×	×	×	√	×	×	2. 00		Please switch photo / video mode on camera manua 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable
	33	Type-C to Type-C	√	√	√	×	×	×	×	√	×	2. 00	_	control camera as Wi-Fi and USB Trigger can not the same time. 3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togg the camera should be set to MF.
	S1H	Type-C to Type-C	√	J	√	×	×	×	×	×	×	2. 40	Gimbal_V102	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable control camera as Wi-Fi and USB Trigger can not the same time.
		Type-C to Type-C	√ √	<i>,</i>	<i>,</i>	×	×	×	× 	×	×	1. 20		the same time. 3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togs the camera should be set to MF. Please switch photo / video mode on camera manua
	GH6													Set the USB Mode to be PC(tether) on camera. Turn off the Camera Wi-fi before use the cable control camera as Wi-fi and USB Trigger can not
		Type-C to Type-C	√ 	√	√	×	×	×	×	√ 	×	1. 20		the same time. 3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togg the camera should be set to MF.
	\$511	Type-C to DC2.5mm	√	√	√	×	×	×	√	×	×	1.00	Gimbal_V104	Please switch photo / video mode on camera manua 1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable control camera as Wi-Fi and USB Trigger can not
		Type-C to Type-C	√	√	√	×	×	×	×	√ 	×	1.00	_	the same time. 3. The camera will auto focus when control captur 4. To pull focus with gimbal, the focus mode togg the camera should be set to MF.
d	Camera Model	Cable Type-C to Type-C	Capture Photo	Start/ Stop Recording Video	Playback ×	Shutter Speed Adjustment	Aperture Adjustment ×	ISO Adjustment	Halfway Press To Focus ×	Pull Focus	Digital Zoom Control ×	Camera Firmware Version	Gimbal Firmware Version Gimbal V101	Remark
	Z7 II Z5	Type-C to Type-C	√ √	√ √	4	×	×	×	×	×	×	1. 00	Gimbal_V101	1.After connecting the cable, be sure to power o Feiyu SCORP PRO before the camera and wait for a
	Z6 II	Type-C to Type-C Type-C to Type-C	√ √	√ √	√ √	×	×	×	×	×	×	2. 00	Gimbal_V101	seconds for successfully connection after camera on 2.Please switch photo / video mode on camera man
	Z50	Type-C to Micro	√	√	4	×	×	×	×	×	×	1.00		1. After connecting the cable, be sure to power of Feiyu gimbal before the camera and wait for about seconds for successfully connection after camera
n	Z fc	Type-C to Type-C	√	√	4	×	×	×	×	√	×	1. 10	Gimbal_V103	on a season of succession of the season of t
														After connecting the cable, be sure to power of Feiyu gimbal before the camera and wait for about seconds for successfully connection after camera on the control of the control of the camera on the control of the camera of the control of the control of the control of the camera of the control of the
	Z9	Type-C to Type-C	√	√	√	×	×	×	×	√	×	1. 10		2.Please switch photo / video mode on camera man 3.To operate digital focusing in video mode, you set the camera's focusing mode to AF-FS or AF-FC operating digital focus in photo mode, the focus the camera cannot be MF mode.
	Z30	Type-C to Type-C	√	√	J.	×	×	×	×	√	×	1.00	Gimbal_V104	After connecting the cable, be sure to power or Feiyu gimbal before the camera and wait for abou seconds for successfully connection after camera on 2. Please switch photo / video mode on camera man
		۷ حیر												3. To operate digital focusing in video mode, you set the camera's focusing mode to AF-FS or AF-FC operating digital focus in photo mode, the focus the camera cannot be MF mode.
d	Camera Model X-T20	Cable Type-C to TRS2.5	Capture Photo	Start/ Stop Recording Video	Playback √	Shutter Speed Adjustment ×	Aperture Adjustment ×	ISO Adjustment ×	Halfway Press To Focus √	Pull Focus	Digital Zoom Control ×	Camera Firmware Version 2.01	Version	Nemark 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE]
	X-T30 X-A5	Type-C to TRS2.5	√ √	√ ×	, ,	×	×	×	√ √	×	×	1. 00		the [MOVIE SETTING] menu
	X-A7 X-T100	Type-C to TRS2.5	√ √	×	1	×	×	×	√ √	×	×	1. 00 2. 00	Gimbal_V103	Please set [MIC/REMOTE RELEASE] to be [REMOTE] u [MOVIE SETTING] menu
	X-H1 X-T3	Type-C to TRS2.5	√ √	4	4	×	×	×	4	×	×	2. 01	GIMBAI_VIOI	Please set [MIC/REMOTE RELEASE] to be [REMOTE] u [MOVIE SETTING] menu
	X-T4 X-S10 X-T200	Type-C to TRS2.5 Type-C to TRS3.5 (Optional) Type-C to TRS3.5 (Optional)	√ √	\frac{1}{\sqrt{1}}	<i>J J</i>	× × ×	× × ×	× × ×	\display \di	× ×	× × ×	1. 00 1. 02 1. 00	Gimbal_V101 Gimbal_V101 Gimbal_V101	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] the [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manu
lm	X-T200 X-E3	(Optional) Type-C to TRS2.5	√ √	√ √	J	×	×	×	√ √	×	×	1. 00	Gimbal_V101	2. Please switch photo/ video mode on camera manual. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE]
	X-T30 II	Type-C to TRS2.5	√	4	4	×	×	×	4	×	×	1. 00	Gimbal_V104	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] the [MUVIE SETTING] menu 2. After switch to video mode on camera manually, Feiyu SOORP can control camera to start recording the contro
	X100V	Type-C to TRS2.5	√	√	4	×	×	×	√	×	×	2.00		1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] the [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manu
	GFX 100S X-H2S	Type-C to TRS2.5	√ √	<i>y</i>	√ √	×	×	×	√ √	×	×	1. 32		Please switch photo/ video mode on camera manual
	X-H2S X-H2	Type-C to TRS2.5	√ √	√ √	√ √	×	×	×	√ √	×	×	1. 21		Please switch photo/ video mode on camera manual Please switch photo/ video mode on camera manual
	х-т5	Type-C to TRS2.5	√	√ Start/ Stop	√	×	×	×	√	×	×	1. 02		Please switch photo/ video mode on camera manual
	Camera Model	Cable	Capture Photo		Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	кепат к
d		Type-C to Type-C	×	√	×	×	×	×	×	×	×	4. 00		1. The camera icon on the gimbal screen lights up successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the it is recommended to manually set the camera to
	FP					1	1							it is recommended to manually set the camera to corresponding mode, otherwise control failure ma
A	FP Camera Model	Cable	Capture Photo	Start/ Stop Recording	Playback	Shutter Speed Adjustment			Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
ad IA			Capture Photo		Playback √		Aperture Adjustment ×	ISO Adjustment ×		Pull Focus ×				Remark