



### G6Max Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Sony	RX100 IV (RX100M4)	Wi-Fi	√	√	×	×	√	×	×	×	×	×	√	Any version	1.01	
	RX100 V (RX100M5)	Wi-Fi	√	√	×	×	√	×	×	×	×	×	√	Any version	1.01	
	RX100 VI (RX100M6)	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	RX100M5A	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	α5100	Wi-Fi	√	√	×	×	√	×	×	×	×	×	√	Any version	1.01	
	α6000	Wi-Fi	√	×	×	×	√	×	×	×	×	×	√	Any version	1.01	
	α6100	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	α6300	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	α6400	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	α6500	Wi-Fi	√	√	×	√	√	√	×	×	×	×	√	Any version	1.01	
	HDR-A550R	Wi-Fi	√	√	√	×	√	√	√	×	×	×	×	Any version	1.01	
	FDR-X3000R	Wi-Fi	√	√	√	×	√	√	√	×	×	×	×	Any version	1.01	
	ILCE-QX1	Wi-Fi	√	√	√	√	√	√	√	×	×	×	×	Any version	1.01	
	DSC-RX0	Wi-Fi	√	√	√	√	√	√	√	×	×	×	×	Any version	1.01	
	RX1R II	Wi-Fi	√	×	×	×	√	×	×	×	×	×	×	Any version	1.01	
DSC-HX90	Wi-Fi	√	√	×	×	√	×	×	×	×	×	×	Any version	1.01		
DSC-WX500	Wi-Fi	√	√	×	×	√	×	×	×	×	×	×	Any version	1.01		
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Canon	EOS M50	Wi-Fi	√	√	√	√	√	×	√	√	×	√	×	Any version	1.07	
	EOS 200D	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01	
	EOS 200D II	Wi-Fi	√	√	√	√	√	×	√	√	×	×	×	Any version	1.01	
	Powershot G7 X Mark III	Wi-Fi	√	√	√	√	×	×	√	√	×	√	×	Any version	1.01	
	EOS RP	Wi-Fi	√	√	√	√	√	×	√	√	×	×	×	Any version	1.01	
	EOS M6 Mark II	Wi-Fi	√	√	√	√	√	×	√	√	×	×	×	Any version	1.04	3. The G6MAX can start/ stop video recording only if the camera is turn on under video mode.
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Panasonic	DMC-LX10	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01	After connecting to WIFI for 30s, the camera will prompt: the monitoring screen is closed.
	DMC-LX100	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01	
	DC-GH4GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01	
	DC-GF9GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01	
	DC-GX9GK-K	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01	
	DC-GX9GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01	
	DC-GF10GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01	
	DC-ZS70GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01	
	DC-ZS220GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01	
DMC-ZS110	Wi-Fi	√	√	√	√	√	√	×	×	×	√	√	Any version	1.01		
DMC-GX85GK	Wi-Fi	√	√	√	√	√	√	×	×	×	√	×	Any version	1.01		
GoPro	HERO5/6	Wi-Fi	√	√	√	×	×	×	×	×	×	×	×	Any version	1.01	
	HERO7 Black	Wi-Fi	√	√	√	×	×	×	×	×	×	×	×	Any version	1.01	
	HERO7 Silver/White	Wi-Fi	√	√	√	--	--	--	--	--	×	×	×	Any version	1.01	
	HERO8	Wi-Fi	√	√	√	--	--	--	--	--	×	×	×	Any version	1.01	For the way to connect HERO8, see G6 Connecting HERO8 tutorial
SJcam	SJ6 LEGEND	Wi-Fi	√	√	×	--	--	--	--	--	×	×	Any version	1.01		
Xiaoyi	YI 4K	Wi-Fi	√	√	×	--	--	--	--	--	×	×	Any version	1.01		
FeiYu	RICCA	Wi-Fi	√	√	--	--	--	--	--	--	--	--	Any version	1.01		

Notice:  
1. "√" Means Support this function, "×" Means Do not Support

### G6Max Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	√	√	√	×	×	×	×	×	√	×	√	2.00	1.01	1. After connecting the cable, be sure to power on the G6MAX before the camera. 2. Support Optical Zoom: Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	RX100 IV (RX100M4)	Type-C to Multi	√	√	√	×	×	×	×	×	√	×	√	1.30	1.01	
	RX100M5A	Type-C to Multi	√	√	√	×	×	×	×	×	√	×	√	2.00	1.01	
	RX100 VI (RX100M6)	Type-C to Multi	√	√	√	×	×	×	×	×	√	×	√	1.00	1.01	
	RX100 VII (RX100M7)	Type-C to Multi	√	√	√	×	×	×	×	×	√	×	√	1.00	1.01	
	ZV-1	Type-C to Multi	√	√	√	×	×	×	×	×	×	×	√	1.00	1.01	
	ZV-E10	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	√	×	√	1.00	1.07	
	DSC-HX90	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	1.00	1.01	
	α6100	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	1.00	1.01	
	α6300	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	2.00	1.01	1. After connecting the cable, be sure to power on the G6MAX before the camera. 2. Support Optical Zoom: Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	α6400	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	√	1.00	1.01	
	α6500	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	2.00	1.01	
	α6600	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	2.00	1.04	
	DSC-RX0	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	3.00	1.01	1. After connecting the cable, be sure to power on the G6MAX before the camera. 2. Support Optical Zoom: Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video;
	DSC-RX0 II	Type-C to Multi	√	√	√	×	×	×	×	×	×	√	×	1.00	1.01	
A7C	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	√	×	1.00	1.06	1. After connecting the cable, be sure to power on the G6MAX before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. [Network] → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote": [Network] → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only": [Network] → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video; 6. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Canon	EOS M50	Type-C to Micro (A03)	√	√	√	×	×	×	×	×	×	√	×	1.00	1.02	1. After connecting the cable, be sure to power on the G6MAX before the camera and wait for about 5 seconds for successfully connection after camera power on, the camera icon on the gimbal screen will light up.
	EOS M50 Mark II	Type-C to Micro (A03)	√	√	√	×	×	×	×	×	×	√	×	1.00	1.06	2.
	EOS SDS R	Type-C to Micro (A03)	√	√	√	×	×	×	×	×	×	√	×	V1.1.1	1.07	1. 稳定器和相机连接好后，先打开稳定器再打开相机，需要大约5秒钟才能完成连接，稳定器上的连接图标亮起。 2. 相机从拍照模式切换成录像模式后，相机的部分按键将不用。
	EOS RP	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	√	×	1.30	1.02	1. GEMAX can switch to video mode from P.A shooting mode, but need to switch to video mode from photo mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS M6 Mark II	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	√	×	1.00	1.02	2. GEMAX can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M6	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	×	√	×	1.00	1.02	
	EOS 200D II	Type-C to Micro (A03)	√	√	√	×	×	×	×	×	×	√	×	1.00	1.04	
Powershot G7 X Mark III	Type-C to Type-C (C02)	√	√	√	×	×	×	×	×	×	√	×	1.01	1.02	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.	
Panasonic	DC-S5GK-K	Type-C to DC2.5mm	√	√	×	×	×	×	×	×	√	×	×	2.00	1.02	1. Please switch photo / video mode on camera manually.
	DC-S5GK-K	TypeC to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	2.00	1.02	1. GEMAX can switch photo/ video mode in P, A, S, M shooting mode. 2. The camera will auto focus when control capture photo.
	DC-GH4GK	Type-C to DC2.5mm	√	√	×	×	×	×	×	×	√	×	×	2.7	1.01	1. Please switch photo / video mode on camera manually.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Fujifilm	X-T20	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	2.01	1.02	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.
	X-T30	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.20	1.02	
	X-T100	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	2.00	1.02	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.
	X-T200	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.
	X-A5	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	2.00	1.02	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.
	X-A7	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	1.30	1.02	
	X-T3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	3.01	1.02	
	X-T4	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	
	X-H1	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	2.01	1.02	
	X-S10	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.
X-E3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.22	1.07		
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Version	HUB Version Info.	Remark
Nikon	Z50	Type-C to micro (A03)	√	√	×	×	×	×	×	×	×	×	×	1.02	1.06	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo / video mode on camera manually.

Notice:  
1. "√" Means Support this function, "×" Means Do not Support  
2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release calbe can charge Sony camera but not control it;