



G6Max Camera Compatibility List (Wi-Fi Control)

Table with columns: Brand, Camera Model, Control Form, Capture Photo, Start/ Stop Recording Video, Switch Photo/ Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Aperture Adjustment, Shutter Speed Adjustment, Halfway Press To Focus, Pull Focus, Zoom Control (digital or optical), Camera Version, HBB Version Info, Remark. Rows include Sony (RX100 IV-VII, a5100, a6000, a6100, a6400, a6500, HDR-ASSOR, FDR-X300OR, ILCE-QX1, DSC-RX0, RX1R II, DSC-HX90, DSC-RX500), Canon (EOS M50, EOS 200D, EOS 200D II, Powershot G7 X Mark III, EOS RP, EOS M6 Mark II), Panasonic (DMC-LX10, DMC-LX100, DMC-GH4G, DC-GF9XGK, DC-GX9GK-K, DC-GF9GK, DC-GF10GK, DC-ZS70GK, DC-ZS220GK, DMC-ZS110, DMC-GX85GK), GoPro (HEROS/6, HEROT Black, HEROT Silver/White, HEROS), SJcam (SJ6 LEGEND), Xiaoyi (YI 4K), FeiYu (R10CA).

Notice: 1. "/>

G6Max Camera Compatibility List (Cable Control)

Table with columns: Brand, Camera Model, Cable, Capture Photo, Start/ Stop Recording Video, Switch Photo/ Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Aperture Adjustment, Shutter Speed Adjustment, Halfway Press To Focus, Pull Focus, Zoom Control (digital or optical), Camera Version, HBB Version Info, Remark. Rows include Sony (RX100 III-VII, ZV-1, ZV-E10, DSC-HX90, DSC-RX500, a6100, a6300, a6400, a6500, a6600, DSC-RX0, DSC-RX0 II, A7C), Canon (EOS M50, EOS M50 Mark II, EOS RP, EOS M6 Mark II, EOS M6, EOS 200D II, Powershot G7 X Mark III), Panasonic (DC-S5GK-K, DMC-GH4G), Fujifilm (X-T20, X-T30, X-T100, X-T200, X-A5, X-A7, X-T3, X-T4, X-H1, X-S10, X-S5), Nikon (Z50).

Notice: 1. "/>