

G6Plus camera follow focus list

Camera	Photo	Video	Mode Switch	Zoom	Follow Focus	Fast Refocusing	Parameters Settings	Note
Gopro 5/6	OK	OK	OK	No	No	—	Resolution, FRV, FPS	
Sony RX0	OK	OK	OK	No	No	—	WB, ISO	
Sony RX100IV	OK	OK	No	OK	No	—	—	
Sony RX100 V	OK	OK	No	OK	No	—	—	
Sony RX100 VI	OK	OK	Manual switch	OK	No	—	WB, ISO	
Sony a6300+16-50	OK	OK	No	OK	No	—	WB, ISO	
Sony a6500+28-70	OK	OK	No	No	No	—	—	
Sony a6000	OK	No	No	OK	No	—	—	
Sony a5100	OK	OK	OK	OK	No	—	—	
Sony AS50	OK	OK	OK	No	No	—	Only WB is called AWB	
SONY X3000	OK	OK	OK	No	No	—	Only WB is called AWB	
Sony QX1	OK	OK	OK	No	No	—	WB, ISO	
Sony R1XR II	OK	No	No	OK	No	—	—	Press the key plate 1.06 to add
Panasonic LX10	OK	OK	OK	OK	OK	—	WB, ISO	
Panasonic LX100	OK	OK	OK	OK	OK	OK	WB, ISO	
Panasonic GH4+12	OK	OK	OK	No	No	—	WB, ISO	
Panasonic DC-GF9KGK	OK	OK	OK	No	OK	—	WB, ISO	
Panasonic ZS70	OK	OK	OK	OK	OK	OK	WB, ISO	
Panasonic ZS220	OK	OK	OK	OK	OK	OK	WB, ISO	G6P_BLE_V1.003The previous Bluetooth version is not available
Panasonic GX9K+12-32	OK	OK	OK	No	OK	OK	WB, ISO	G6P_BLE_V1.003The previous Bluetooth version is not available
Panasonic GF10K+12-32	OK	OK	OK	No	OK	OK	WB, ISO	
Panasonic DMC-ZS110	OK	OK	OK	OK	OK	OK	WB, ISO	Panasonic button board 1.05 added
Panasonic GX85 + H-H020A	OK	OK	OK	No	OK	OK	WB, ISO	Panasonic button board 1.05 added
Canon EOS M50	OK	OK	OK	No	No	—	—	

gopro 7controlling parameter			
Feature	gopro 7 Black	gopro 7 Silver	gopro 7 White
Photo	√	√	√
Video	√	√	√
Time-lapse	√	√	√
Mode switch	√	√	√
Continuous Shooting	√	√ only in photo mode	√ only in photo mode
Timer	√	√ only in photo mode	√ only in photo mode
Slow Motion	√	√ only in video mode	√ only in video mode
Video switch and duration	√	√ only in video mode	√ only in video mode
Video switch	√ only in video mode	—	—
4K Switch	√	√ video and time-lapse mode	—
White balance	√ only in photo abd vidoe mode	—	—
Field of view	√ only in photo and time-lapse mode	—	—
Resolution	√ only in video and time-lapse photo mode	—	—
FPS	√ only in video mode	—	—