

Qing Camera Compatibility List (Cable Control)									
Brand	Camera list	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware			
Canon	5D MarkIV	1.1.2	USB 3.0 to Micro 3.0 (A02)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	When using Follow focus electronically, the lens needs to be in MF mode	RT_HUB_V103			
	EOS 90D	1.0.0	USB 2.0 to micro (A01)						
	EOS 200D II	1.0.0							
	80D	1.0.2	USB 2.0 to mini (B01)						
	6D	1.1.8							
	5D MarkIII	1.3.5							
	6D MarkII	1.0.3	USB 2.0 to Type C (C01)						
	EOS R	1.0.0							
	EOS RP	1.3.0							
	G7X mark III	1.0.1							
	M6mark2	1.1.0							
	EOS R5	1.1.1							
	EOS R6	1.1.1	USB 2.0 to micro (A01)				1.Take photos 2.Start/Stop recording video 3.Switch Photo/ Video Mode	1.After connecting the cable, be sure to power on the Qing before the camera and wait for about 5 seconds for successfully connection after camera power on,the camera icon on the gimbal screen will light up. 2.When the camera is in photo mode and the gimbal switches to video mode, some keys of the camera will not respond to commands.	RT_HUB_V105
	EOS 5DS R	1.1.1R					1.Take photos 2.Start/Stop recording video	1. when using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	RT_HUB_V105
	EOS 5D MarkIV	1.2.1					1.Take photos 2.Start/Stop recording video		RT_HUB_V105
EOS 850D	1.0.0	USB 2.0 to micro(A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically		RT_HUB_V105				
M50	1.1.0	USB 2.0 to micro(A01)	1.Take photos 2.Start/Stop recording video		RT_HUB_V105				
Sony	α7SII	V2.00	Type-C to Multi	1.Take photos 2.Start/Stop recording video 3.Zoom/Half-press to focus	1. Can control motorized zoom lens to zoom. 2. Can only control digital zoom while using non-motorized lens. 3. Select "Network" and then turn off "Ctrl w/Smartphone" in camera setting. 4. Set up the USB Connection to PC remote in camera setting menu.	RT_HUB_V101			
	α7RII	V4.00							
	α7II	V4.00							
	α9	V2.00							
	α7R	V2.00							
	α7 III (A7M3)	V3.00							
	α7R III	V3.01							
	α7R IV	V1.00							
	α6300	V2.00							
	α6400	V1.00							
	6100	V1.00							
	6600	V1.00							
	α6500	V2.00							
	ZV-1	V1.00							
	A7 S III	1.01						1. Can control motorized zoom lens to zoom. 2. Can only control digital zoom while using non-motorized lens.	RT_HUB_V104
ZV-E10	V1.00	USB2.0 to TypeC (C01)	1.Take photos 2.Start/Stop recording video	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video; 5.After connecting the cable, be sure to power on the G6MAX before the camera. 6.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.	RT_HUB_V105				
A7M IV	V1.00	Type-C to Multi	1.Take photos 2.Start/Stop recording video 3.Zoom/Half-press to focus 3.Follow focus electronically	1. After connecting the cable, be sure to power on the Qing before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video;	RT_HUB_V105				
Nikon	D7500	1.00	USB 2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.After turning on the camera, it takes a few seconds for the camera to connect successfully 2.Make sure the camera live view function is on when using the gimbal control function (LV) 3.To control recording, you need to turn the camera to video mode . 4.When using Follow focus electronically, the lens needs to be in AF mode and very slow 5.The camera only has the light indicator and the screen does not display the duration during recording	RT_HUB_V101			
	Z7	1.00	USB 2.0 to Type C (C01)						
	Z6	2.00							
	D850	1.01	USB 3.0 to Micro 3.0 (A02)						
	Z5	1.00	USB 2.0 to Type C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. After connecting the cable, be sure to power on the Feiyu Qing before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please make sure the LV is on to use the gimbal to control the camera. 3. Please switch photo / video mode on camera manually.	RT_HUB_V101			
	Z50	1.00	USB 2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically		RT_HUB_V101			
	Z6 II	1.21	USB 2.0 to Type C (C01)	1.Take photos 2.Start/Stop recording video	1. Please switch photo / video mode on camera manually.	RT_HUB_V105			
Panasonic	GH5s	V1.2	USB 2.0 to Type C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.USB mode choose PC(Tether) 2.WiFi and USB cable control cannot be used simultaneously 3.When using Follow focus electronically, the lens needs to be in AF mode	RT_HUB_V101			
	GH4	V2.7	Panasonic Shutter Cable Type C to DC2.5		To control recording, you need to turn the camera to video mode .	RT_HUB_V103			
	LUMIX G9	V2.0							
	S1H	V2.0							
	S5	V2.0	USB 2.0 to Type C (C01)	1.Take photos 2.Start/Stop recording video 3.Camera will focus automatically first before taking photo	1.No need to manually switch to camera recording mode				
	GH5	V2.6	USB 2.0 to Type C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5.When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	RT_HUB_V105			
V2.6		Type-C to DC2.5mm	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Please switch photo / video mode on camera manually.					
FUJIFILM	XT-200	V1.02	Type-C to TRS3.5 (T03)	1.Take photos 2.Start/Stop recording video 3.Half-press to focus	1.Please set up "MIC/REMOTEO RELEASE" to REMOTE, Steps: Press Menu, Video Setting) MIC/REMOTEO RELEASE) REMOTE 2.To control recording, you need to turn the camera to video mode .	RT_HUB_V101			
	XS-10	V1.02		1.Please set up "MIC/REMOTEO RELEASE" to REMOTE, Steps: Press Menu, Video Setting) MIC/REMOTEO RELEASE) REMOTE 2.To control recording, you need to turn the camera to video mode . 3.Take photo,you need to turn the camera to Photo mode					
	X-E3	V1.22	Type-C to TRS2.5(T02)	1.Take photos 2.Start/Stop recording video 3.Half-press to focus	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/video mode on camera manually,	RT_HUB_V105及以上			
	X-A5	V1.00	Type-C to TRS2.5(T02)	1.Take photos 2.Half-press to focus	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu	RT_HUB_V105及以上			