

Feiyu Pocket 2S

Stabilized Camera

nstruction[,]

V1.0.2



Catalogue

1. Overview	. 1
2. List·····	2
3. Start to Use ·····	2
3.1 Charging ·····	2
3.2 Insert MicroSD card ·····	2
3.3 Usage for handle holder ·····	3
4. Operation ·····	3
4.1 Power Button	
4.2 Function Button	4
4.3 Shutter Button	
4.4 Touch Screen ····	
4.5 Indicator light instructions ·····	9
5. Using the Feiyu Cam App	10
5.1 Connect with Feiyu Pocket 2S via Wi-Fi	10
5.2 Camera Interface	10
6. Maintenance	13
7. Specifications ·····	13

Suggestion

This product includes below information, please read the information before using it.

- 1. Quick start guide
- 2. Online instruction
- 3. Tutorial

Tutorial

 * The tutorial videos can be watched at FeiyuTech official website or scan the QR code.

https://www.feiyu-tech.com/play/



Download APP

Connect with Feiyu Cam App to achieve more functions. Scan the QR code to download the app, or search for "Feiyu Cam" in the App Store or Google Play.

* Requires iOS 9.0 or above, Android 6.0 or above.







Android

1. Overview

Feiyu Pocket 2S is a portable and controllable HD camera which easy to carry. The lens of the pocket camera is separated from the body with a magnetic base which makes it easy to mount and detach. Five-way joystick makes operation much easier. With the extension cord, you can get real-time view from handle easily. It also come with built-in speaker and 3-axis anti-shake gimbal. Support motion sensing, remote control via APP, you can select photo/video/timelapse modes and remote control camera as your wish.

Handle:



- [1] Power Button
- [2] Loudspeaker
- [3] Joystick /Function Button
- [4] Shutter Button/ Photo Indicator
- [5] HDMI port
- [6] Magnetic reel
- [7] Touch Screen
- [8] USB-C Charging Port

- [9] MicroSD card slot
- [10] Microphone
- [11] Roll Axis
- [12] Tilt Axis
- [13] Camera Lens
- [14] Pan Axis
- [15] Magnetic base with 1/4 inch screw hole

2. List



- 1 Feiyu Pocket 2S×1
- ② Reel×1
- 3 Handle holder×1
- ④ Magnetic base with 1/4 inch screw hole ×1
- ⑤ Wristband×1

- ⑥ USB-C cable×1
- ⑦ Portable bag × 1
- ® Manual × 1

3. Start to Use




- (1) Please fully charge the battery before powering on the product for the first time.
- (2) When not in use, power off the product.

3.1 Charging

 ${\tt Connect~USB-C~cable~with~charging~port~to~charge}.$

We recommend that you charge your camera at least once a month.

Charging status	While working (screen status)	While off (indicator status)
Charging	Display	Red light is on
Complete	Disappear	Green light is on

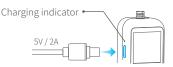

3.2 Insert MicroSD card

An UHS-I Speed Grade 3 (U3) rating microSD card (equipped by user) is required. Please format the MicroSD card with Feiyu Pocket 2S when insert it at the first time.



3.3 Usage for handle holder




User can wear the handle on the wrist though handle holder

4. Operation

4.1 Power Button

Long press for 1s: Power ON/ OFF Single tap:

- (1) Switch among video/ photo mode/ recently used function
- (2) Return to the previous menu

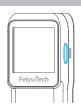

4.2 Function Button

Move to left / right: Control pan axis Move upward / downward: Control tilt axis Double tap: Recenter Triple tap: Enter / Exit selfie mode Press and hold: Enter lock mode


4.3 Shutter Button

Single tap: Take photo / video / return to the home page Long press for 3s: Turn on / off Wi-Fi

4.4 Touch Screen

Swipe to Left: Switch shooting modes Swipe to right: Enter album Swipe upward: Gimbal control Swipe downward: Enter setting



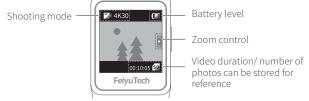



Swipe from right to left


- \cdot Switch among different shooting modes and set corresponding mode parameters.
- · Swipe up or down to switch among photo/ video/ slow-motion/ timelapse/ panorama mode, tap to enter corresponding mode setting.

ō	Photo	Users can set aspect ratio of photos and countdown to take photo. Optional aspect ratio: 4:3 / 16:9 Optional countdown time: Off/ 3s/ 5s/ 7
	Video	Users can set video resolution and FPS. Optional video resolution: 4K / 2.7K / 1080P / 16:9 Optional FPS: 24 / 25 / 30 / 48 / 50 / 60 / 120
SLO	Slow motion	Users can shoot slow-motion video. Optional ratio of slow-motion recording: 4K 2X/1080P 4X/720P 8P
	Timelapse	Users can choose static, motion timelapse, or hyperlapse and enter shooting interface after chose, and set shooting interval and duration by tap the bottom of the interface. Optional video resolution: 4K / 2.7K / 1080P When you choose motion timelapse, tap [+] to set start position [1], tap [+] again to set end position [2], tap [x] to delete position.
14	Panorama	Users can choose different panorama modes:2×2/3×3/180° 2×2: two images above and two below combine to one picture 3×3: 3 images above in every three layers combine to one picture 180°:4 lateral images combine to one picture

■ 4K30		Swipe from left to right
00:10:05		• Enter the album (Swipe down to exit) • Swipe left/right to view the previous/next item. Swiping right on the most recent item will exit the album.
	Play	Tap to play the current video.

•	Favorite
	Haven't been m

Photos and videos which are marked as like, can be viewed in album [Favorite] after connected Feiyu Cam App. Tap to unmark.

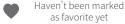

Tap to mark it as favorite.



Delete

Delete the current picture or video.



Swipe up

- · Enter gimbal control interface.
- · Users can recenter gimbal / switch to selfie mode / modify follow sensitivity / switch working modes.

towards front or back as before



Follow mode



All follow mode (FPV)



Pan mode



Camera horizontally rotate 180° to shoot, which can be used to take selfie.

Tap to recenter, lens return to center and keep

(2) Moving pattern

Fast follow



Riding



Mount on car



Swipe down

- \cdot Enter setting interface, swipe up to return the previous menu.
- \cdot Swipe to left / right to switch among different settings.

Mode setting
√ode setting



Mounting mode



Handheld mode



Swipe to left / right to get move settings.



Display battery level



Turn on/off camera Wi-Fi



Anti-flicker setting



Key tone on /off



Display remaining storage spaces, tap to show format option.

(2) System



Auto power off setting



Enter calibration. When camera is not level, users can use it to fix. Place the product on a stable horizontal plane such as table, and follow the prompts on the screen to operation.



Average metering



Spot metering is available



Move settings, users can switch languages / reset system parameters / view device information (firmware version, SN code, etc.)/motor calibration

	***	Super wide angle
(3) Viewing angle		Wide viewing angle
		Narrow viewing angle
(4) Face tracking	[©]	Turn on/off face tracking(available in photo, video and slow motion modes)
(E) Doouty		Open beauty
(5) Beauty	**	Close beauty (available in photo modes)
	QUALITY **	Super high quality
(6) Image quality "	GUNLITY	High quality (available in video and slow motion modes)
(7) Display	**	Full screen display
(7) Display	^*	Normal display
	PRO	Professional Mode
(8) Professional/ Normal mode		Normal mode
	PRO	After switch to professional mode, users can tap PRO icon to set the related parameters.
***************************************		•••••••••••••••••••••••••••••••••••••••

Shooting mode		PRO mode			
Settings	Image Format	White balance	Exposure	Color	Volume
Photograph	√	√	~		
Video		√	~	√	√
Slow motion		√	√	√	
Time-lapse photography		1	√	1	
Panoramic photo	√	√	√		

Image Format; Select save format (JPG or J+R) for photo
White balance: Select a preset white balance mode or set color temperature manually


Exposure: Set ISO, shutter speed or exposure compensation Color: Switch between normal color and Fy-log color (Which is advantageous for post-

production color modulation) Volume: Set video volume

(9) Brightness		High brightness
	**	Normal brightness
	-%-	Low brightness
(10) Saving	0	Save video
	0	Save photos and video

4.5 Indicator light instructions

Indicator	Indic	ator status	la stancetica e	Charles
light	Photo indicator	Battery indicator	Instructions	Status
	Flash once	=	Photograph	
Green light	Keeps flashing	-	Video	Power on
	-	Constant green light	Finished charging	
Red light	-	Battery indicator keeps on	Charging	Power off

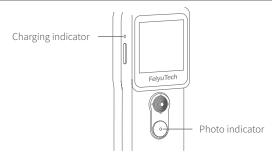


5. Using the Feiyu Cam App

5.1 Connect with Feiyu Pocket 2S via Wi-Fi

Turn on Feiyu Cam App, tap [Feiyu Pocket] option, long press shutter button to turn on Wi-Fi, follow the prompts to connect Feiyu pocket.



5.2 Camera Interface

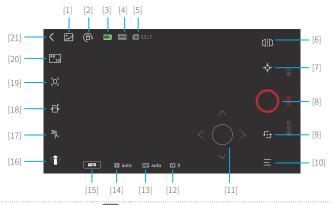

[1] Album	Enter album
[2] Lock	Screen orientation lock
[3] Battery indicator 100%	Show battery level of Feiyu pocket.
[4] File format JPEG	Prompt the file format of the saved file.

[5] Storage spaces	SD	Display remaining storage spaces.
[6] Mirror		Images from the camera are mirrored after turn it on.
[7] Recenter	→ \ ←	Lens return to center and keep towards front or back as before.
[8] Shoot	0	Start recording or take photo.
[9] Camera turn around	<u></u>	Camera horizontally rotate 180° to shoot, which can be used to take selfie
[10] Camera settings	=	Set parameters of current shooting mode, format microSD card, view device information.

Shooting Modes Parameter	Photo	Video	Slow motion	Timelapse	Panoramic photo	Hyperlapse
Mounting/ Handheld mode	√	√	√	√	√	√
Viewing angle	√	√				
Anti-flicker	√	√	√	√	√	√
Grid	√	~	~	√	~	√
Watermark	√	~	~	√		√
Photo aspect ratio	√					
Photo format	√					
Video format		√	~	√		√
Color		√	√	√		√
White balance	√	√	√	√	√	√
Panoramic mosaic					4	

[11] Joystick	<ô>	Long press the circle and turn left and right to control pan axis, turn up and down to control tilt axis.
[12] Exposure compensation	EV	Set or display current exposure compensation.
[13] ISO	ISO	Set or display current ISO.
[14] Shutter speed	S	Set or display current shutter speed.
[15] Auto/manual MUTO M		Switch between auto/ manual mode.
		All follow mode(FPV)
[16] Follow mode		Follow mode
		Pan mode
	<u>°</u>	Mount on car (Mounting)
	° %°	Fast follow (Mounting)
[17] Follow sensitivity	°% °%	Riding (Mounting)
**	%	Fast follow (Handheld)
	Ą	Smooth follow (Handheld)
[18] Smartphone motion sensing mode	0	Users can use smartphone to control pan and tilt axis through motion sensing. *Need smartphone gyroscope sensor support.
[19] AI tracking		Select the object in camera interface to lock it, and camera will auto rotate to follow the object movement.
	4K 30	Will show in video mode to set video resolution, FPS and quality of video.
[20] Parameter settings	(off)	Will show in photo mode to set countdown time of shooting.
	\bigcirc	Will show in timelapse mode to set shooting interval, duration and path.
[21] Return	(Return to the previous menu

6. Maintenance

- (1) Please store the product in the right way to avoid damage.
- (2) Make sure motor spinning is not blocked by external force when the product is power on.
- (3) DO NOT drop or strike the product to avoid damage.
- (4) This product is not waterproof, please do not contact the camera with water or other liquid.
- (5) Please pay attention to dust and sand.
- (6) It is recommended to clean the product surface with a clean, soft dry cloth.

7. Specifications

Product Size	52.1×31.5×29.1mm (Fold state) 95.1×28.6×20.8mm (Working state)
Weight	179g
Material	Aluminum alloy, ABS/PC
Water-proof Grade	No
Battery	Capacity: 875mAh Category of Battery: lithium-ion battery Battery Power: 6.738Wh Voltage: 7.7V Operating Temperature: 0°C ~+40°C
Working Time	180min (Working at 1080 60fps) 160min (Working at 4K 30fps)
Charging Time	1.2h (5V 2A)

Camera	Image Sensor: 1/2.5" CMOS Effective Pixels: 8.51M Lens: FOV: 130° F2.0 Equivalent Focal Length: 12mm IOS Range: 100~3200 Electronic Shutter Speed: 1/8000~16s Max Image Size: 3840×2160 Photo Mode: Photo / Panorama / Static Timelapse/ Motion Timelapse Video Resolution: 4K 3840×2160 60/50/48/30/25/24 2.7K 2720×1520 60/50/48/30/25/24 1080P 1920×1080 120/60/50/48/30/25/24 Video Mode: Video / Timelapse / Slow Motion Max Video Bit Rate: 4K@ 60fps, Max. Bit rate is 120Mbps Supported File Formats: FAT32 / exFAT Photo Formats: JPG / JPG+DNG Video Formats: MOV, MP4 Supported SD Cards: MmicroSD, Max Capacity: 512G (U3 and higher speed microSD Card is required) Audio Output: 48KHz / AAC
Screen	1.3 inches/IPS/240 \times 240
Processor	V39M
Wi-Fi	2.4GHz, bandwidth: 20MHz
Max. Speed	180°/S
 Controllable Range	Controllable Tilt Range: - 95° ~ + 50° Controllable Roll Range: + 45° ~ - 45° Controllable Pan Range: - 220° ~ + 40°
Angular Vibration Range	±0.005°

Notice

- 1. Make sure motor spinning is not blocked by external force when the product is power on.
- 2. The product DO NOT contact water or other liquid if the product is not mark waterproof or splash-proof. Waterproof and splash-proof product DO NOT contact sea water or other corrosive liquid.
- 3. DO NOT disassembly the product except marked detachable. It need send to FeiyuTech after-sales or authorized service center to fix it if you accidently disassembly and cause abnormal work. The relevant costs are borne by user.
- 4. Prolonged continuous operation may cause the product surface temperature to rise, please operate carefully.
- 5. DO NOT drop or strike the product. If the product is abnormal, contact Feiyu After-sales support.

Storage and Maintenance

- 1. Keep the product out of the reach of children and pets.
- 2. DO NOT leave the product near heat sources such as a furnace or heater. DO NOT leave the product inside of a vehicle on hot days.
- 3. Please storage the product in dry environment.
- 4. DO NOT overcharge or overuse the battery, otherwise it will cause damage to the battery core. If does not use the product for a long time, please charge it at least once within one month.
- 5. Never use the product when the temperature is too high or too low.

Find More Features









Facebook

Youtube

Twitter

Instagram



This document is subject to change without notice.
If you have any questions about this document, please contact us by the following ways.

Manufactured by: Guilin Feiyu Technology Incorporated Company

Website: www.feiyu-tech.com Tel: +86 773-2320865

E-mail: support@feiyu-tech.cor