




Feiyu Pocket 2

Stabilized Camera

Instructions

V1.0.2

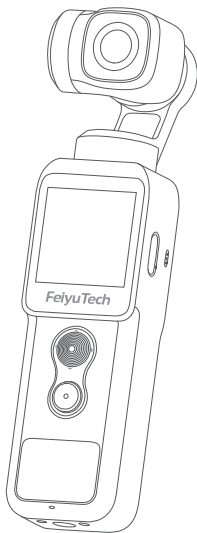

Catalogue

1. Overview	1
2. List	2
3. Start to Use	2
3.1 Charging	2
3.2 Insert MicroSD card	3
4. Operation	3
4.1 Power Button	3
4.2 Joystick/Function Button	3
4.3 Shutter Button	3
4.4 Touch Screen	4
4.5 Indicator light instructions	8
5. Using the Feiyu Cam App	9
5.1 Connect with Feiyu Pocket 2 via Wi-Fi	9
5.2 Camera Interface	10
6. Maintenance	12
7. Specifications	12

Suggestion

This product includes below information, please read the information before using it.

1. Quick start guide
2. Online instruction
3. Tutorial

Tutorial

* The tutorial videos can be watched at FeiyuTech official website or scan the QR code.
<https://www.feiyu-tech.com/play/>



Download APP

Connect with Feiyu Cam App to achieve more functions.
Scan the QR code to download the app, or search for "Feiyu Cam" in the App Store or Google Play.

* Requires iOS 9.0 or above, Android 6.0 or above.



iOS




Android

1. Overview

Feiyu Pocket 2 is a portable and controllable HD camera which easy to carry. Five-way joystick makes operation much easier. It also come with built-in speaker and 3-axis anti-shake gimbal. Support motion sensing, remote control via APP, you can select photo/video/timelapse modes and remote control camera as your wish.

Gimbal Camera:

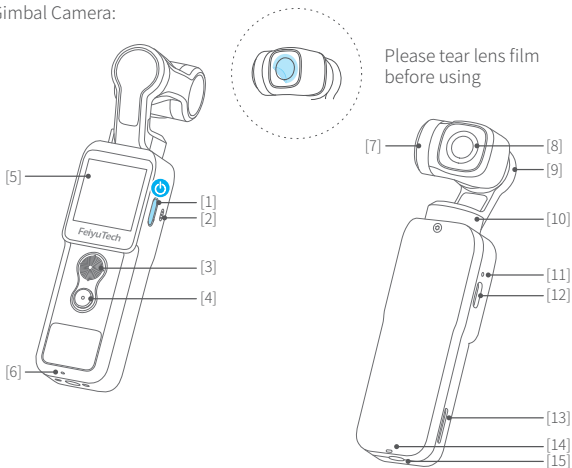

- [1] Power Button
- [2] Loudspeaker
- [3] Joystick/Function Button
- [4] Shutter Button/Photo Indicator
- [5] Touch Screen
- [6] Microphone

- [9] Roll Axis
- [10] Pan Axis
- [11] Charging indicator
- [12] USB-C Charging Port
- [13] MicroSD card slot
- [14] Wrist strap hole
- [15] Magnetic base with 1/4 inch screw hole

2. List



①



②



③



④



⑤

① Feiyu Pocket 2×1

② Protective cover×1

③ USB-C cable×1

④ Wrist strap×1

⑤ Manual×1

3. Start to Use





(1) Please fully charge the battery before powering on the product for the first time.


(2) When not in use, power off the product.

3.1 Charging

Connect USB-C cable with charging port to charge.


We recommend that you charge your camera at least once a month.

Charging status	While working (screen status)	While off (indicator status)
Charging	 Display	Red light is on
Complete	 Disappear	Green light is on

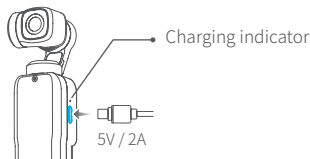

3.2 Insert MicroSD card

An UHS-I Speed Grade 3 (U3) rating microSD card (equipped by user) is required. Please format the MicroSD card with Feiyu Pocket 2 when insert it at the first time.

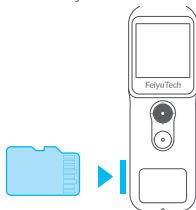


4. Operation

4.1 Power Button

Long press for 1s: Power ON/ OFF

Single tap:

- (1) Switch among video/ photo mode/ recently used function
- (2) Return to the previous menu

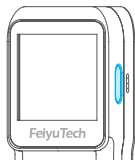


4.2 Joystick/Function Button

Push: Control the movement of the tilt and pan axes

Double tap: Recenter

Triple tap: Enter / Exit selfie mode


Press and hold: Enter lock mode

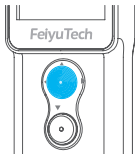

4.3 Shutter Button

Single tap: Take photo / video / return to the home page

Long press for 3s: Turn on / off Wi-Fi

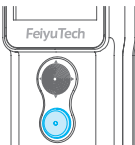



4.4 Touch Screen

Swipe to Left: Switch shooting modes

Swipe to right: Enter album

Swipe upward: Gimbal control

Swipe downward: Enter setting

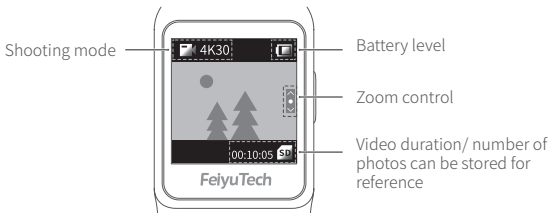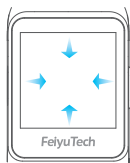

Swipe from right to left:

- Switch among different shooting modes and set corresponding mode parameters.
- Swipe up or down to switch among photo/ video/ slow-motion/ timelapse/ panorama mode, tap to enter corresponding mode setting.



Photograph

Users can set aspect ratio of photos and countdown to take photo.

Optional aspect ratio: 4:3 / 16:9

Optional countdown time: Off/ 3s/ 5s/ 7



Video

Users can set video resolution and FPS.

Optional video resolution: 4K / 2.7K / 1080P / 16:9

Optional FPS: 24 / 25 / 30 / 48 / 50 / 60 / 120



Slow motion

Users can shoot slow-motion video.

Optional ratio of slow-motion recording: 4K 2X/1080P 4X/720P 8P



Time-lapse
photography

Users can choose static, motion timelapse, or hyperlapse and enter shooting interface after chose, and set shooting interval and duration by tap the bottom of the interface. Optional video resolution: 4K / 2.7K / 1080P

When you choose motion timelapse, tap to set start position , tap again to set end position , tap to delete position.



Panorama
mode

Users can choose different panorama modes: $2 \times 2 / 3 \times 3 / 180^\circ$
 2×2 : two images above and two below combine to one picture
 3×3 : 3 images above in every three layers combine to one picture
 180° : 3 lateral images combine to one picture



Swipe from left to right

- Enter the album (Swipe down to exit)
- Swipe left/right to view the previous/next item. Swiping right on the most recent item will exit the album.



Play

Tap to play the current video.



Favorite

Photos and videos which are marked as like, can be viewed in album [Favorite] after connected Feiyu Cam App.
Tap to unmark.



Haven't been marked
as favorite yet

Tap to mark it as favorite.



Delete

Delete the current picture or video.



Swipe up:

- Enter gimbal control interface.
- Users can recenter gimbal / switch to selfie mode / modify follow sensitivity / switch working modes.

(1) Gimbal follow mode setting



Tap to recentre, lens return to center and keep towards front or back as before.



Follow mode



All follow mode(FPV)



Pan mode

(2) Selfie mode



Camera horizontally rotate 180° to shoot, which can be used to take selfie.



Swipe down:

- Enter setting interface, swipe up to return the previous menu.
- Swipe to left / right to switch among different settings.

(1) System



Swipe to left / right to get move settings.



Display battery level



Turn on/off camera Wi-Fi



Anti-flicker setting



















Key tone on /off



Display remaining storage spaces, tap to show format option.



Auto power off setting

		Enter calibration. When camera is not level, users can use it to fix. Place the product on a stable horizontal plane such as table, and follow the prompts on the screen to operation.
(1) System		Average metering
		Spot metering is available
		Move settings, users can switch languages / reset system parameters / view device information (firmware version, SN code, etc.)/motor calibration
(2) Viewing angle		Super wide angle
		Wide viewing angle
		Narrow viewing angle
(3) Face tracking		Turn on/off face tracking(available in photo, video and slow motion modes)
(4) Beauty		Open beauty
		Close beauty (available in photo modes)
(5) Image quality		Super high quality
		High quality (available in video and slow motion modes)
(6) Display		Full screen display
		Normal display
(7) Professional/ Normal mode		Professional Mode
		Normal mode After switch to professional mode, users can tap PRO icon to set the related parameters.






Shooting mode	PRO mode				
Settings	Image Format	White balance	Exposure	Color	Volume
Photograph	✓	✓	✓		
Video		✓	✓	✓	✓
Slow motion		✓	✓	✓	
Time-lapse photography		✓	✓	✓	
Panoramic photo	✓	✓	✓		

Image Format: Select save format (JPG or J+R) for photo



Exposure: Set ISO, shutter speed or exposure compensation


Color: Switch between normal color and Fy-log color (Which is advantageous for post-production color modulation)

Volume: Set video volume

(8) Brightness		High brightness
		Normal brightness
		Low brightness
(9) Saving		Save video
		Save photos and video

4.5 Indicator light instructions


Indicator light	Indicator status		Instructions	Status
	Photo indicator	Battery indicator		
 Green light	Flash once	-	Photograph	Power on
	Keeps flashing	-	Video	
	-	Constant green light	Finished charging	
 Red light	-	Battery indicator keeps on	Charging	Power off

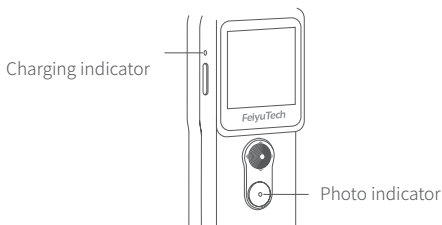


5. Using the Feiyu Cam App





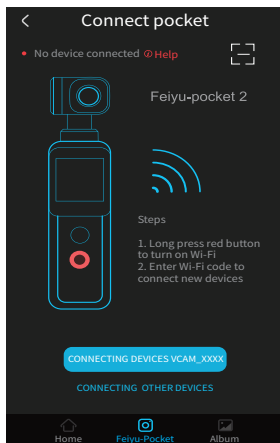

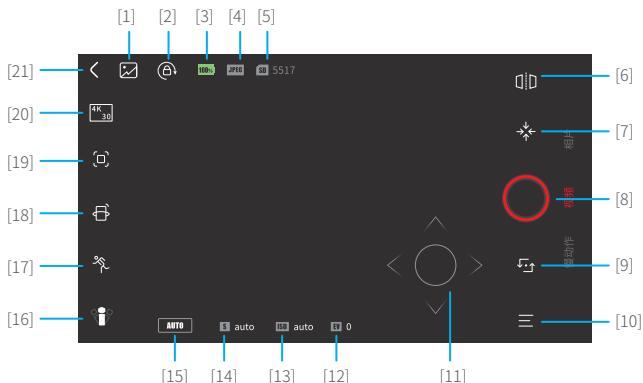


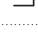
5.1 Connect with Feiyu Pocket 2 via Wi-Fi

Turn on Feiyu Cam App, tap [Feiyu Pocket] option, long press shutter button to turn on Wi-Fi, follow the prompts to connect Feiyu pocket.



5.2 Camera Interface



[1] Album		Enter album
[2] Lock		Screen orientation lock
[3] Battery indicator		Show battery level of Feiyu pocket.
[4] File format		Prompt the file format of the saved file.
[5] Storage spaces		Display remaining storage spaces.
[6] Mirror		Images from the camera are mirrored after turn it on.
[7] Recenter		Lens return to center and keep towards front or back as before.
[8] Shoot		Start recording or take photo.
[9] Camera turn around		Camera horizontally rotate 180° to shoot, which can be used to take selfie
[10] Camera settings		Set parameters of current shooting mode, format microSD card, view device information.

Parameter \ Modes	Photo-graph	Video	Slow motion	Timelapse	Panoramic photo	Hyperlapse
Mounting/Handheld mode	✓	✓				
Viewing angle	✓	✓	✓	✓	✓	✓
Anti-flicker	✓	✓	✓	✓	✓	✓
Watermark	✓	✓	✓	✓		✓
Proportion	✓					
Photo format	✓					
Video format		✓	✓	✓		✓
Color		✓	✓	✓		✓
White balance	✓	✓	✓	✓	✓	✓
Panoramic mosaic					✓	

[11] Joystick



Long press the circle and turn left and right to control pan axis, turn up and down to control tilt axis.

[12] Exposure compensation



Set or display current exposure compensation.

[13] ISO



Set or display current ISO.

[14] Shutter speed



Set or display current shutter speed.

[15] Auto/manual mode



Switch between auto/ manual mode.

[16] Follow mode



All follow mode (FPV)



Follow mode



Pan mode







[17] Follow sensitivity



Fast follow

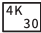


Smooth follow

[18] Smartphone motion sensing mode		Users can use smartphone to control pan and tilt axis through motion sensing. *Need smartphone gyroscope sensor support.
[19] AI tracking		Select the object in camera interface to lock it, and camera will auto rotate to follow the object movement.
[20] Parameter settings		Will show in video mode to set video resolution, FPS and quality of video.
		Will show in photo mode to set countdown time of shooting.
		Will show in timelapse mode to set shooting interval, duration and path.
[21] Return		Return to the previous menu

6. Maintenance

- (1) Please place the product into the protective cover by the right way to avoid damage.
- (2) Make sure motor spinning is not blocked by external force when the product is power on.
- (3) DO NOT drop or strike the product to avoid damage.
- (4) This product is not waterproof, please do not contact the camera with water or other liquid.
- (5) Please pay attention to dust and sand.
- (6) It is recommended to clean the product surface with a clean, soft dry cloth.

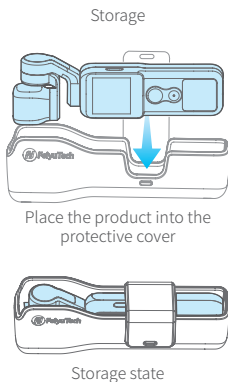

7. Specifications

Product Size	29.8×40.6×124.6mm (Working state)
Weight	127g
Material	Aluminum alloy, ABS/PC

Waterproof	No
Battery	Capacity : 875mAh Category of Battery: lithium-ion battery Battery Power: 6.738Wh Voltage: 7.7V Operating Temperature: 0°C ~+40°C
Working Time	220min (Working at 1080 60fps) 190min (Working at 4K 30fps)
Charging Time	1.2h (5V 2A)
Camera	Image Sensor: 1/2.3" CMOS Effective Pixels: 12M Lens: FOV: 130° F2.0 Equivalent Focal Length: 12mm IOS Range: 100~3200 Electronic Shutter Speed: 1/8000~16s Max Image Size: 3840×2160 Photo Mode: Photo / Panorama / Static Timelapse/ Motion Timelapse Video Resolution: 4K 3840×2160 60/50/48/30/25/24 2.7K 2720×1520 60/50/48/30/25/24 1080P 1920×1080 120/60/50/48/30/25/24 Video Mode: Video / Timelapse / Slow Motion Max Video Bit Rate: 4K@ 60fps, Max. Bit rate is 120Mbps Supported File Formats: FAT32 / exFAT Photo Formats: JPG / JPG+DNG Video Formats: MOV, MP4 Supported SD Cards: MmicroSD, Max Capacity: 512G (U3 and higher speed microSD Card is required) Audio Output: 48KHz / AAC
Screen	1.3 inches/IPS/240×240
Processor	V39M
Wi-Fi	2.4GHz, bandwidth: 20MHz
Max. Speed	180° /S
Controllable Range	Controllable Tilt Range: - 95° ~ + 50° Controllable Roll Range: + 45° ~ - 45° Controllable Pan Range: - 220° ~ + 40°
Angular Vibration Range	±0.005°

Notice

1. Make sure motor spinning is not blocked by external force when the product is power on.
2. The product DO NOT contact water or other liquid if the product is not mark waterproof or splash-proof. Waterproof and splash-proof product DO NOT contact sea water or other corrosive liquid.
3. DO NOT disassembly the product except marked detachable. It need send to FeiyuTech after-sales or authorized service center to fix it if you accidently disassembly and cause abnormal work. The relevant costs are borne by user.
4. Prolonged continuous operation may cause the product surface temperature to rise, please operate carefully.
5. DO NOT drop or strike the product. If the product is abnormal, contact Feiyu After-sales support.

Storage and Maintenance

1. Keep the product out of the reach of children and pets.
2. DO NOT leave the product near heat sources such as a furnace or heater. DO NOT leave the product inside of a vehicle on hot days.
3. Please storage the product in dry environment.
4. DO NOT overcharge or overuse the battery, otherwise it will cause damage to the battery core. If does not use the product for a long time, please charge it at least once within one month.
5. Never use the product when the temperature is too high or too low.

Find More Features



Facebook



Youtube



Instagram



TikTok



This document is subject to change without notice.

If you have any questions about this document, please contact us by the following ways.

Manufactured by: Guilin Feiyu Technology Incorporated Company

Website: www.feiyu-tech.com

Tel: +86 773-2320865

E-mail: support@feiyu-tech.com
