 


技术要求:

尺寸: 五折页,单页76X210MM,共四折五页,总尺寸为380X210MM(虚线为折页处,红色为成品线,不印出)

印刷:双面印刷,封面为首页

尺寸为成品尺寸,产品无污渍,边缘整齐,无偏差,公差≤1MM



Gyroscope calibration is needed when first use or display remote not leveled:

press setting button or push joystick to the right to stop

Pan follow mode

Pan and tilt follow mode

Pan and roll follow mode

Lock and roll follow mode

Pan/ tilt and roll follow mode

Gimbal connected/not connected

Motion sense mode on/off

All follow

Lock mode

Battery level

*HFR, LKR, TFR mode can only be changed on gimba

remote is displaying only for these mode.

APP connection

Screen icon Mode/Status

Push joystick to the right to confirm

calibrating if needed.

LK

*HFR

*TFR


If the remote is connected to a device, Click setting butto

Pop up window will show up when executing certain unction or remote is abnormal:




Knob Sensitivity Adjustment

In setting menu, choose "KnobsFs Set" and use joystick to adjust by pushing left and right.

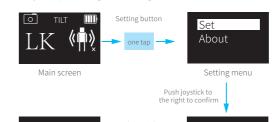

Adjust settings by pushing joystick left/right

ress Mode button to save after you finish setting:

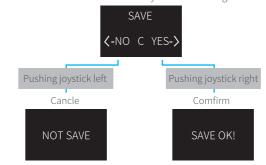

setting ,one tap setting button under setting window to save temporarily and go back to main screen, resets after

Controlled Function

When you need to change the control object of the re--mote control, you can press the knob to operate. Single-pressing the knob can switch the control of the tilt axis/roll axis/pan axis of the gimbal, press and hole the knob to switch the control of the gimbal three-as external accessory device.

*When the remote control object is an external accessory device, the nd the external accessory device is not supported on the remote con




con for controlled function:







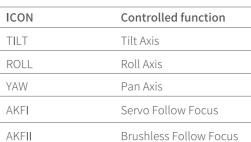

object will not be displayed on the screen. If the subsequent product update adds controllable external accessory device, the actual experie

Switch controlled function to control:

- Use 4-way joysticks and knob to control movements when controlling three axis(TILT/ROLL/YAW)
- When controlling follow focus, distance bar will appear at the hottom(AKFII)







 













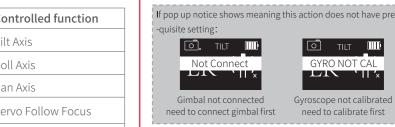

ce will prevail without prior notice.



Motion Sense Mode

Hold trigger button to enter motion sense ode when connected with gimbal,Pan xis and Tilt axis will follow remote





mation, tap setting button to enter se About icon, push right to check info.

Device Information

Gimbal not connected Gyroscope not calibrated

Firmware update

1 Feiyu On App connected, main screen will display 📘 ico

Remote can be updated through Feiyu On App:

2 Remote screen will display download progress:

3 Down success will show when finish downloading:

Now reboot to finish firmware update.

eed to connect gimbal first need to calibrate first



Device Error Information

pop up window will display when encounter error:





When cases from above happens, please contact our support department for repair or exchange.

Accessories Installation

The adaptor included can support 1/4-20 inch screw hole accessories, install guide down below: Tighten the adaptor clock wise at the top of the remo



All screw holes on the remote can be used as a extension port, add any suitable accessories as needed.