


3-Axis Stabilized Handheld Gimbal for Smartphone



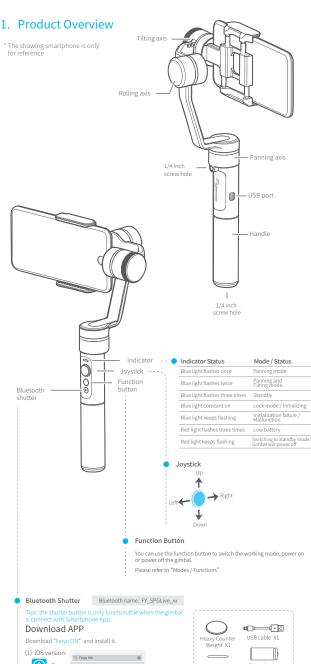

#### 2. User Guide



(1) Please install the smartphone before powering on the gimbal

(2) When not in use, turn off the gimbal and then remove the smartphone

#### Charging

Option 1: Charge with micro USB cable.



Option 2: remove the battery and charge the battery with charger (equipped by user).

#### one 22650 battery into it.

Install the battery Remove the handle and insert



#### Install the smartphone



the quick-release adapter and ensure it is secure.



Phone weight < 165g Such as:iPhone 5 / 5s



180g<Phone weight≤194g Such as:iPhone 6s / 6



Phone weight>194g Such as:iPhone 7/7 Plus / 6 Plus

\*If it is not balanced after you finished above operation instructions, please follow step 4 to balance it again.

#### **Balance Adjustment**



## Power on / off

Power on: Press and hold function button until the green light is on.

Power off: Press and hold function button

until the red light changes from quick flashing to always on



Attention: Turn the gimbal on after the phone has been secured properly.



In case of low battery, the indicator will flash red 3 times every 5 seconds. Please charge SPG Live or replace the battery.

# How to balance adjustment --OFF If there is no tolerance between smartphone and tilting axis, but the smartphone still inclines to the left, please replace the heavy counter weight or add the 1mm counter weight. If there is no tolerance between smartphone and tilting axis, but the smartphone still inclines to the right, please re

#### Connecting App

Start the app on your smartphone, follow the instructions to connect the smartphone with gimbal via Bluetooth.



### Modes / Functions

#### **Working Modes**

#### Panning Mode

Tilting and rolling direction are fixed, and the camera lens moves according to the hand movement of the user


#### Panning and Tilting Mode The rolling direction is fixed,

and the camera lens moves according to the hand movement of the user.

#### Lock Mode

The orientation of the camera is fixed.

#### Vertical Shooting

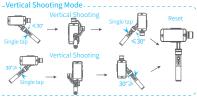

#### Mode / Function Operation Instructions

| Function Button                                      | Function                 | Explanation  |  |
|--|--------------------------|--|--|
| Single tap   | Panning Mode / Lock Mode | Single tap to switch between panning mode and lock mode                      |  |
| Double tap   | Panning and Tilting Mode | Under panning and tilting mode, single tap to switch to lock mode            |  |
| Triple tap   | Rotate 180°in horizontal | Make the lens rotate 180 °   |  |
| Quadruple tap  | Reset                    | Reset the tilting axis of the gimbal to initial orientation and initial mode |  |
| Long press until<br>the red light<br>flashes quickly | Standby                  | Single tap again to awake the gimbal, or triple tap to initialize the gimbal |  |

#### 4. Firmware Upgrade

(1) Option 1: connect the gimbal with PC via micro USB cable, and then upgrade the firmware.

Please visit the official website www.feiyu-tech.com to download the relevant programs for upgrading, including USB driver, firmware upgrade software and product firmware, and install the relevant software, decompress the firmware files for standby application



Option 2: connect the gimbal with Smarphone via bluetooth, and then upgrade the firmware.



#### Gimbal initialization

#### You can initialize your gimbal when:

- (1) when camera is not level
- (2) if not used for a long period of time
- (3) in case of extreme temperature variations







#### 6. Parameters

| Titling Angle | 320°   | Titling Increments | min 2°/s max 75°/s  |  |
|---------------|--|--------------------|---------------------|--|
| Rolling Angle | 320°   | Panning Increments | min 3°/s max 150°/s |  |
| Panning Angle | 360°   | Usage time         | 7 Hours             |  |
| Adaption      | iPhone series / HUAWEI P9 / HUAWEI P9 Plus / Mi 5 / MEIZU MX6 / SAMSUNG NOTE 5 / S7 or other smartphones with the similar dimensions |                    |                     |  |
| Weight        | 355g (not including battery and smartphone)  |                    |                     |  |

#### DISCLAIMER

Prohibit any user for any illegal purpose. Users will be responsible for all behaviors of purchase and use products.

The Company assumes no liability for any risks related to or resulting from the debug and use of this product (including the direct, indirect or third-party losses).

For any unknown sources of using, we will not be at any services.

The updating and changes of product firmware and program may cause changes in function descriptions in this user manual, please read the instructions carefully before upgrading the firmware and use the corresponding user manual.

You can get the latest user manual from the official website: www.feiyu-tech.com

Feiyu Tech reserves the right to amend this manual and the terms and conditions of use the product at any time.

#### **Attention**

- accordance with the diagram
- · Please install the iPhone before powering on the gimbal.
- When the gimbal is not in use or place table, please ensure it is powered off.

#### Create More Possibilities



For more information, please visit our official website: www.feiyu-tech.com

Due to software and hardware improvements, your actual product might differ from the descriptions and pictures in this user manual. You can get the latest user manual from the official website.

